
SPLASH SHIELD REMOVAL/INSTALLATION

id091600808400

Front Splash Shield

1. Remove the screw and fasteners.

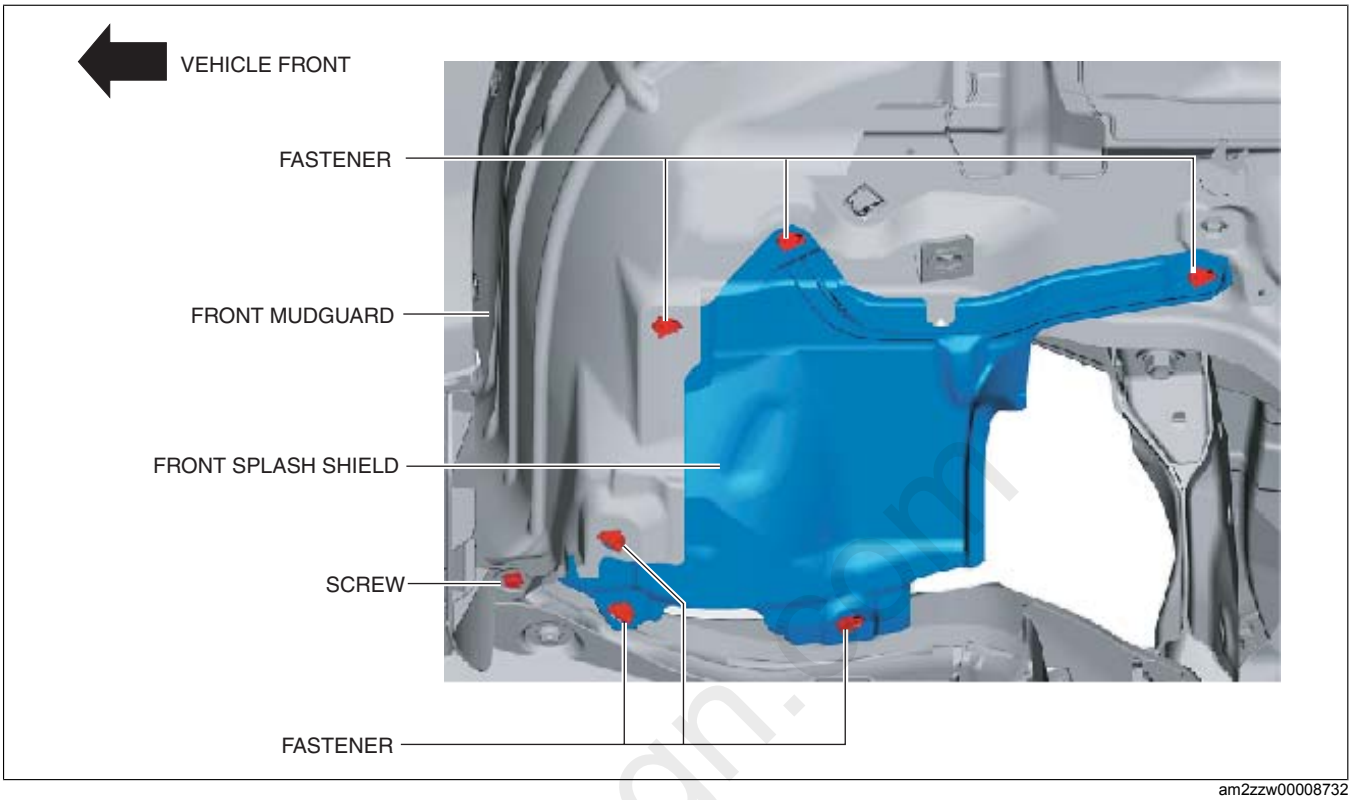

am2zzw00008732

2. Remove the front splash shield.
3. Install in the reverse order of removal.


Rear Splash Shield

LH

1. Remove the screws and fasteners.


cardiagn.com

4SD

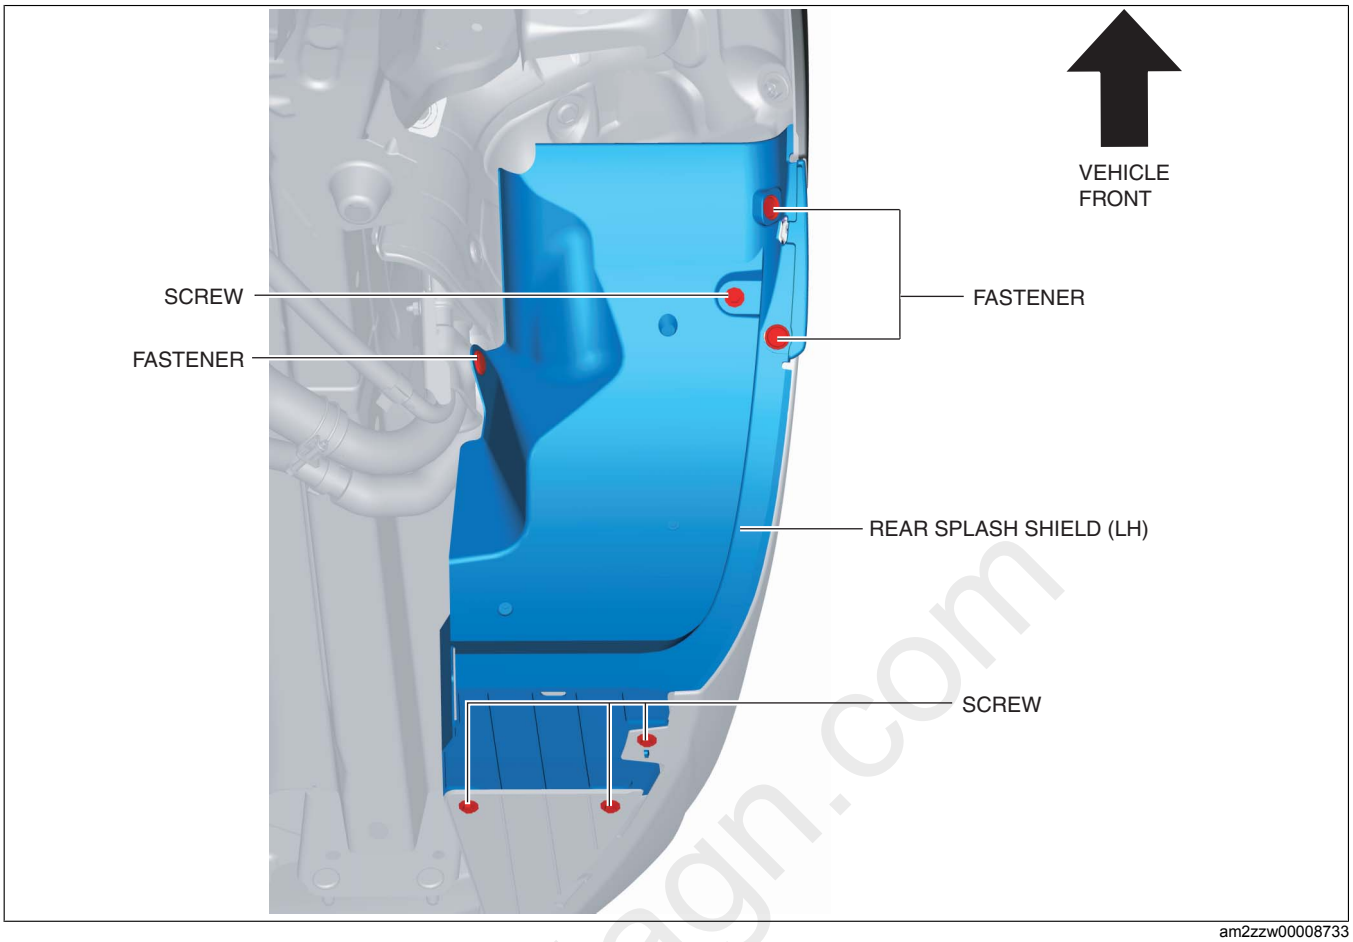

am2zzw00008733

5HB

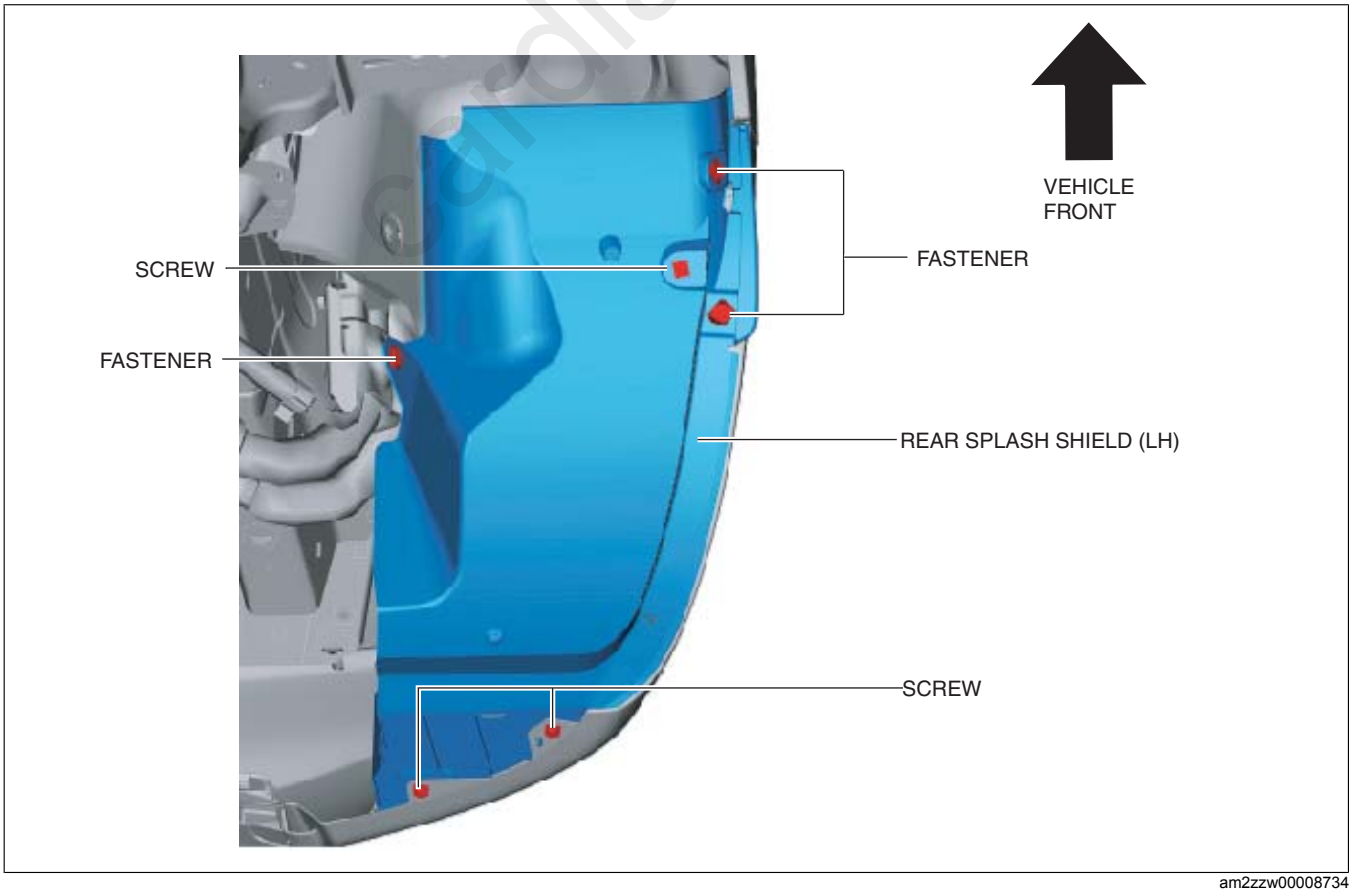

am2zzw00008734


cardiagn.com

2. Remove the rear splash shield (LH).
3. Install in the reverse order of removal.

RH


1. Remove the screws and fasteners.

4SD

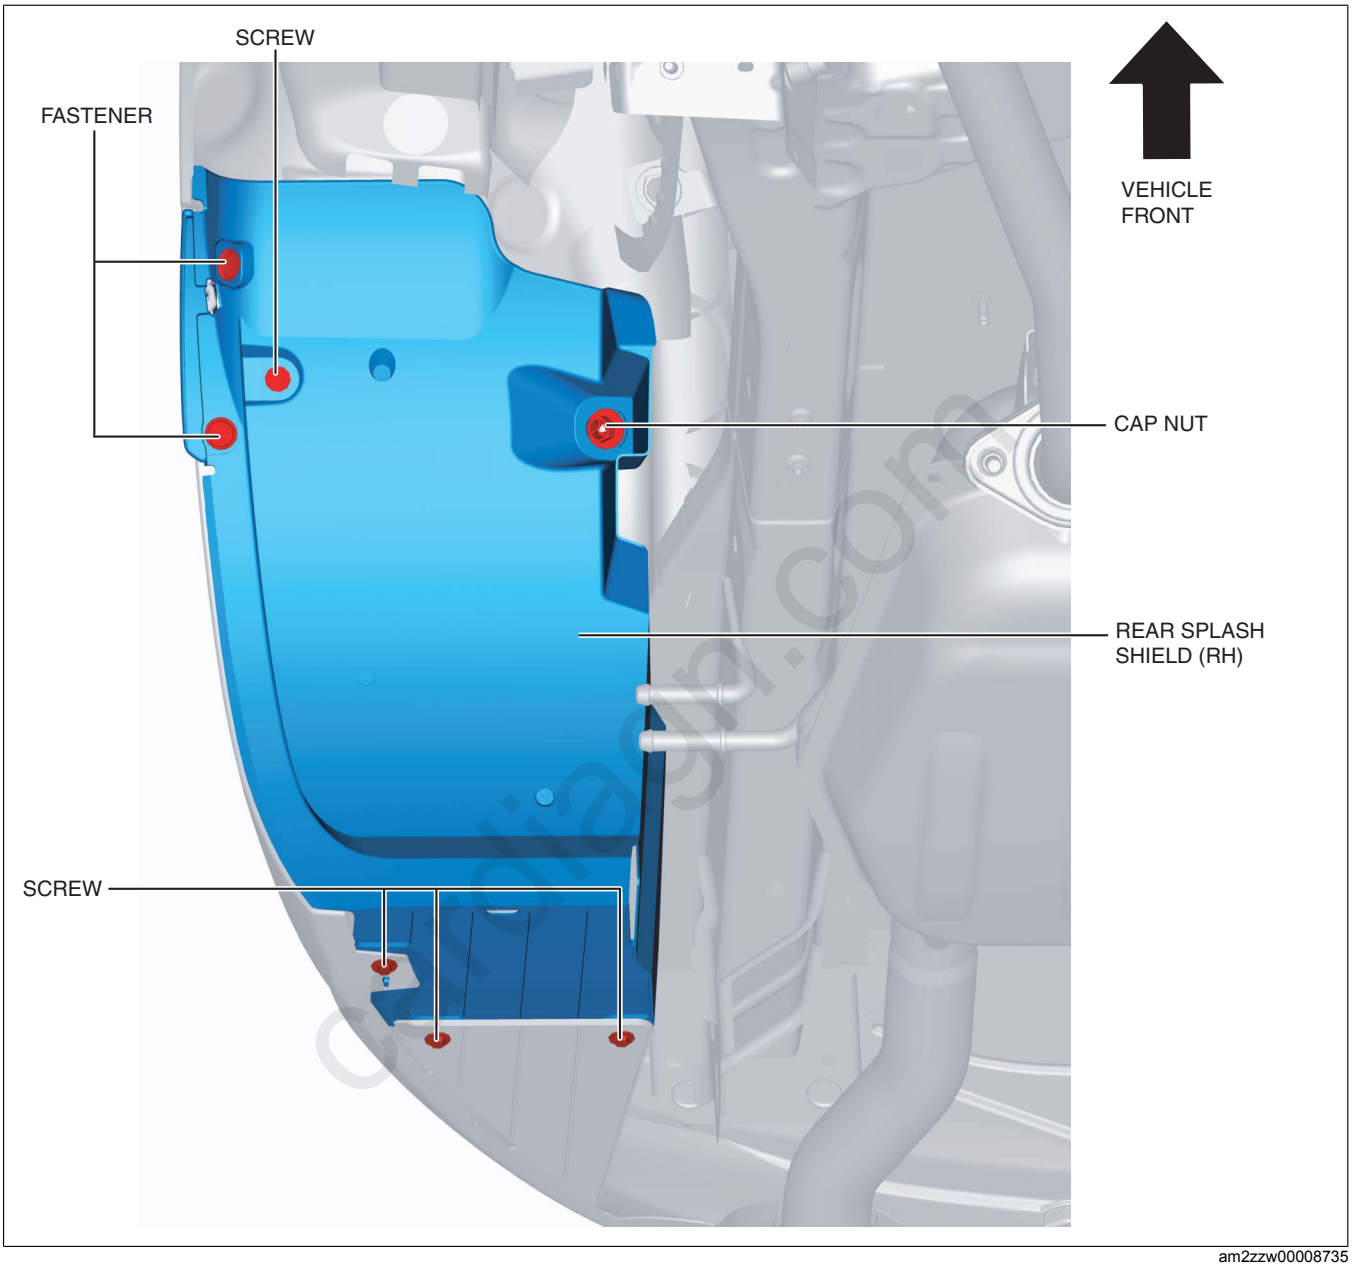

am2zzw00008735

5HB

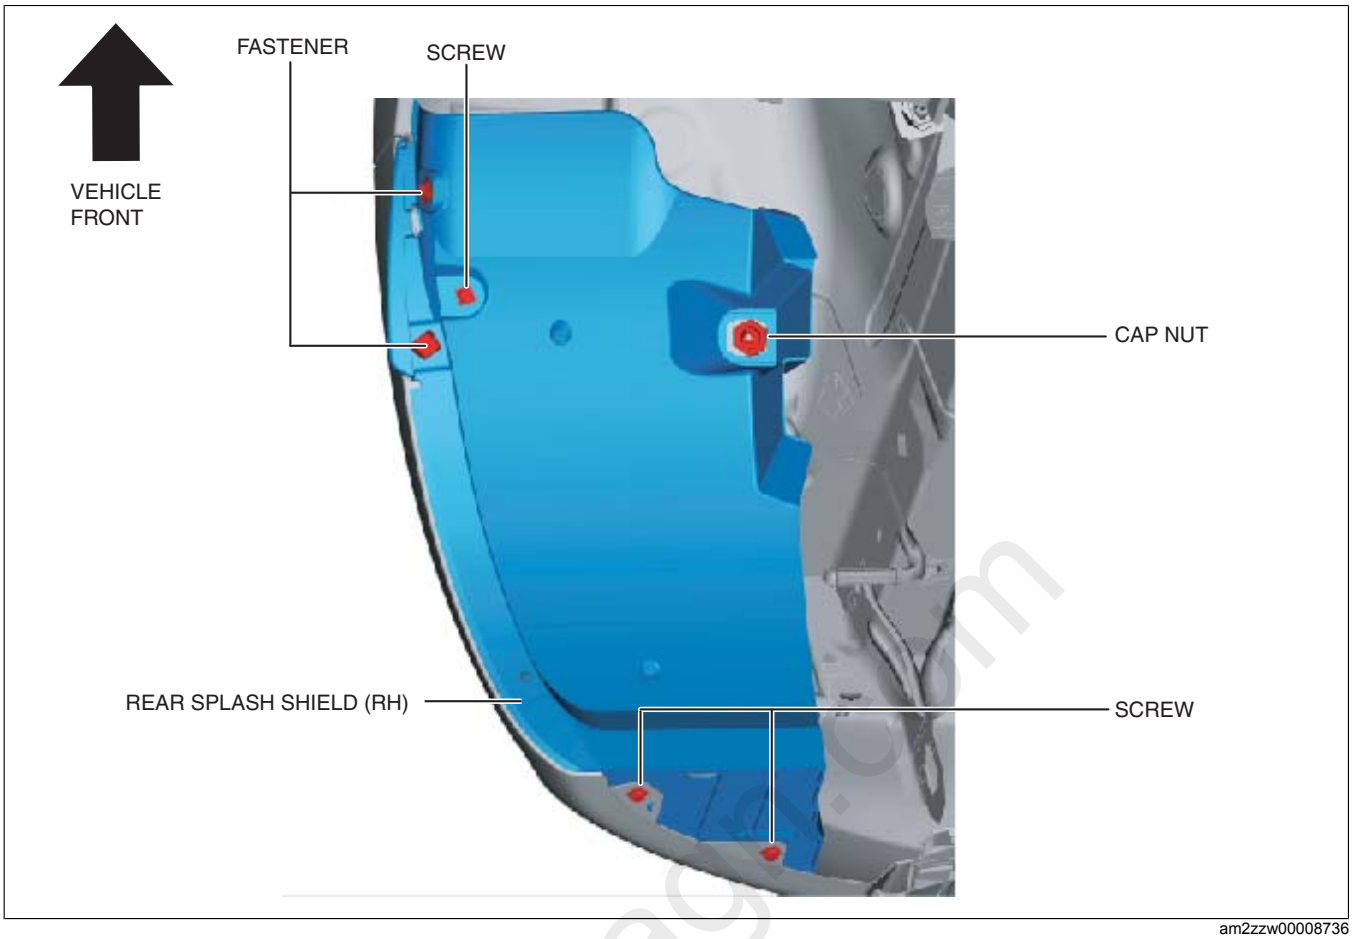

am2zzw00008736

2. Remove the cap nut.
3. Remove the rear splash shield (RH).
4. Install in the reverse order of removal.

cardiagn.com