
TRUNK FLOOR COVER REMOVAL/INSTALLATION

id091600900600


Trunk Floor Cover Type A

1. Remove the fasteners.

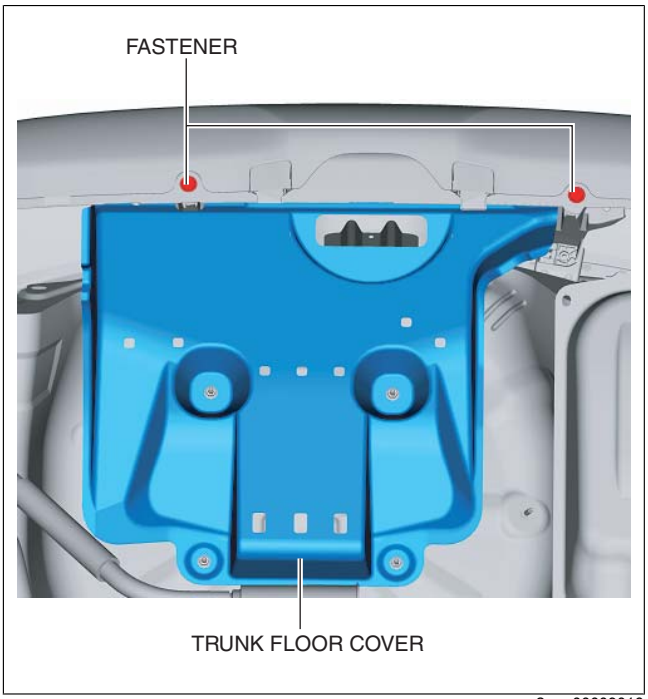


am2zzw00009016

2. Remove the fasteners which can be verified at the position where rear bumper was bent back.

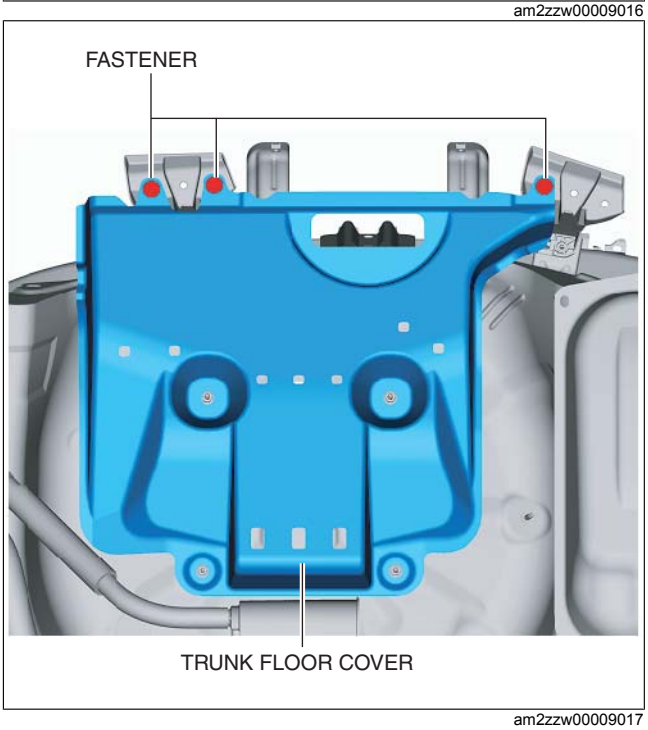

am2zzw00009017


3. Remove the nuts.
4. Remove the trunk floor cover.
5. Install in the reverse order of removal.

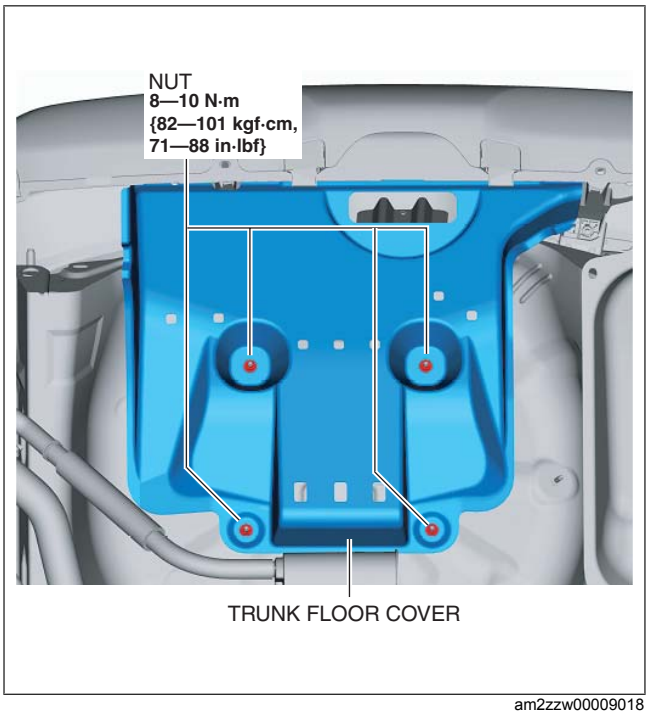

am2zzw00009018


Trunk Floor Cover Type B

1. Remove the fasteners.

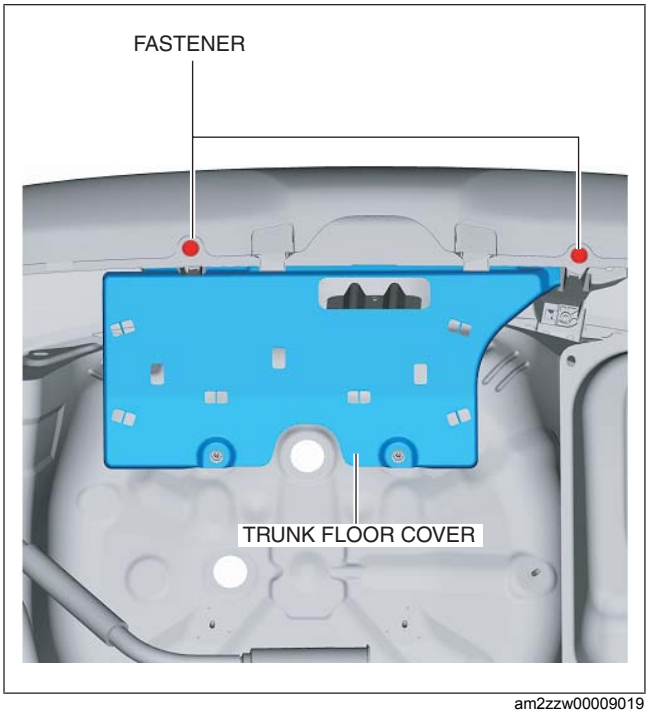


am2zzw00009019

2. Remove the fasteners which can be verified at the position where rear bumper was bent back.

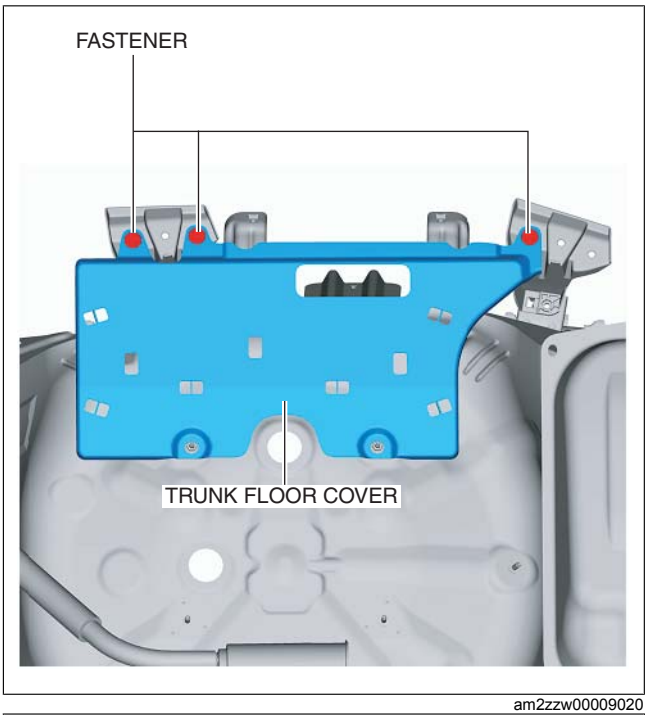

am2zzw00009020

3. Remove the nuts.
4. Remove the trunk floor cover.
5. Install in the reverse order of removal.

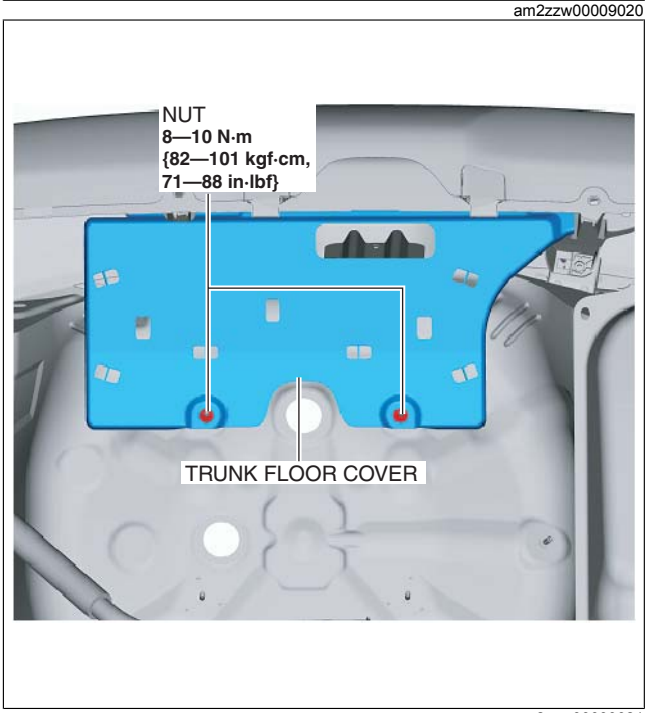

am2zzw00009021