
INTERIOR TRIM LOCATION INDEX

id091700600100

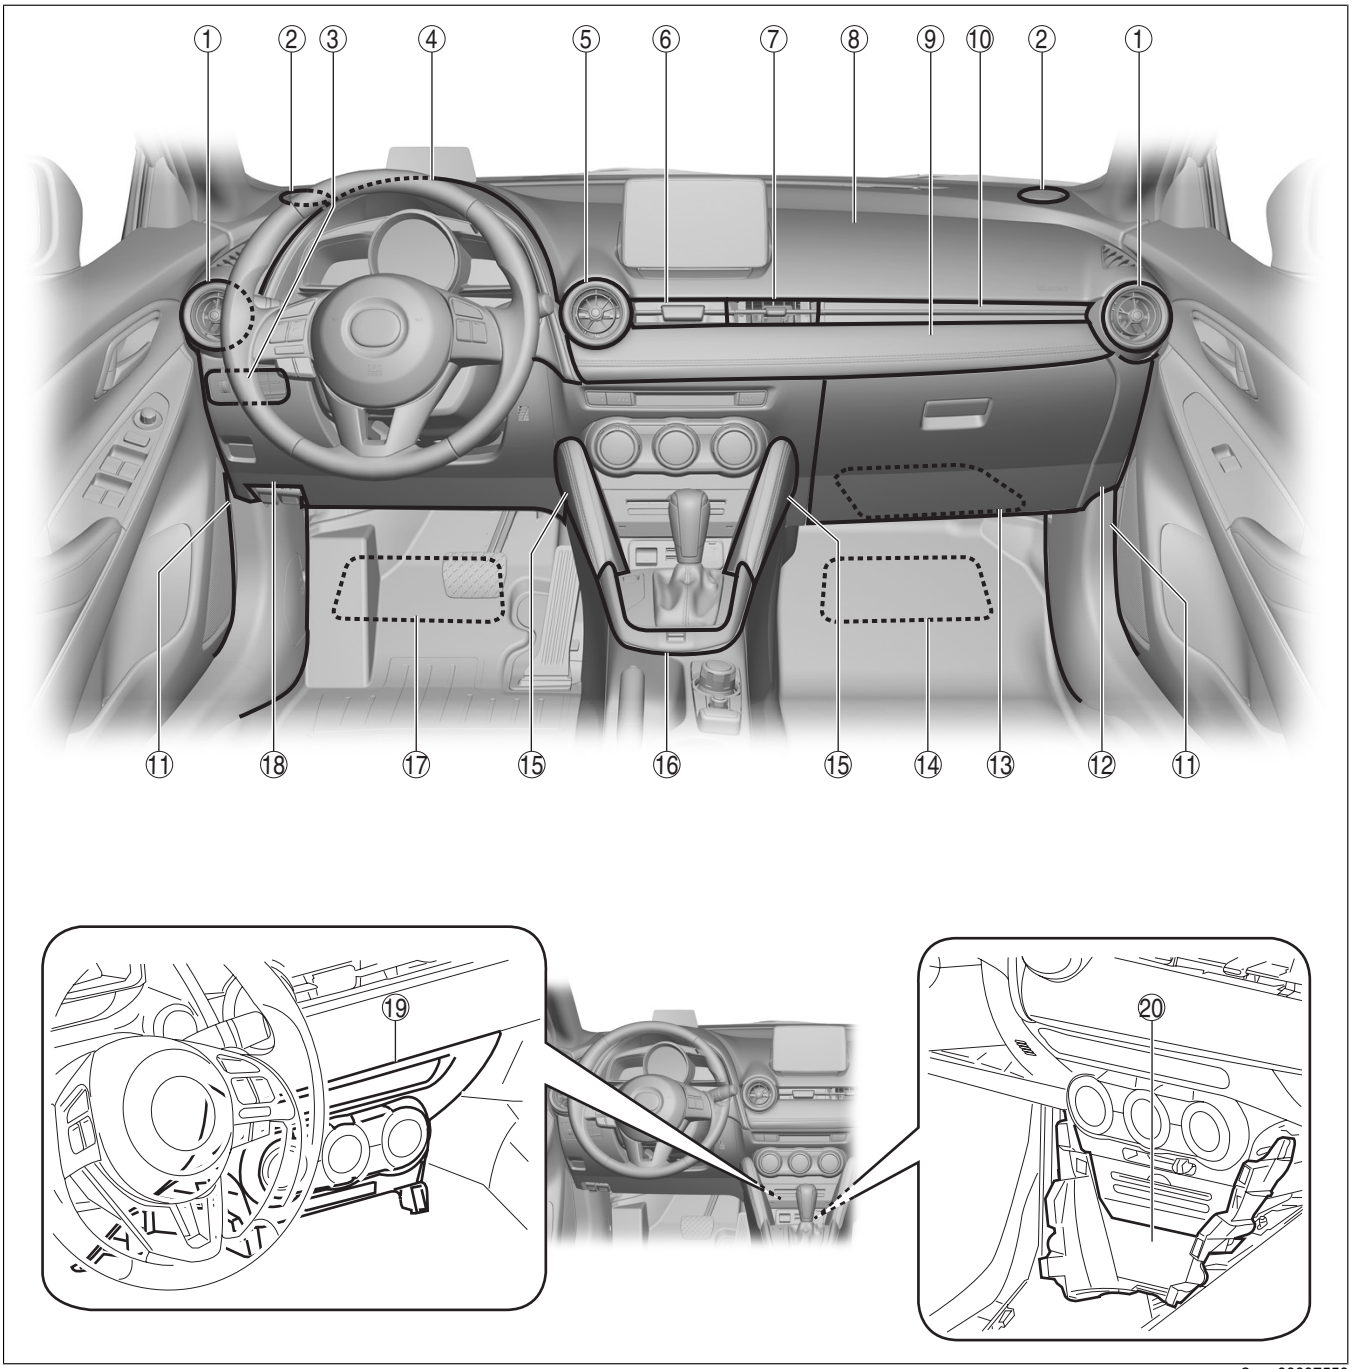


am2zzw00007550

1	Side ventilator grille (See VENTILATOR GRILLE REMOVAL/ INSTALLATION.)
2	Tweeter hole cover (See TWEETER HOLE COVER REMOVAL/ INSTALLATION.)
3	Cluster switch (See CLUSTER SWITCH REMOVAL/ INSTALLATION.)
4	Meter hood (See METER HOOD REMOVAL/INSTALLATION.)
5	Center ventilator grille No.2 (See VENTILATOR GRILLE REMOVAL/ INSTALLATION.)
6	Switch panel (See SWITCH PANEL REMOVAL/INSTALLATION.)
7	Center ventilator grille No.1 (See VENTILATOR GRILLE REMOVAL/ INSTALLATION.)
8	Dashboard (See DASHBOARD REMOVAL.) (See DASHBOARD INSTALLATION.) (See DASHBOARD DISASSEMBLY/ASSEMBLY.)
9	Center panel (See CENTER PANEL REMOVAL/INSTALLATION.)
10	Decoration panel (See DECORATION PANEL REMOVAL/ INSTALLATION.)
11	Front side trim (See FRONT SIDE TRIM REMOVAL/ INSTALLATION.)

12	Passenger-side lower panel (See PASSENGER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
13	Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
14	Foot support (See FOOT SUPPORT REMOVAL/INSTALLATION.)
15	Console side panel (See CONSOLE SIDE PANEL REMOVAL/INSTALLATION.) (See CONSOLE SIDE PANEL DISASSEMBLY/ASSEMBLY.)

16	Shift bezel (See SHIFT BEZEL REMOVAL/INSTALLATION.)
17	Heel cushion (See HEEL CUSHION REMOVAL/INSTALLATION.)
18	Driver-side lower panel (See DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
19	Center lower panel (See CENTER LOWER PANEL REMOVAL/INSTALLATION.)
20	Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)

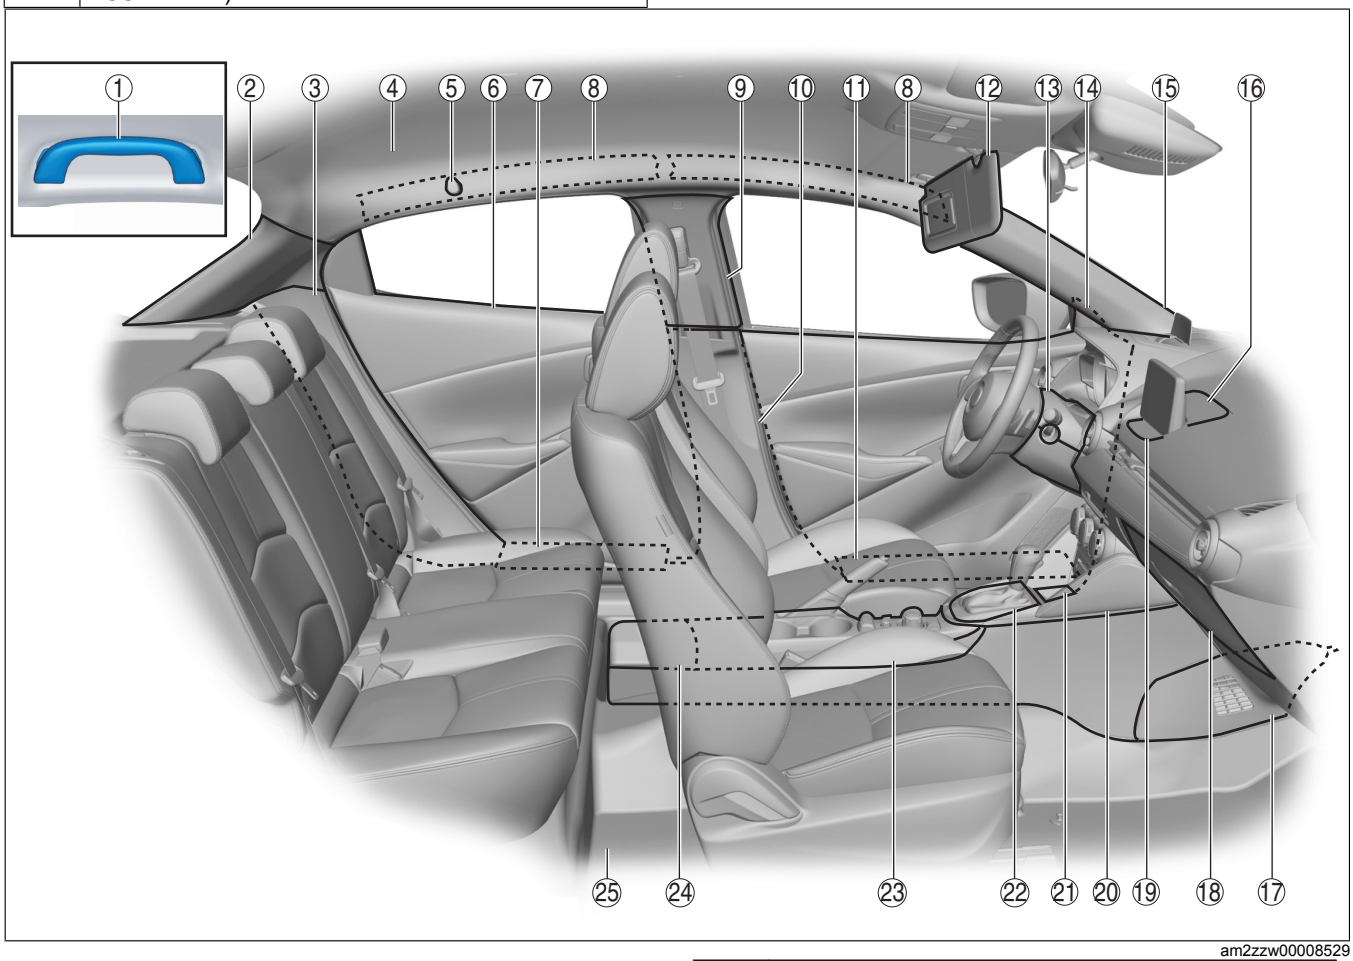


am2zzw00008529

1	Assist handle (See ASSIST HANDLE REMOVAL/INSTALLATION.)
2	C-pillar trim (See C-PILLAR TRIM REMOVAL/INSTALLATION.)
3	Tire house trim (See TIRE HOUSE TRIM REMOVAL/INSTALLATION.)
4	Headliner (See HEADLINER REMOVAL/INSTALLATION.)
5	Coat hook (See HEADLINER REMOVAL/INSTALLATION.)
6	Rear door trim (See REAR DOOR TRIM REMOVAL/INSTALLATION.) (See REAR DOOR TRIM DISASSEMBLY/ASSEMBLY.)

7	Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
8	Shock absorbing pad (See SHOCK ABSORBING PAD REMOVAL/INSTALLATION.)
9	B-pillar upper trim (See B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.)
10	B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
11	Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
12	Sunvisor (See SUNVISOR REMOVAL/INSTALLATION.)

13	Column cover (See COLUMN COVER REMOVAL/ INSTALLATION.)
14	Front door trim (See FRONT DOOR TRIM REMOVAL/ INSTALLATION.) (See FRONT DOOR TRIM DISASSEMBLY/ ASSEMBLY.)
15	A-pillar trim (See A-PILLAR TRIM REMOVAL/INSTALLATION.)
16	Audio panel No.1 (See AUDIO PANEL No.1 REMOVAL/ INSTALLATION.)
17	Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
18	Glove compartment (See GLOVE COMPARTMENT REMOVAL/ INSTALLATION.)
19	Audio panel No.2 (See AUDIO PANEL No.2 REMOVAL/ INSTALLATION.)

20	Rear console (See REAR CONSOLE REMOVAL/ INSTALLATION.)
21	Front console box (See FRONT CONSOLE BOX REMOVAL/ INSTALLATION.)
22	Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
23	Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
24	Center console tray (See CENTER CONSOLE TRAY REMOVAL/ INSTALLATION.)
25	Floor covering (See FLOOR COVERING REMOVAL/ INSTALLATION.)

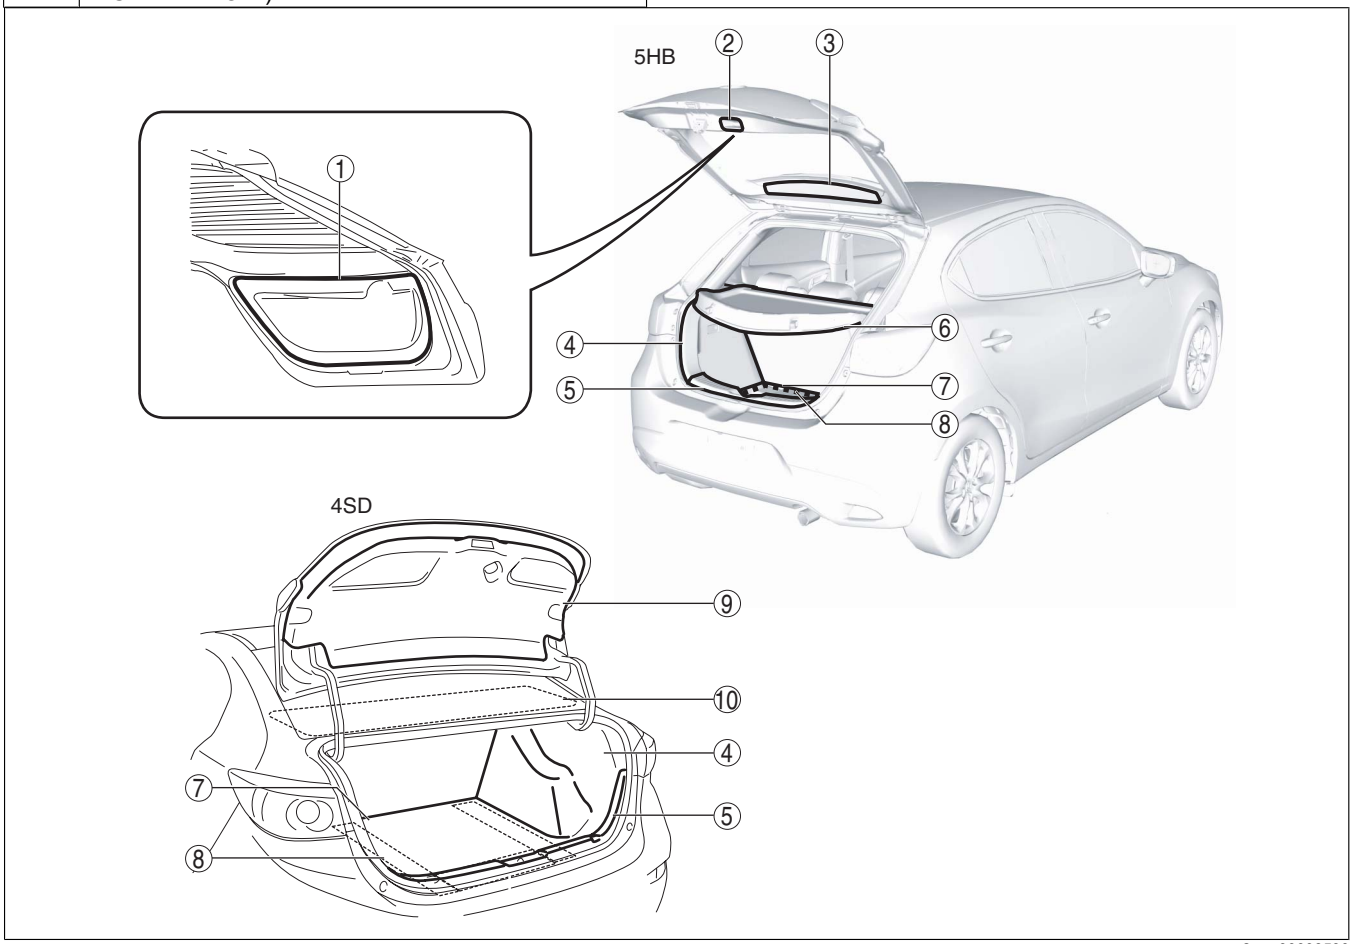

am2zzw00008530

1	Liftgate lower trim (See LIFTGATE LOWER TRIM REMOVAL/ INSTALLATION.)
2	Liftgate recess (See LIFTGATE RECESS REMOVAL/ INSTALLATION.)
3	Liftgate upper trim (See LIFTGATE UPPER TRIM REMOVAL/ INSTALLATION.)

4	Trunk side trim (See TRUNK SIDE TRIM REMOVAL/ INSTALLATION.)
5	Trunk end trim (See TRUNK END TRIM REMOVAL/ INSTALLATION.)
6	Rear package tray (See REAR PACKAGE TRAY REMOVAL/ INSTALLATION.)

7	Trunk covering (See TRUNK COVERING REMOVAL/ INSTALLATION.)
8	Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
9	Trunk lid trim (See TRUNK LID TRIM REMOVAL/ INSTALLATION.)
10	Rear package trim (See REAR PACKAGE TRIM REMOVAL/ INSTALLATION.)