DASHBOARD REMOVAL

id091700600200

Warning

- **Handling the driver-side air bag module improperly can accidentally operate (deploy) the air bag module, which may seriously injure you.Read the SRS air bag system service warnings and cautions before handling the air bag module. (See AIR BAG SYSTEM SERVICE WARNINGS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE WARNINGS [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [STANDARD DEPLOYMENT CONTROL SYSTEM].)**


Note

- When removing the driver-side air bag module, it is necessary to rotate the steering wheel.If the ignition has been switched off with the driver's door closed, the steering wheel will be locked.Perform the procedure from Steps 1-3 so that the steering wheel will not be locked.

1. Switch the ignition ON (engine off or on).
2. Open the driver's door.
3. Switch the ignition off.
4. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
5. Remove the following parts:
   (1) Windshield wiper arm and blade (See WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION.)
   (2) Cowl grille (See COWL GRILLE REMOVAL/INSTALLATION.)
   (3) Windshield wiper motor and link (See WINDSHIELD WIPER MOTOR AND LINK REMOVAL/INSTALLATION.)
   (4) Side cowl grille (See SIDE COWL GRILLE REMOVAL/INSTALLATION.)
   (5) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (6) Front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (7) A-pillar trim (See A-PILLAR TRIM REMOVAL/INSTALLATION.)
   (8) Driver-side air bag module (See DRIVER-SIDE AIR BAG MODULE REMOVAL [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See DRIVER-SIDE AIR BAG MODULE INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See DRIVER-SIDE AIR BAG MODULE REMOVAL [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See DRIVER-SIDE AIR BAG MODULE INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)
   (9) Steering wheel (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
   (10) Upper column cover (See COLUMN COVER REMOVAL/INSTALLATION.)
   (11) Meter hood (See METER HOOD REMOVAL/INSTALLATION.)
   (12) Instrument cluster (See INSTRUMENT CLUSTER REMOVAL/INSTALLATION.)
   (13) Lower column cover (See COLUMN COVER REMOVAL/INSTALLATION.)
   (14) Clock spring (See CLOCK SPRING REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See CLOCK SPRING REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)
   (15) Wiper and washer switch (See WIPER AND WASHER SWITCH REMOVAL/INSTALLATION.)
   (16) Light switch (See LIGHT SWITCH REMOVAL/INSTALLATION.)
   (17) Bonnet release lever (See BONNET RELEASE LEVER AND RELEASE CABLE REMOVAL/INSTALLATION.)
   (18) Fuel-filler lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)
   (19) Driver-side lower panel (See DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
   (20) Joint cover (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
   (21) Steering shaft (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
   (22) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
   (23) Center panel (See CENTER PANEL REMOVAL/INSTALLATION.)
   (24) Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
   (25) Passenger-side lower panel (See PASSENGER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
   (26) Center console tray (See CENTER CONSOLE TRAY REMOVAL/INSTALLATION.)
   (27) Shift bezel (See SHIFT BEZEL REMOVAL/INSTALLATION.)
   (28) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
   (29) Selector lever knob (ATX) (See AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION.)
   (30) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F65M-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F66M-R].)
   (31) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)

(32)Console side panel (See CONSOLE SIDE PANEL REMOVAL/INSTALLATION.)
(33)Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
(34)CD player (with CD player) (See CD PLAYER REMOVAL.) (See CD PLAYER INSTALLATION.)
(35)DVD/CD player (with DVD/CD player) (See DVD/CD PLAYER REMOVAL.) (See DVD/CD PLAYER INSTALLATION.)
(36)Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
(37)Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
(38)Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
(39)Center lower panel (See CENTER LOWER PANEL REMOVAL/INSTALLATION.)
(40)Climate control unit (See CLIMATE CONTROL UNIT REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See CLIMATE CONTROL UNIT REMOVAL/INSTALLATION [MANUAL AIR CONDITIONER].)
(41)Audio panel No.2 (See AUDIO PANEL No.2 REMOVAL/INSTALLATION.)
(42)Audio panel No.1 (See AUDIO PANEL No.1 REMOVAL/INSTALLATION.)
(43)Audio unit (without center display) (See AUDIO UNIT REMOVAL/INSTALLATION.)
(44)Center display (with center display) (See CENTER DISPLAY REMOVAL/INSTALLATION.)
(45)Selector lever component (ATX) (See AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION.)
(46)Shift lever component (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F65M-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F66M-R].)


6. Disconnect the dashboard harness connectors and remove the wiring harness clip.
7. Remove the nuts.

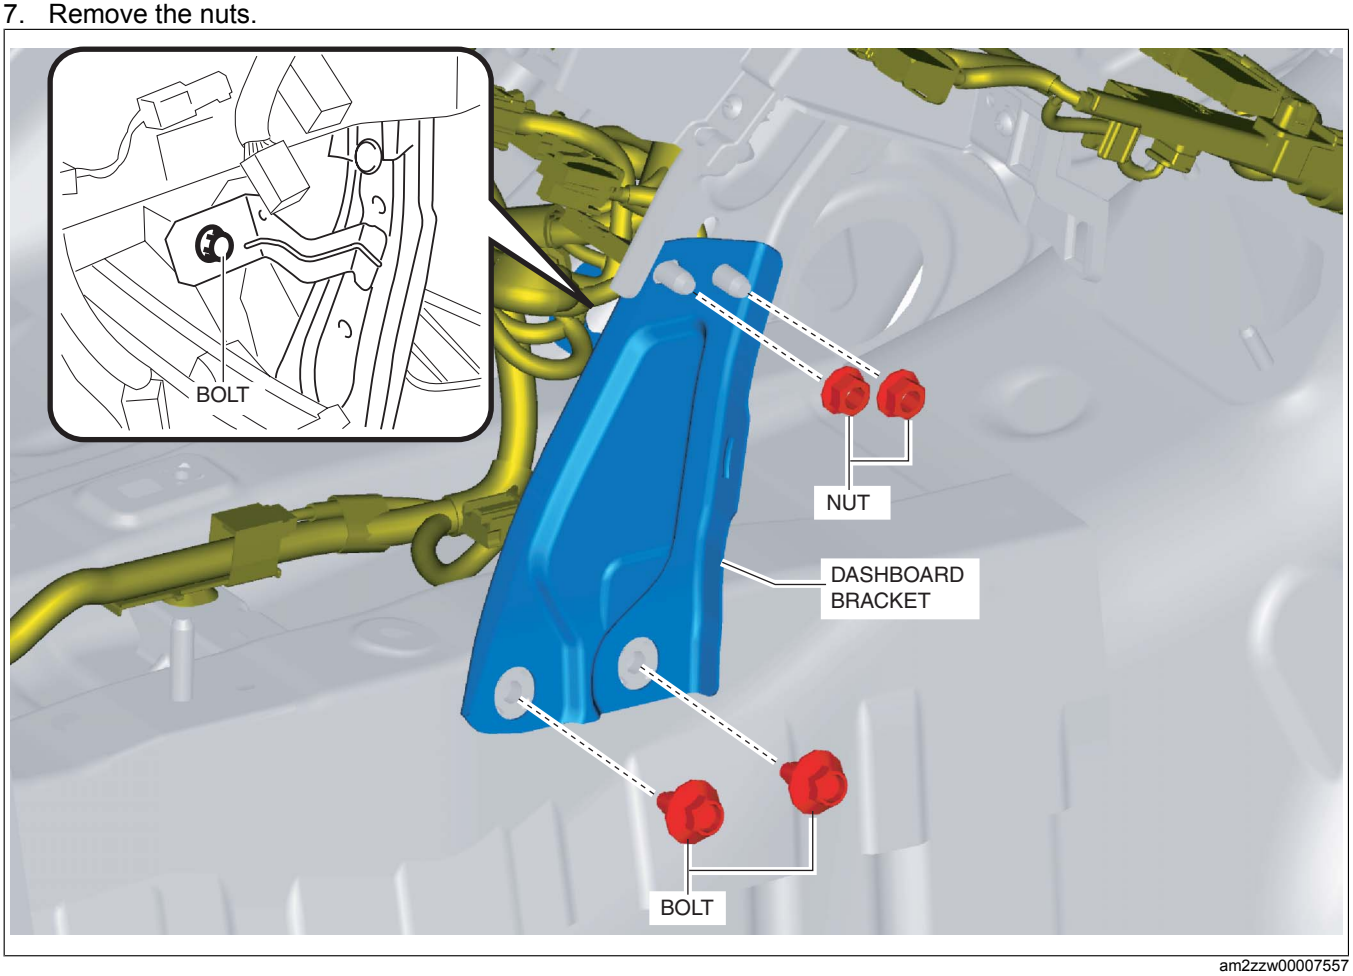

am2zzw00007557


8. Remove the bolts.
9. Remove the dashboard bracket.

10. To prevent damage to the windshield, apply protective tape to the position shown in the figure.

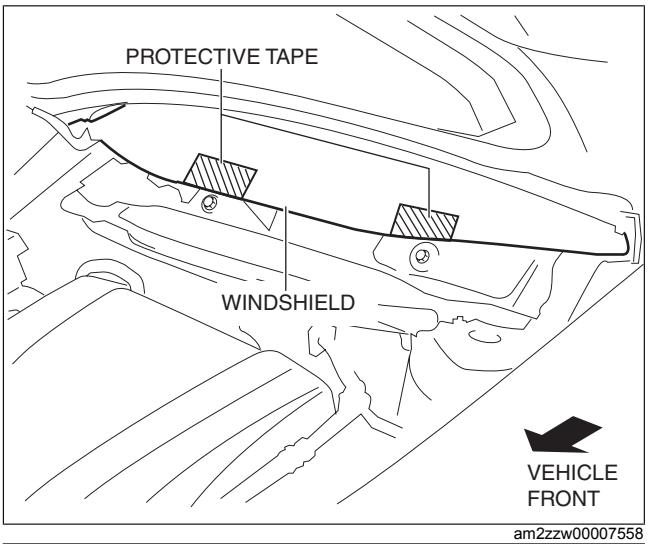


am2zzw00007558

11. Remove bolts.

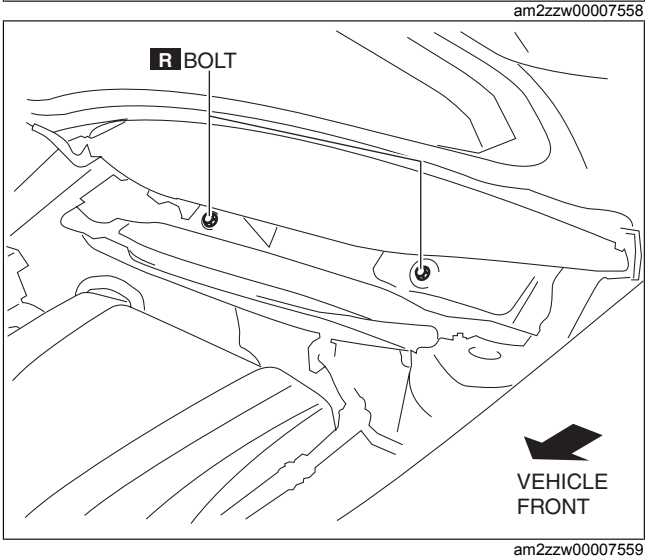


am2zzw00007559

12. Remove the caps and the bolts.

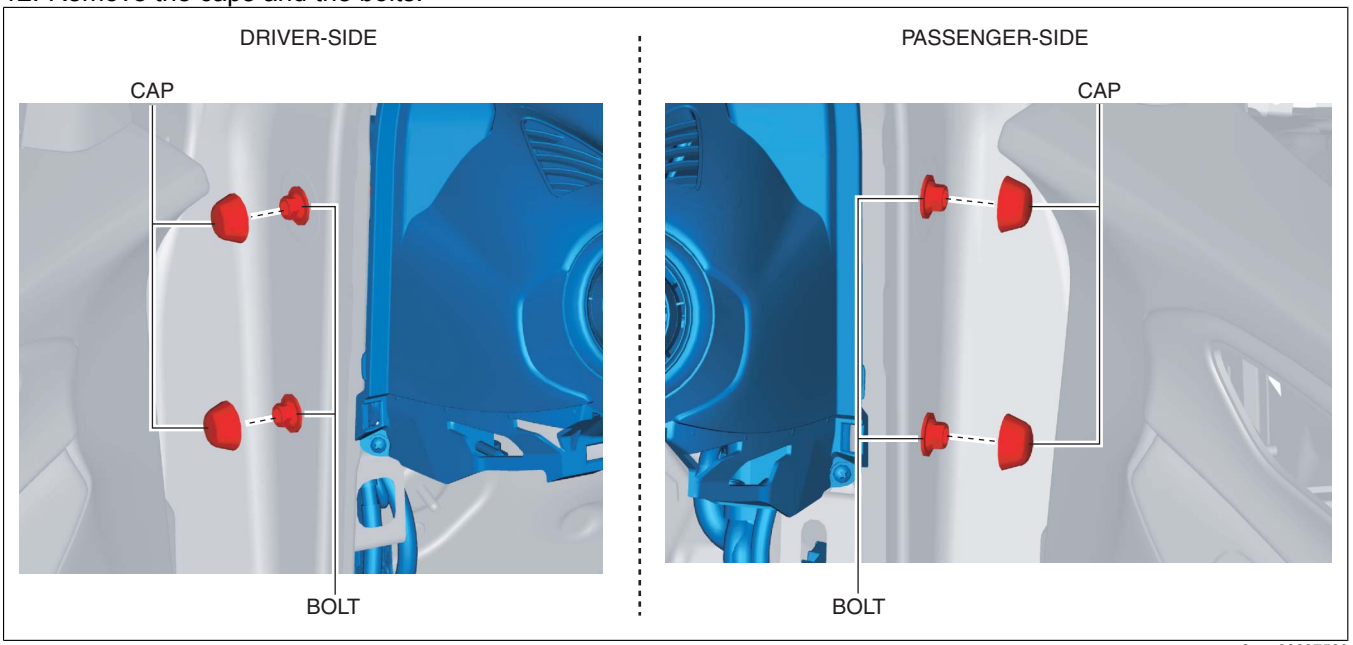


am2zzw00007560

13. Move the dashboard in the direction of the arrow in the order of (1), (2) shown in the figure, then remove the guide pin.

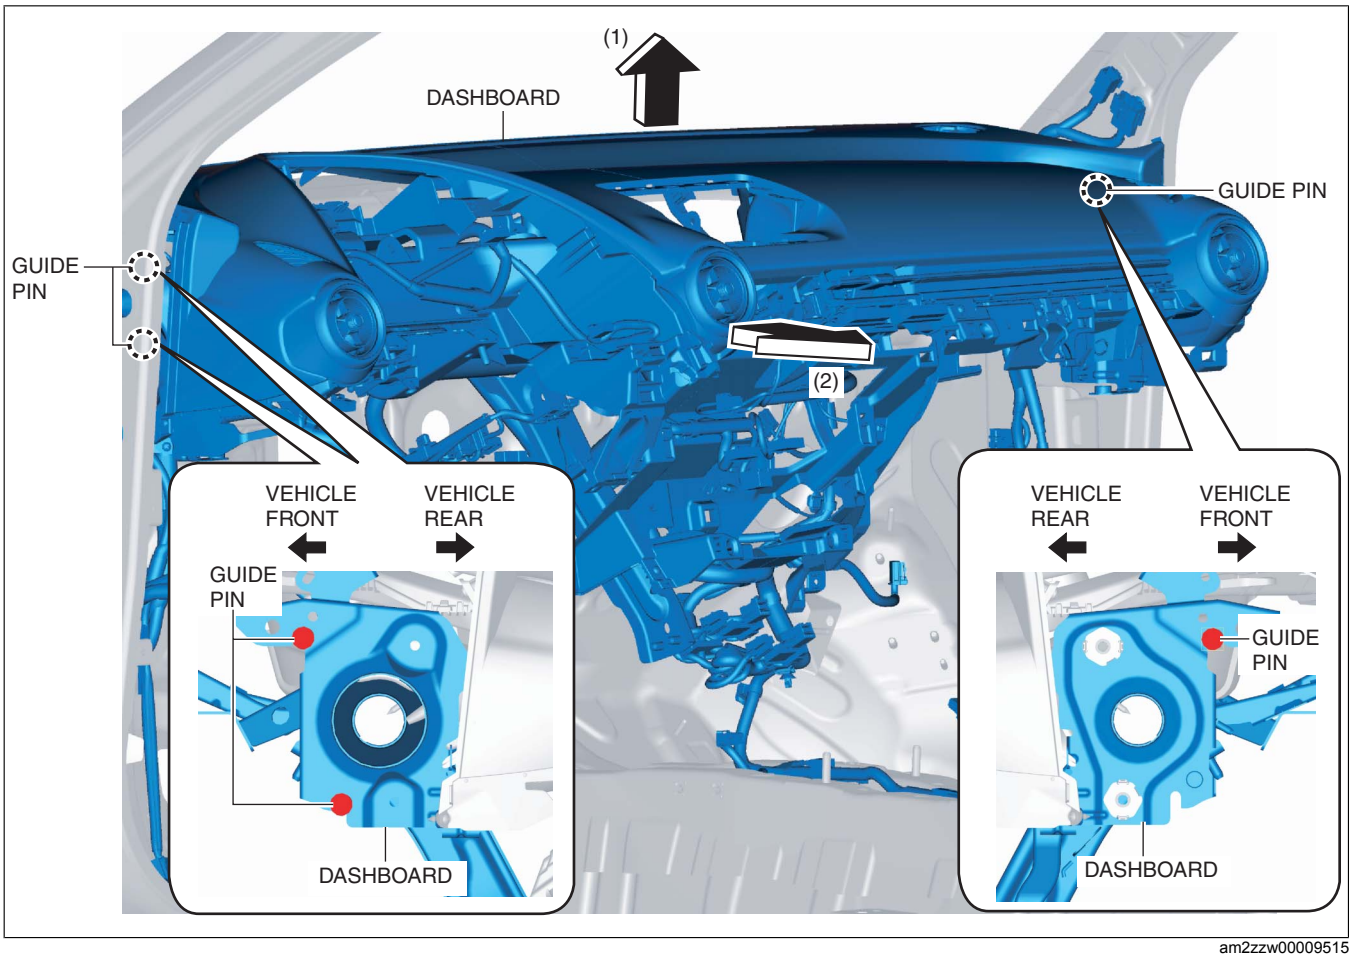

am2zzw00009515

14. While rotating the dashboard in the direction shown in the figure, pull it out toward the vehicle's rear side.

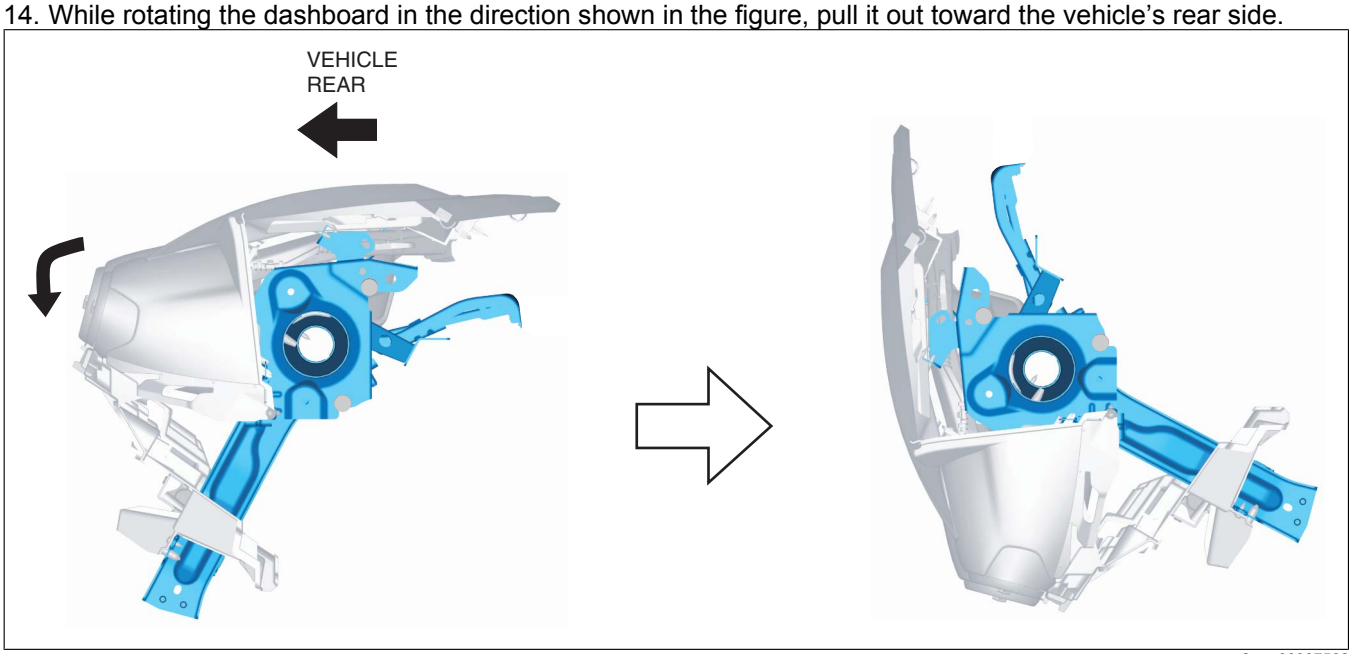

am2zzw00007562

15. Take the dashboard off from the front driver-side door or front passenger-side door opening.