DASHBOARD INSTALLATION

id091700600300


1. Rotate the plate nuts by hand in the direction of the arrow shown in the figure until they are seated.

Caution

- **After removing the dashboard, the plate nuts of the member junctions will have lifted. If the dashboard is removed with the plate nuts lifted, the plate nuts may contact the vehicle body, causing a dent or damage to the coating film, and the dashboard installation will be difficult. Before inserting the dashboard into the cabin, adjust the plate nuts of the member junctions.**
- **If the plate nuts are tightened completely when installing bolts, the plate nuts may not move resulting in damage to the member junction tab and the vehicle body. After seating the plate nuts, verify that they can be rotated by hand.**

Note

- If the plate nuts cannot be rotated by hand, loosen the plate nuts using a hexagonal wrench.

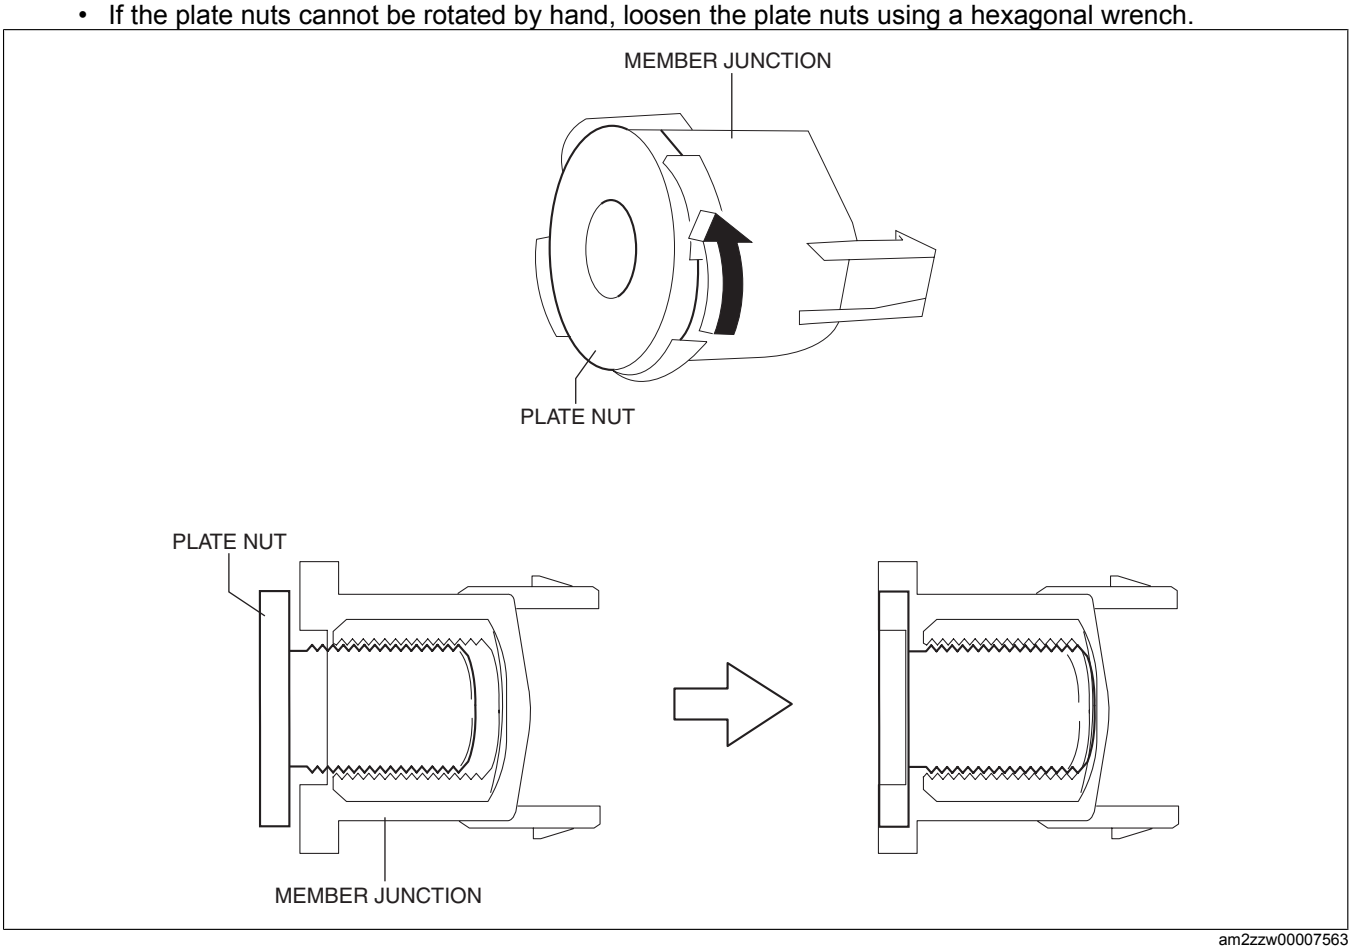


am2zzw00007563

2. Verify that the member junction tabs are engaged to the dashboard.

Caution

- **If the member junction tabs are disengaged from the dashboard when inserting the dashboard into the cabin, the vehicle body could be damaged.Before inserting the dashboard into the cabin, verify that the member junction tabs are engaged with the dashboard.**

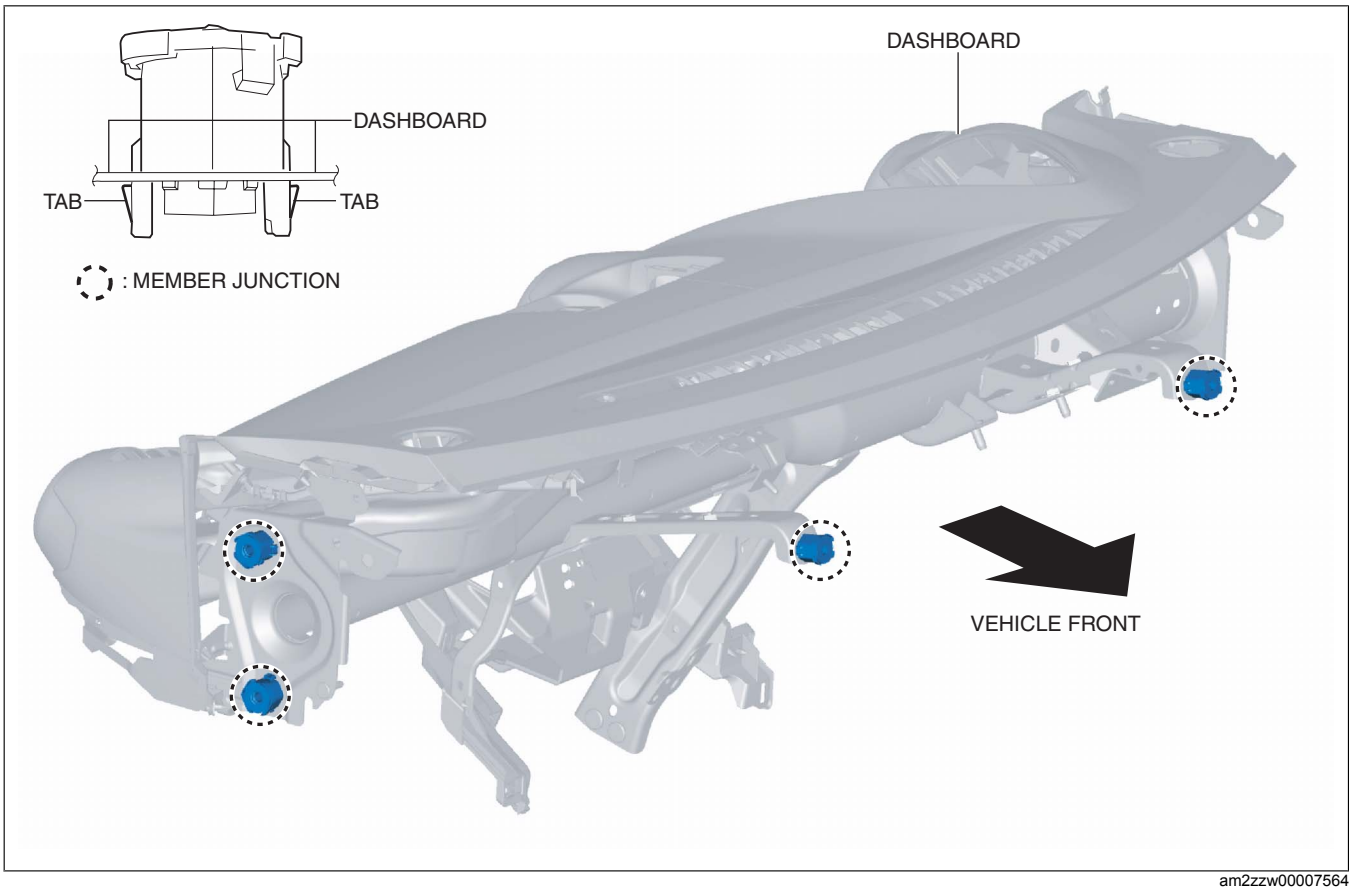


am2zzw00007564

3. Insert the dashboard from the front driver-side door or front passenger-side door opening.
4. Move the dashboard in the direction of the arrow shown in the figure, align it with the guide pins on the vehicle body sides, and set it.

Note

- Visually verify the installation condition of the guide pins on the vehicle body sides and the dashboard from the position shown in the figure.

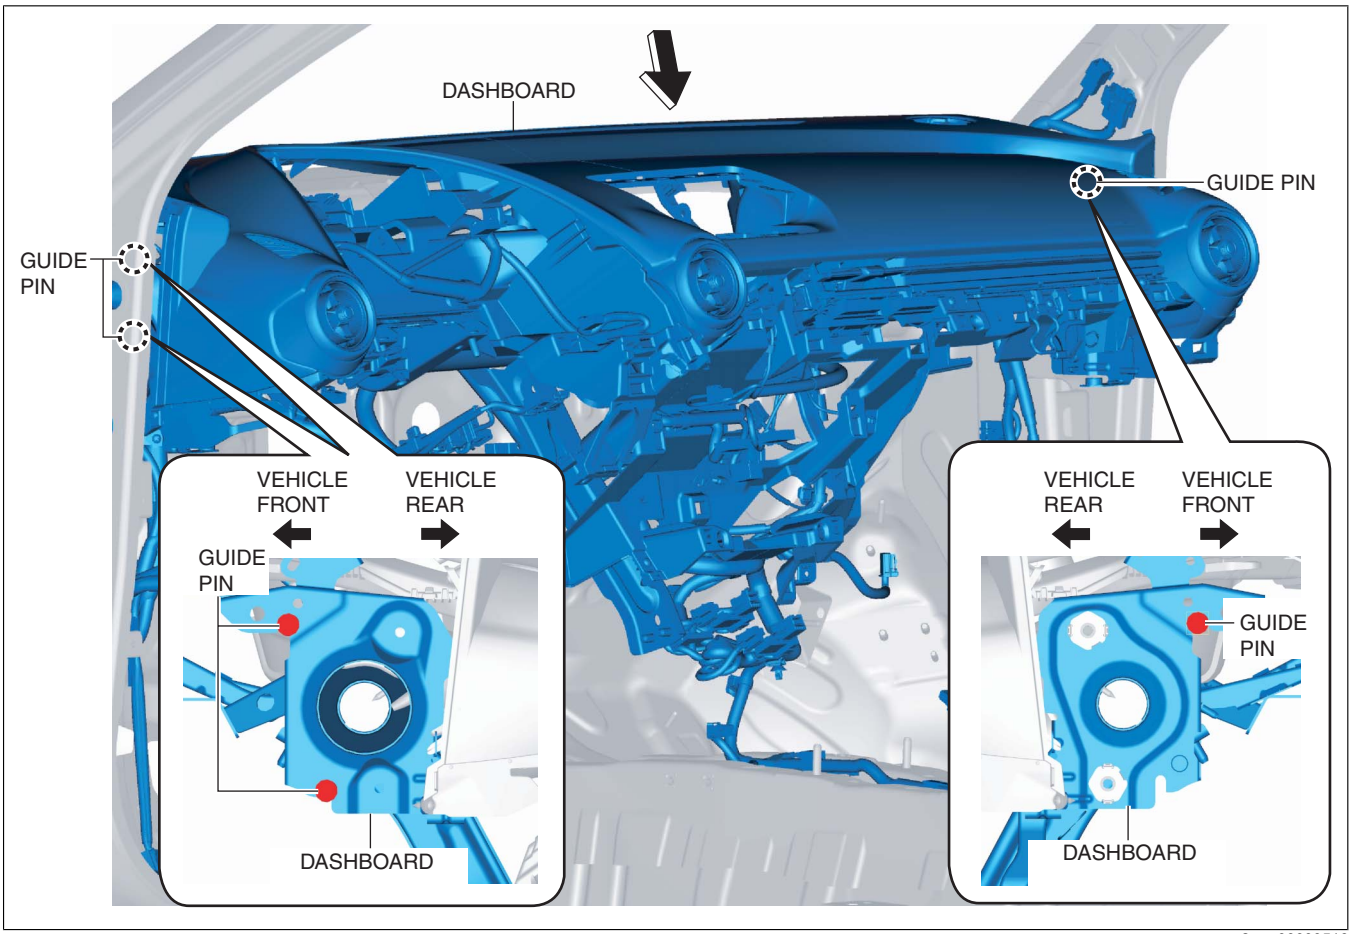


am2zzw00009516

5. Insert the bolts on the passenger-side.


Note

- Tighten the bolts to the specified torque after positioning the member junction.

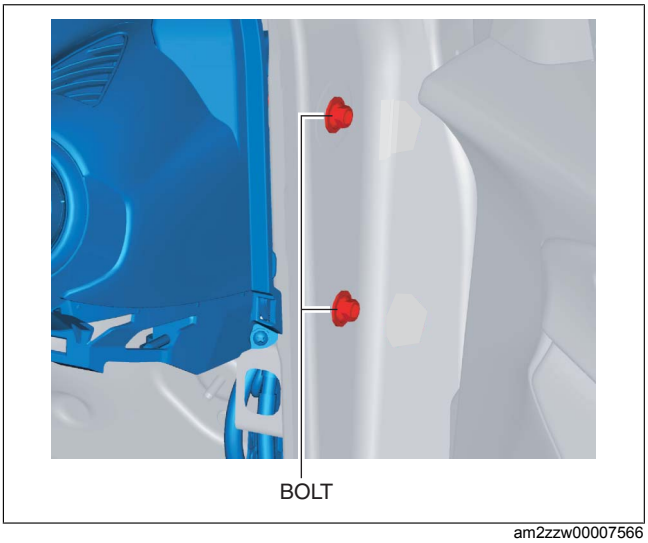

am2zzw00007566

6. Tighten the bolts on the driver-side temporarily.

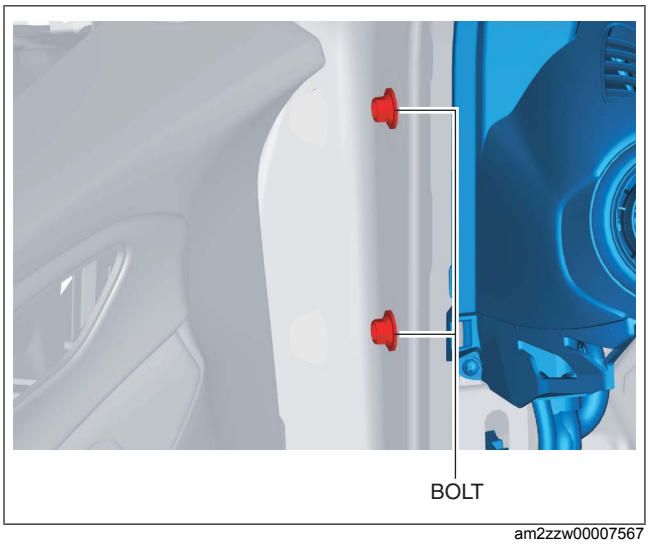


am2zzw00007567

7. Tighten the bolts on the passenger-side temporarily.

Note

- After bolts are seated, rotate the plate nuts of the member junctions and visually inspect them from the lower side of the dashboard on the passenger-side to verify that they emerge in the direction of the body panels.

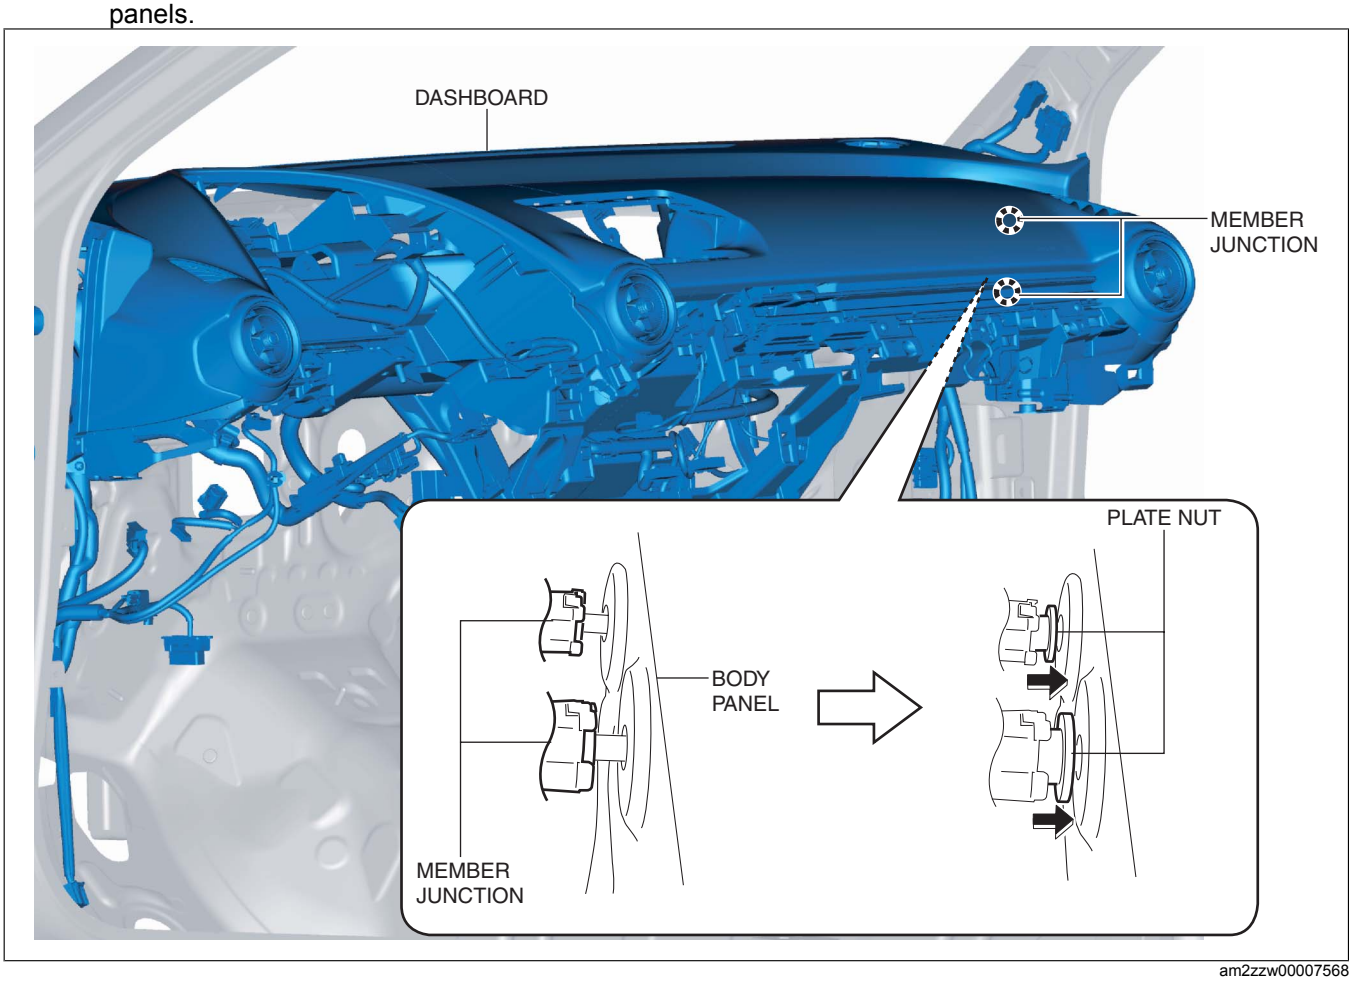


am2zzw00007568

8. Verify that the bolt holes on the vehicle side and the bolt insertion position of the member junctions are aligned.

Note

- If the bolt holes on the vehicle side and the bolt insertion position of the member junctions are not aligned, remove the bolts on the driver's and passenger-sides and repeat from Step 5.

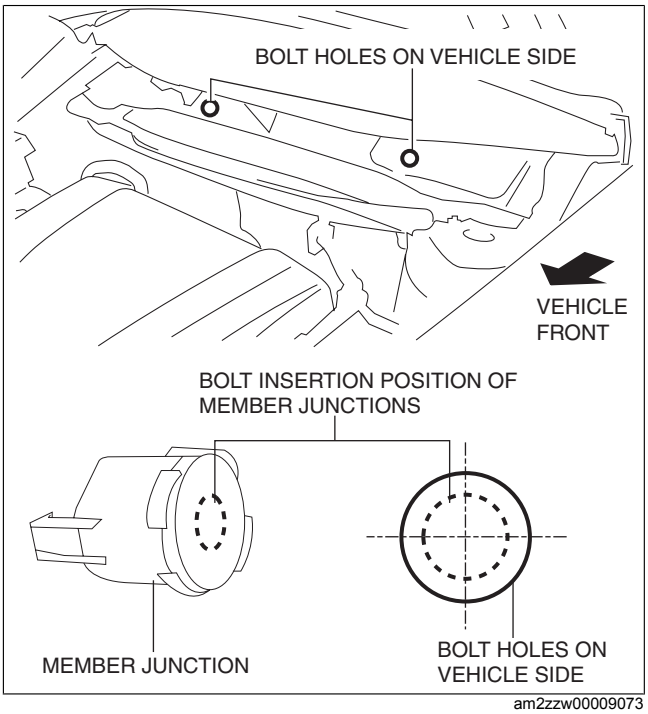


am2zzw00009073

9. Tighten the new bolts temporarily.


Caution

- **If the bolts are reused, the plate nuts of the member junctions cannot be moved and the dashboard frame and the vehicle body could be damaged. Always replace the bolts with new ones.**

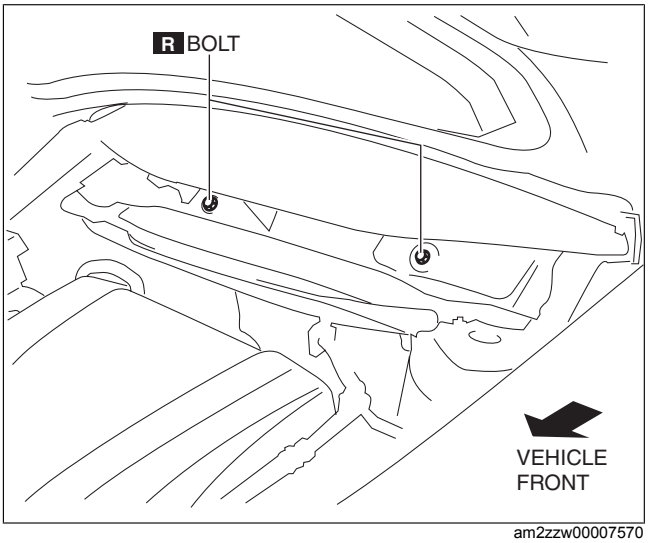


am2zzw00007570

10. Tighten the bolts on the driver-side to the specified torque and install the caps.

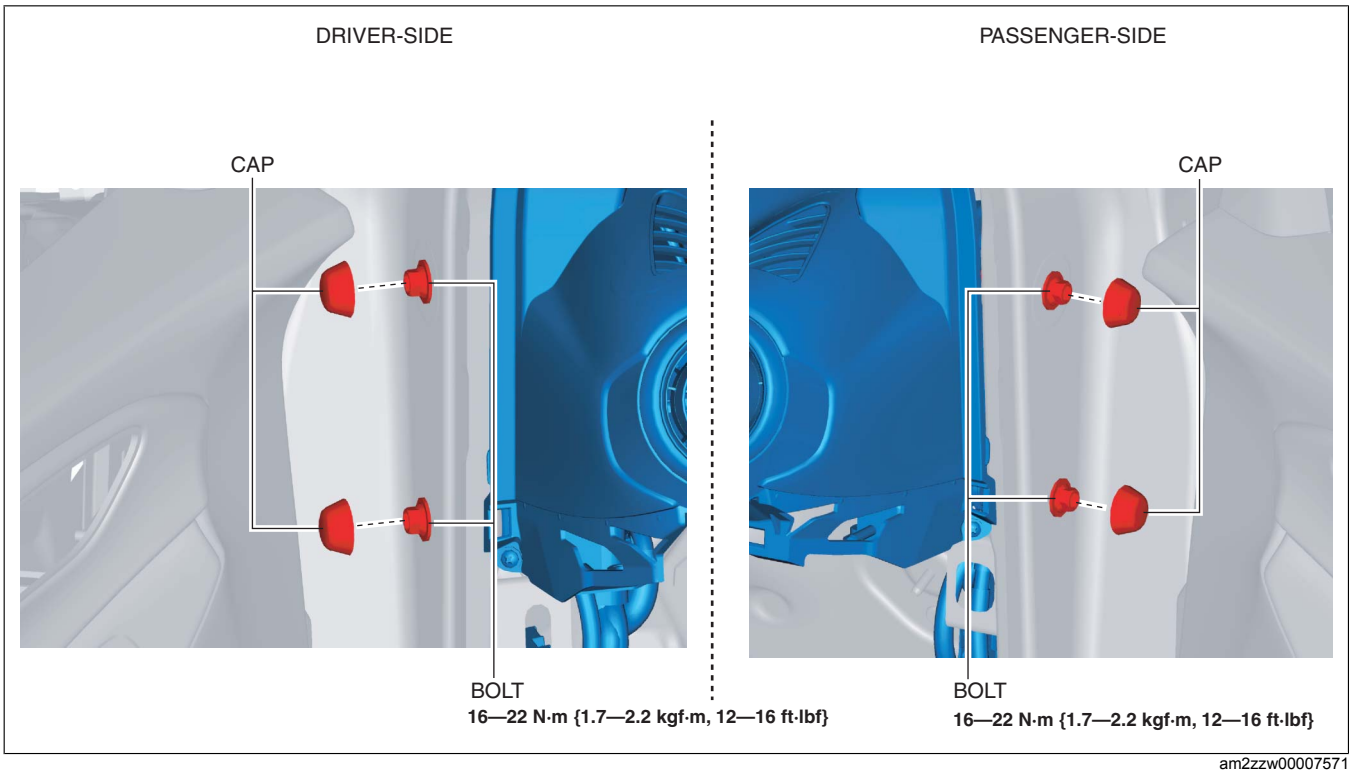


am2zzw00007571

11. Tighten the bolts on the passenger-side to the specified torque and install the caps.
12. Tighten the bolts to the specified torque.

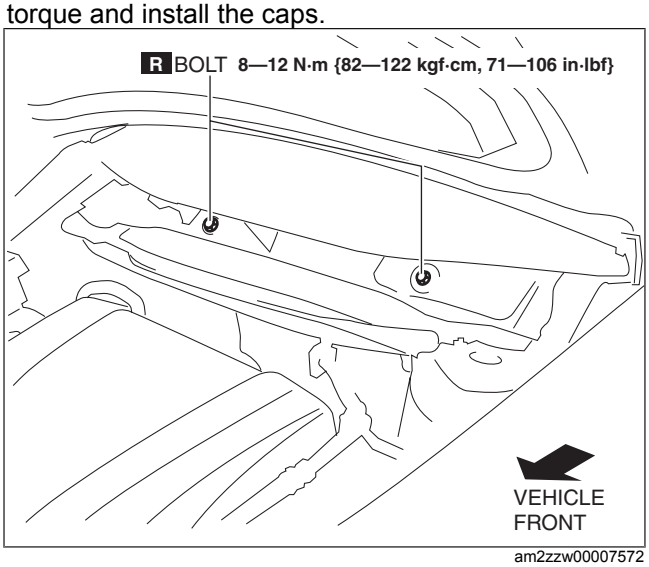

am2zzw00007572

13. Install the dashboard bracket.

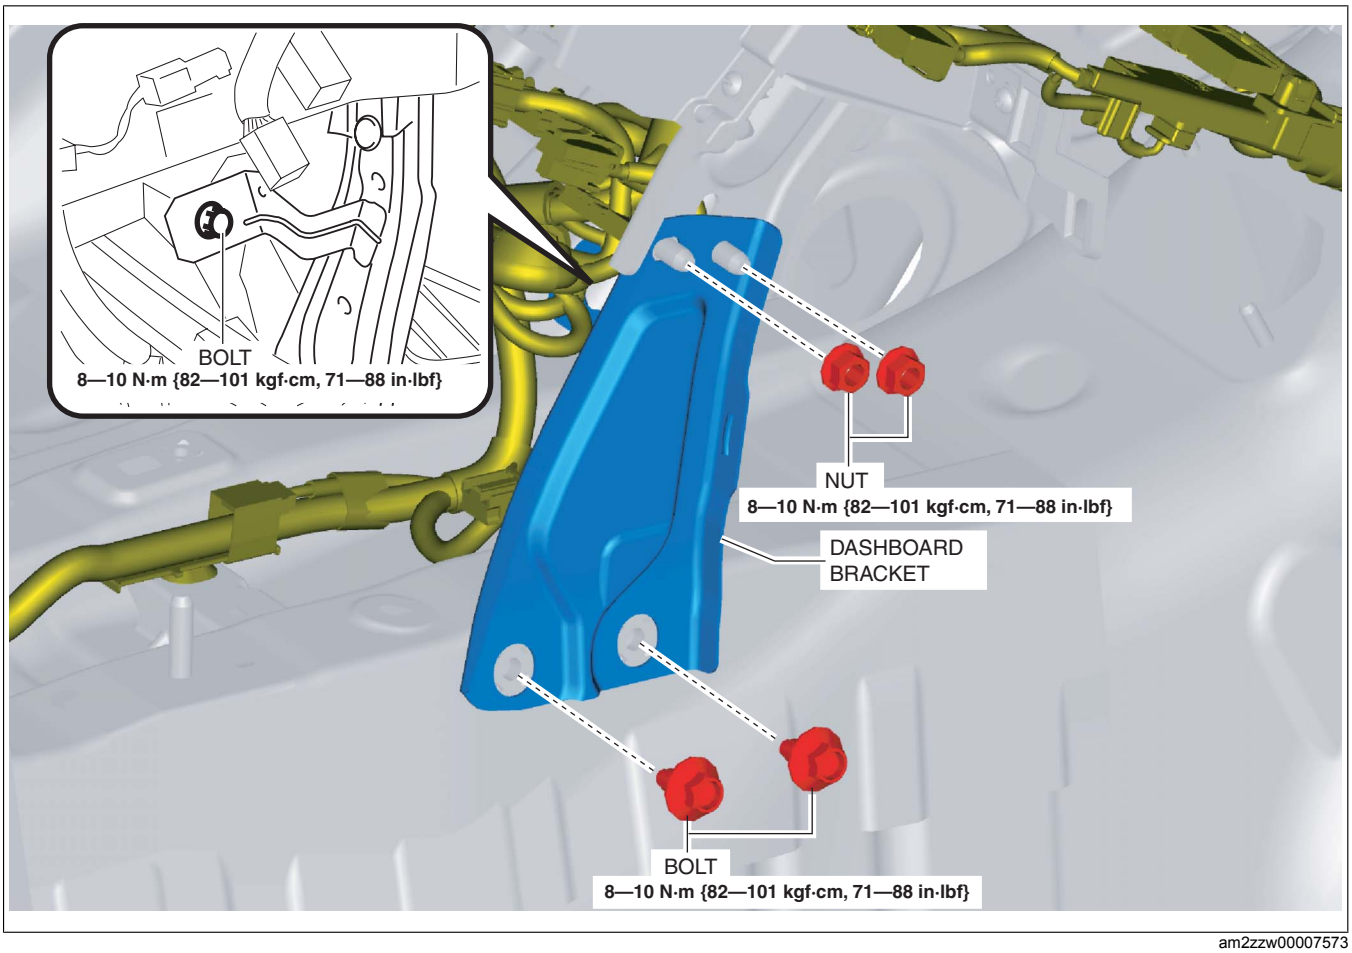

am2zzw00007573

14. Install the nuts.
15. Install the bolts.
16. Connect the dashboard harness connectors and install the wiring harness clip.
17. Install the following parts:
    (1) Shift lever component (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F65M-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F66M-R].)
    (2) Selector lever component (ATX) (See AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION.)
    (3) Center display (with center display) (See CENTER DISPLAY REMOVAL/INSTALLATION.)
    (4) Audio unit (without center display) (See AUDIO UNIT REMOVAL/INSTALLATION.)
    (5) Audio panel No.1 (See AUDIO PANEL No.1 REMOVAL/INSTALLATION.)
    (6) Audio panel No.2 (See AUDIO PANEL No.2 REMOVAL/INSTALLATION.)
    (7) Climate control unit (See CLIMATE CONTROL UNIT REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See CLIMATE CONTROL UNIT REMOVAL/INSTALLATION [MANUAL AIR CONDITIONER].)
    (8) Center lower panel (See CENTER LOWER PANEL REMOVAL/INSTALLATION.)
    (9) Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
    (10) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
    (11) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
    (12) DVD/CD player (with DVD/CD player) (See DVD/CD PLAYER REMOVAL.) (See DVD/CD PLAYER INSTALLATION.)
    (13) CD player (with CD player) (See CD PLAYER REMOVAL.) (See CD PLAYER INSTALLATION.)
    (14) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
    (15) Console side panel (See CONSOLE SIDE PANEL REMOVAL/INSTALLATION.)
    (16) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
    (17) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F65M-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F66M-R].)
    (18) Selector lever knob (ATX) (See AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION.)
    (19) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
    (20) Shift bezel (See SHIFT BEZEL REMOVAL/INSTALLATION.)
    (21) Center console tray (See CENTER CONSOLE TRAY REMOVAL/INSTALLATION.)
    (22) Passenger-side lower panel (See PASSENGER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)

(23)Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
(24)Center panel (See CENTER PANEL REMOVAL/INSTALLATION.)
(25)Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
(26)Steering shaft (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
(27)Joint cover (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
(28)Driver-side lower panel (See DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
(29)Fuel-filler lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)
(30)Bonnet release lever (See BONNET RELEASE LEVER AND RELEASE CABLE REMOVAL/INSTALLATION.)
(31)Light switch (See LIGHT SWITCH REMOVAL/INSTALLATION.)
(32)Wiper and washer switch (See WIPER AND WASHER SWITCH REMOVAL/INSTALLATION.)
(33)Clock spring (See CLOCK SPRING REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See CLOCK SPRING REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)
(34)Lower column cover (See COLUMN COVER REMOVAL/INSTALLATION.)
(35)Instrument cluster (See INSTRUMENT CLUSTER REMOVAL/INSTALLATION.)
(36)Meter hood (See METER HOOD REMOVAL/INSTALLATION.)
(37)Upper column cover (See COLUMN COVER REMOVAL/INSTALLATION.)
(38)Steering wheel (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
(39)Driver-side air bag module (See DRIVER-SIDE AIR BAG MODULE REMOVAL [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See DRIVER-SIDE AIR BAG MODULE INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See DRIVER-SIDE AIR BAG MODULE REMOVAL [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See DRIVER-SIDE AIR BAG MODULE INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)
(40)A-pillar trim (See A-PILLAR TRIM REMOVAL/INSTALLATION.)
(41)Front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
(42)Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
(43)Side cowl grille (See SIDE COWL GRILLE REMOVAL/INSTALLATION.)
(44)Windshield wiper motor and link (See WINDSHIELD WIPER MOTOR AND LINK REMOVAL/INSTALLATION.)
(45)Cowl grille (See COWL GRILLE REMOVAL/INSTALLATION.)
(46)Windshield wiper arm and blade (See WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION.)

18. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)