
DASHBOARD DISASSEMBLY/ASSEMBLY

id091700600400

Warning

- **Handling the passenger-side air bag module improperly can accidentally operate (deploy) the air bag module, which may seriously injure you.Read the SRS air bag system service warnings and cautions before handling the air bag module. (See AIR BAG SYSTEM SERVICE WARNINGS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE WARNINGS [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [STANDARD DEPLOYMENT CONTROL SYSTEM].)**

1. Remove the passenger-side air bag module. (See PASSENGER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See PASSENGER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)
2. Disassemble in the order indicated in the table.

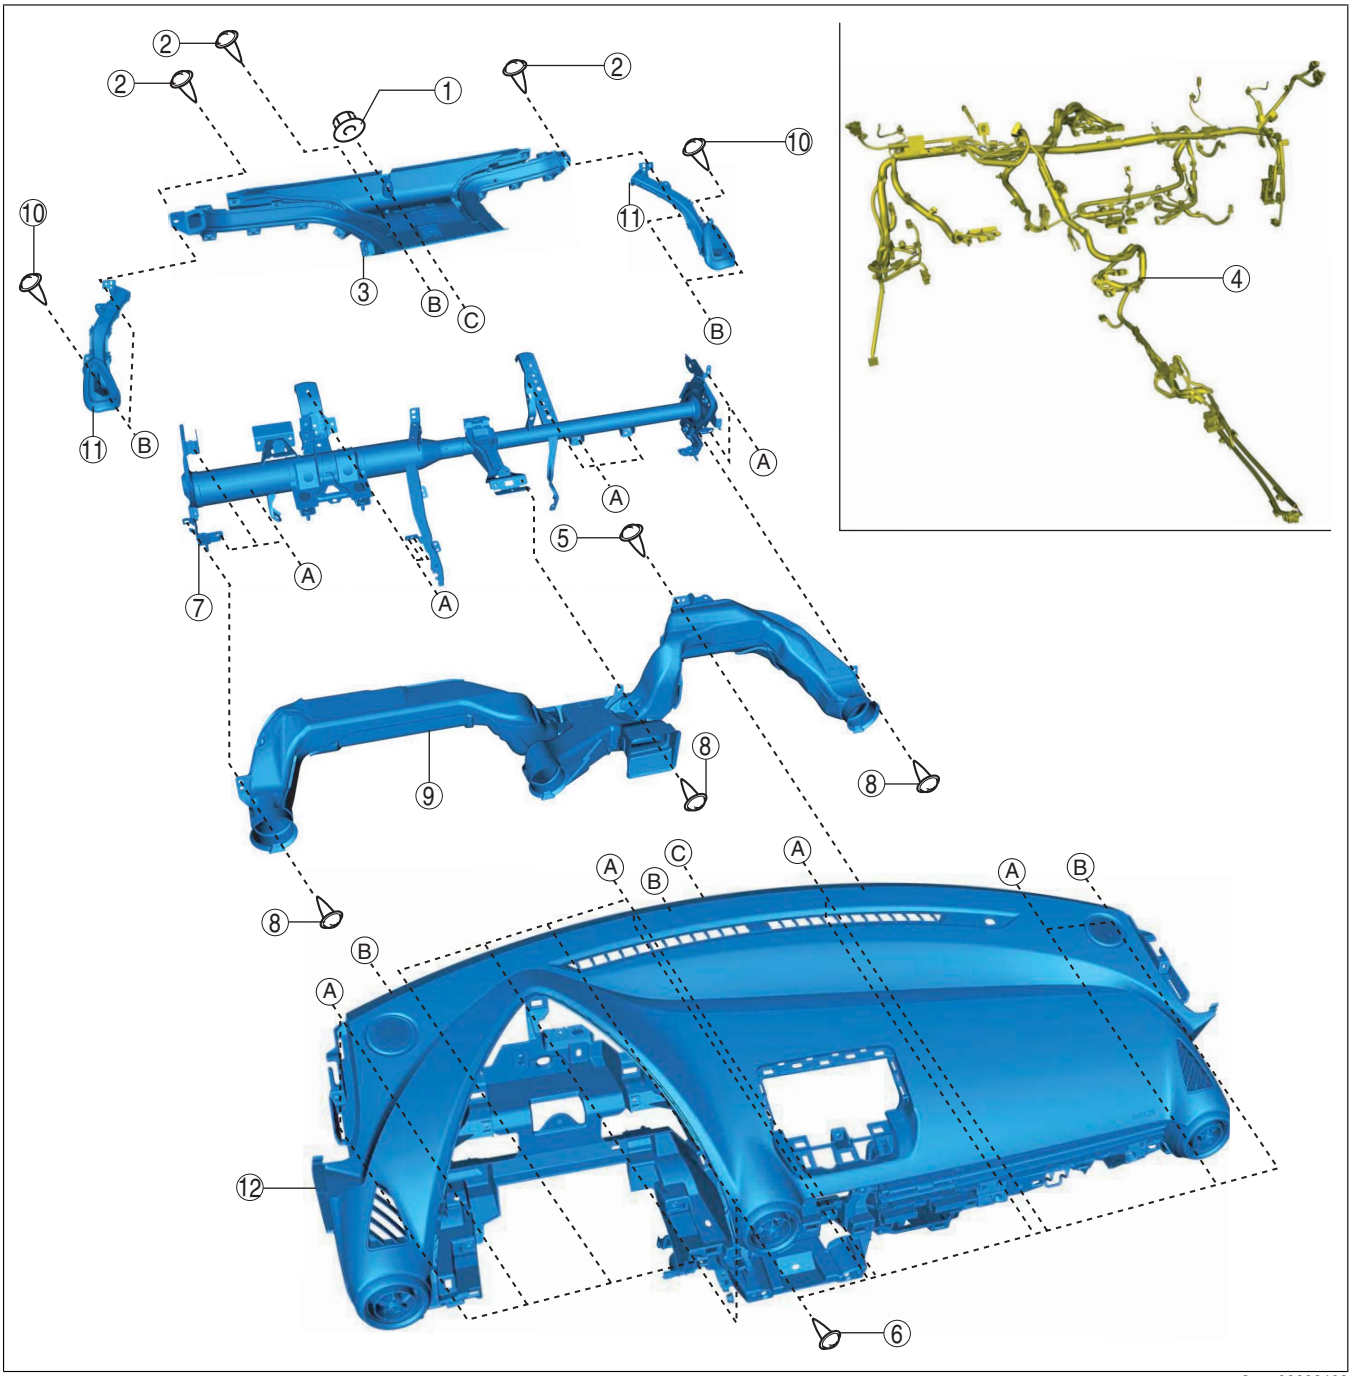

am2zzw00008103

1	Nut
2	Screw

3	Center defroster
4	Wiring harness

5	Screw
6	Screw
7	Dashboard member
8	Screw
9	Duct

10	Screw
11	Side defroster
12	Dashboard

3. When replacing the dashboard, remove the following parts:
   (1) Center ventilator grille No.1 (See VENTILATOR GRILLE REMOVAL/INSTALLATION.)
   (2) Side ventilator grille
   (3) Center ventilator grille No.2
   (4) Switch panel (See SWITCH PANEL REMOVAL/INSTALLATION.)
   (5) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
   (6) Tweeter (with center display) (See TWEETER REMOVAL/INSTALLATION.)
   (7) Tweeter hole cover (See TWEETER HOLE COVER REMOVAL/INSTALLATION.)
   (8) Glove compartment striker
   (9) Ambient temperature sensor (With full-auto air conditioner) (See AMBIENT TEMPERATURE SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)
   (10) Solar radiation sensor (With full-auto air conditioner) (See SOLAR RADIATION SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER].)
4. Assemble in the reverse order of disassembly.