
FRONT CONSOLE REMOVAL/INSTALLATION


id091700601900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Center console tray (See CENTER CONSOLE TRAY REMOVAL/INSTALLATION.)
   (2) Shift bezel (See SHIFT BEZEL REMOVAL/INSTALLATION.)
   (3) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
   (4) Selector lever knob (ATX) (See AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.)
   (5) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F65M-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F66M-R].)
   (6) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
   (7) Console side panel (See CONSOLE SIDE PANEL REMOVAL/INSTALLATION.)
   (8) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
   (9) CD player (with CD player) (See CD PLAYER REMOVAL.) (See CD PLAYER INSTALLATION.)
   (10) DVD/CD player (with DVD/CD player) (See DVD/CD PLAYER REMOVAL.) (See DVD/CD PLAYER INSTALLATION.)
3. Remove the screws.

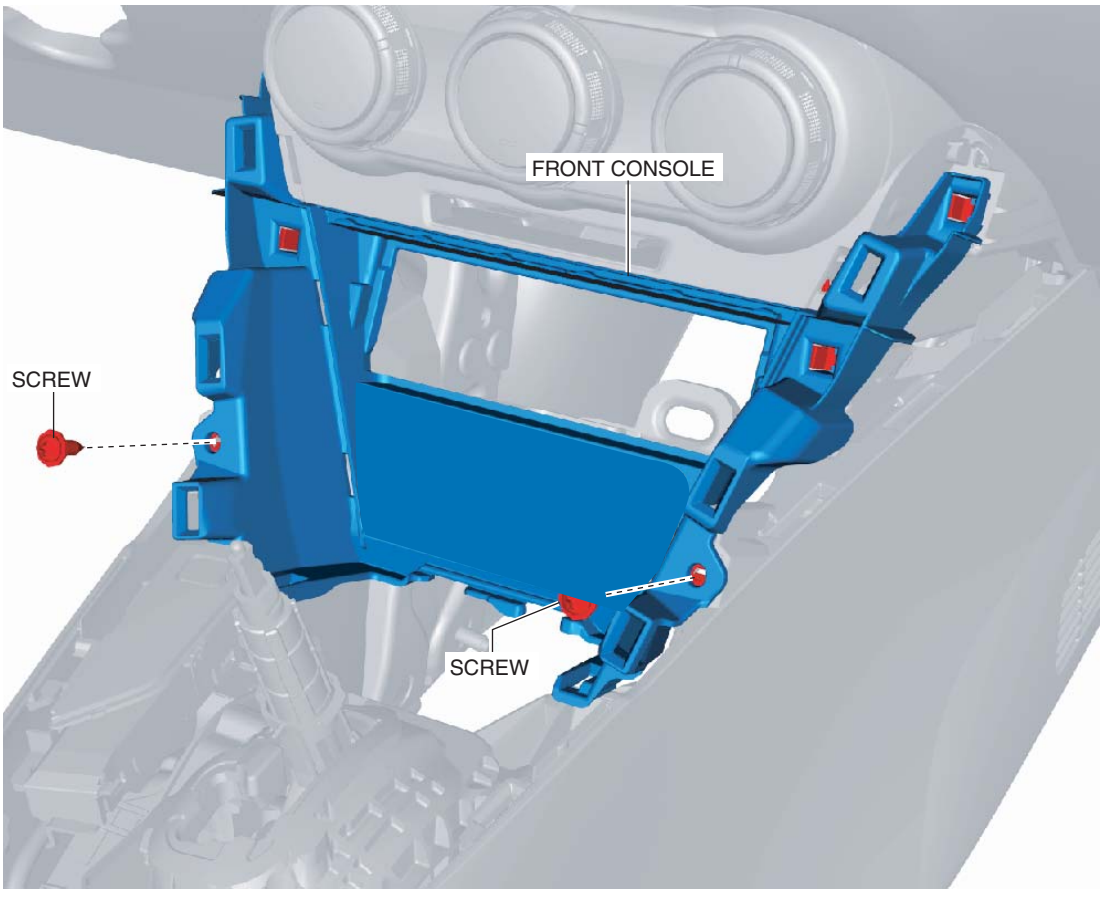

am2zzw00007628

4. Remove the front console in the direction of arrow shown in the figure while detaching the clips.

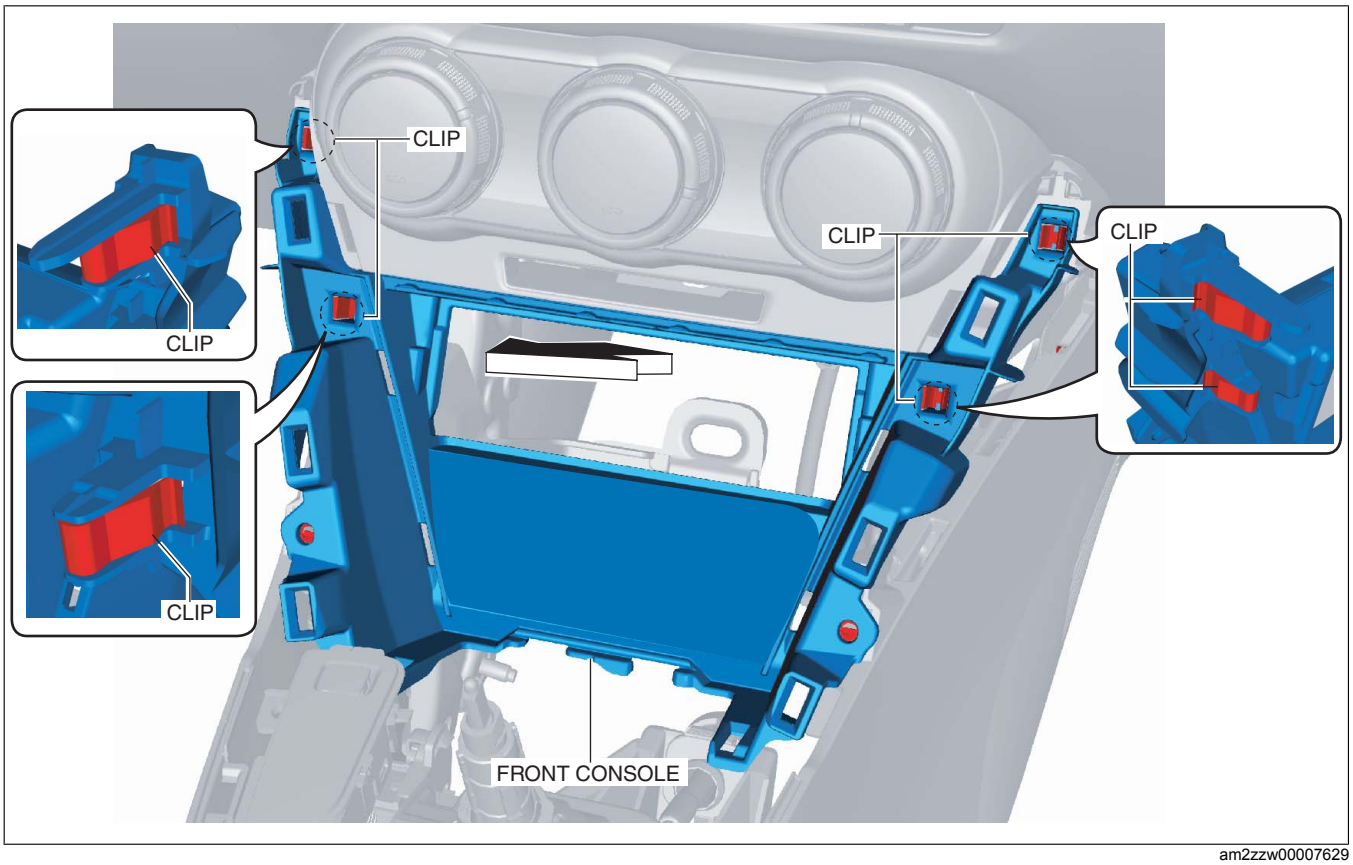

am2zzw00007629

5. Disconnect the auxiliary jack/USB port/SD card slot hub connector.(With center display)
6. Disconnect the connector of the auxiliary jack/USB port terminal.(Without center display)
7. Disconnect the accessory socket connector.
8. Install in the reverse order of removal.