
SHIFT PANEL REMOVAL/INSTALLATION


id091700602400

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Center console tray (See CENTER CONSOLE TRAY REMOVAL/INSTALLATION.)
   (2) Shift bezel (See SHIFT BEZEL REMOVAL/INSTALLATION.)
   (3) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
   (4) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F65M-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F66M-R].)
   (5) Selector lever knob (ATX) (See AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION.)
3. Pull the shift panel in the direction of the arrow shown in the figure and detach the shift panel from the rear console.

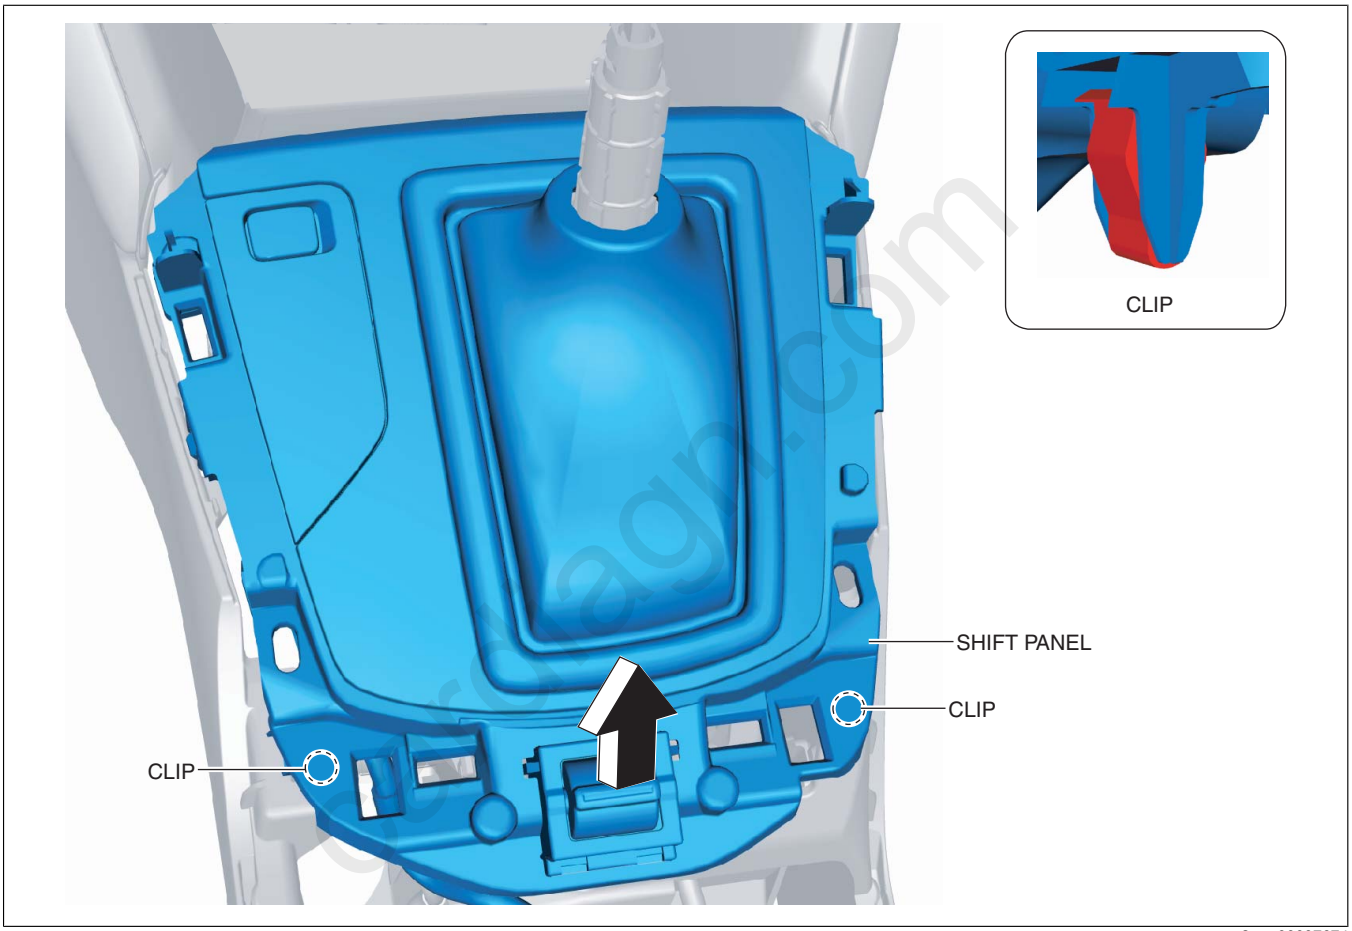

am2zzw00007674

4. Pull the shift panel in the direction of the arrow shown in the figure, detach the clips from the front console box and pull out the pins from the console side panel.

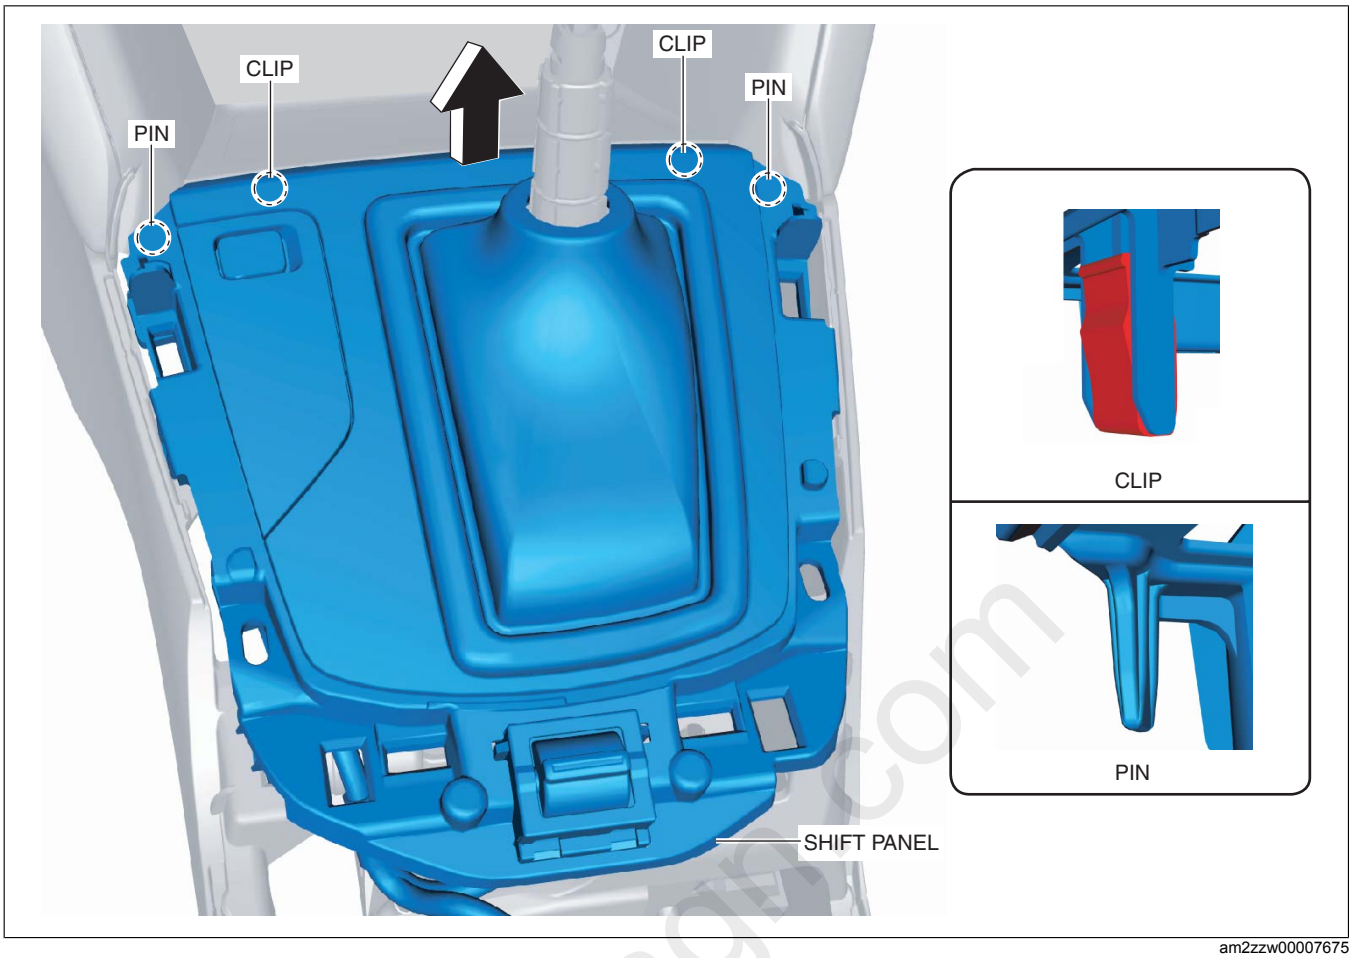

am2zzw00007675

5. Disconnect the shift indicator connector. (ATX)
6. Remove the shift panel.
7. Install in the reverse order of removal.

cardiagn.com