
TIRE HOUSE TRIM REMOVAL/INSTALLATION


id091700603300

1. Remove the rear scuff plate. (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
2. Remove the rear seat cushion. (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
3. Lower the rear seat back.
4. Remove the fastener.

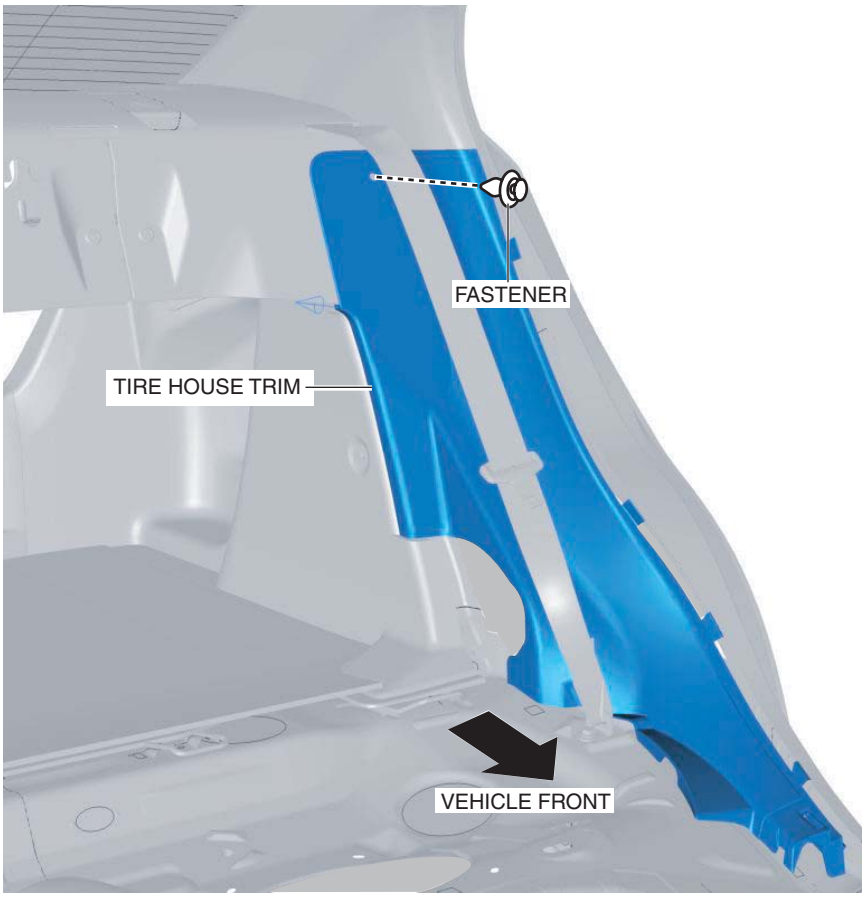


am2zzw00007460

5. Move the tire house trim in the direction of the arrow shown in the figure and remove the hooks from the C-pillar trim.

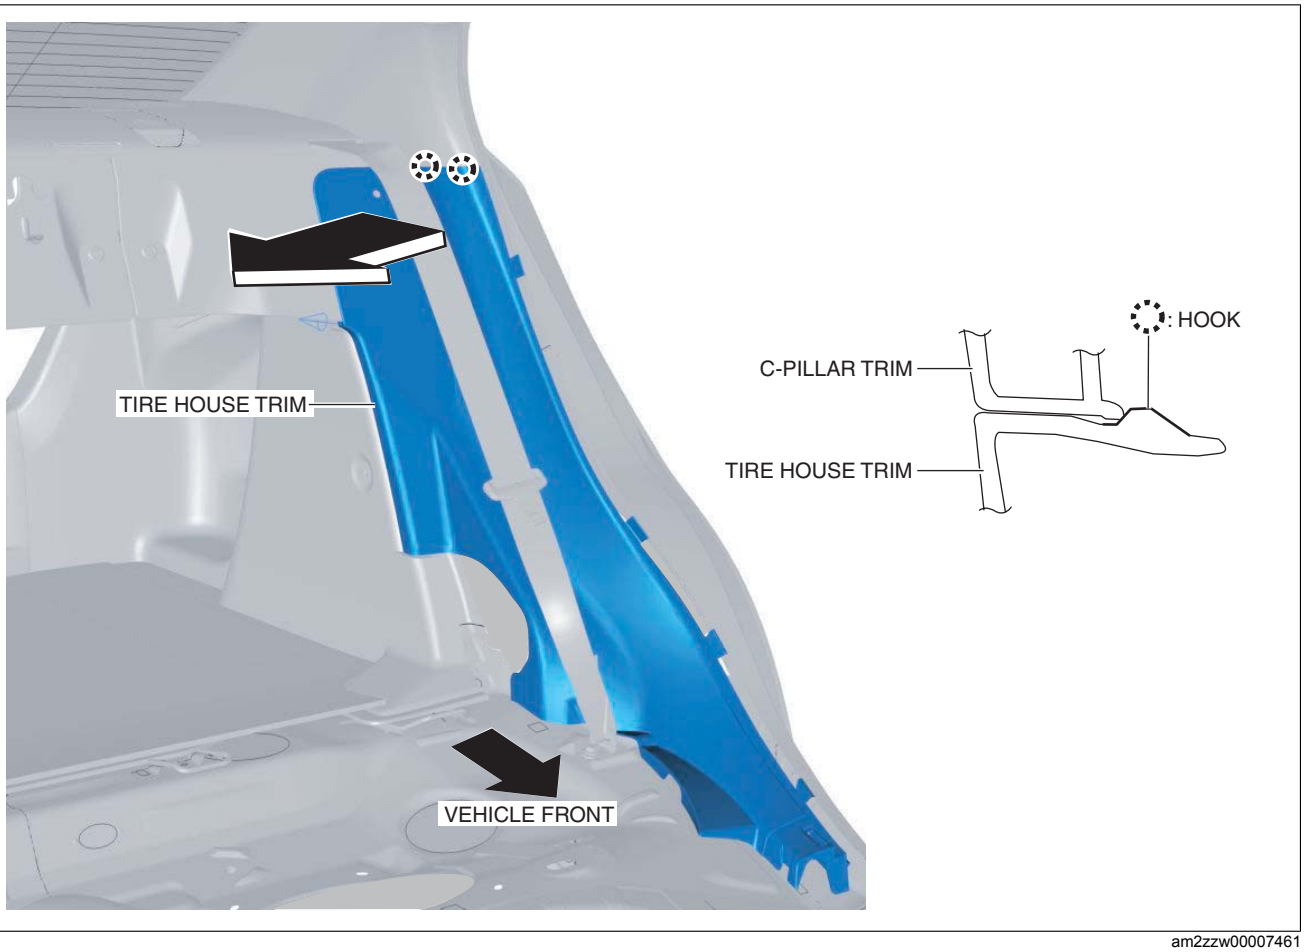

am2zzw00007461

6. Move the tire house trim in the direction of the arrow shown in the figure and remove clips A and B from the body.

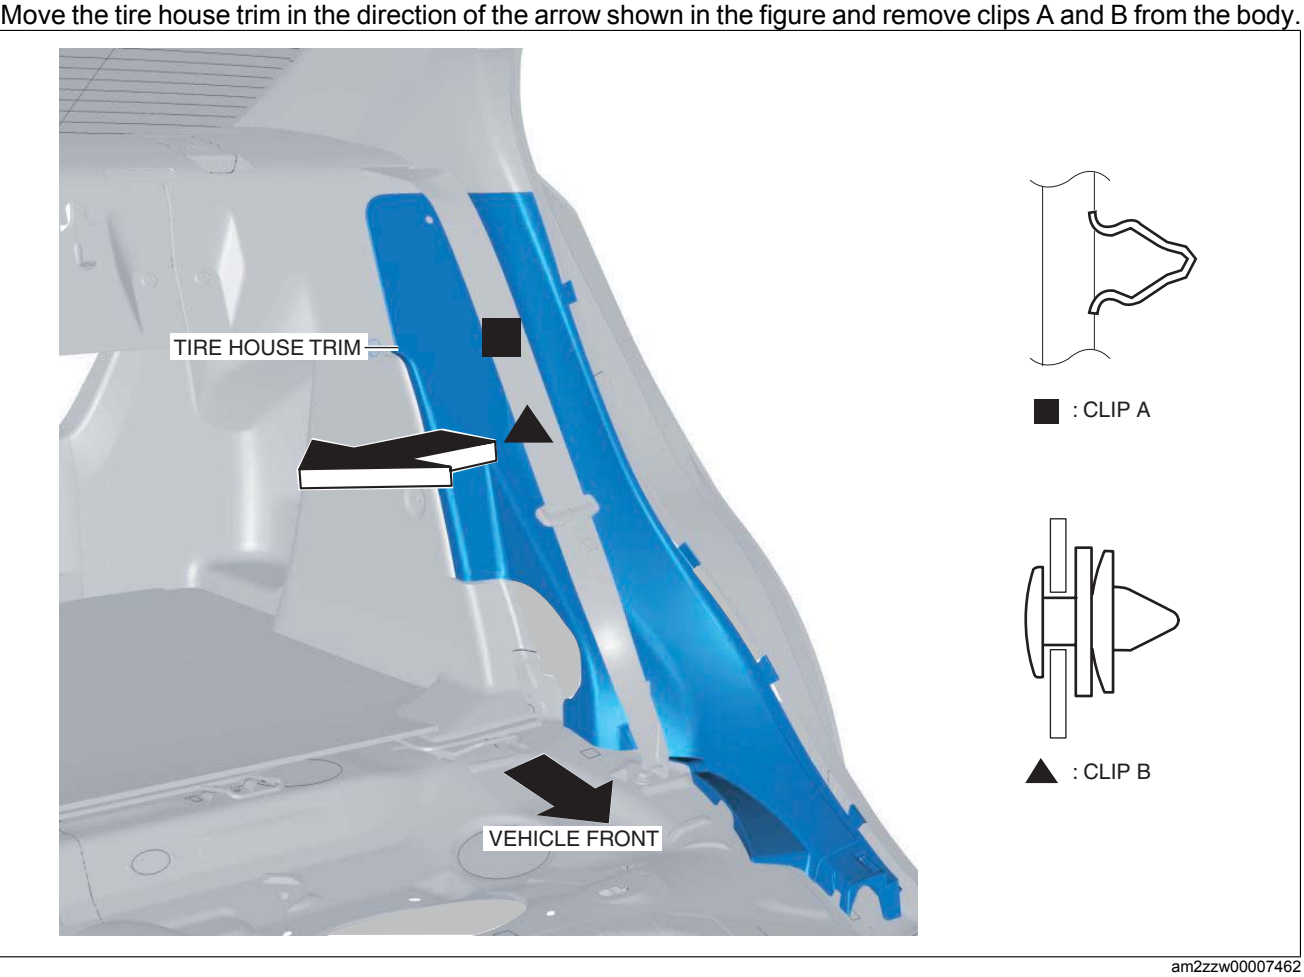

am2zzw00007462

7. Remove the tire house trim.
8. Install in the reverse order of removal.