
REAR SCUFF PLATE REMOVAL/INSTALLATION

id091700604100


Removal

1. Hold part A shown in the figure, open the rear scuff plate in the direction of arrow (1), move it in the direction of arrow (2), and detach tab A of the rear scuff plate from the inner panel.

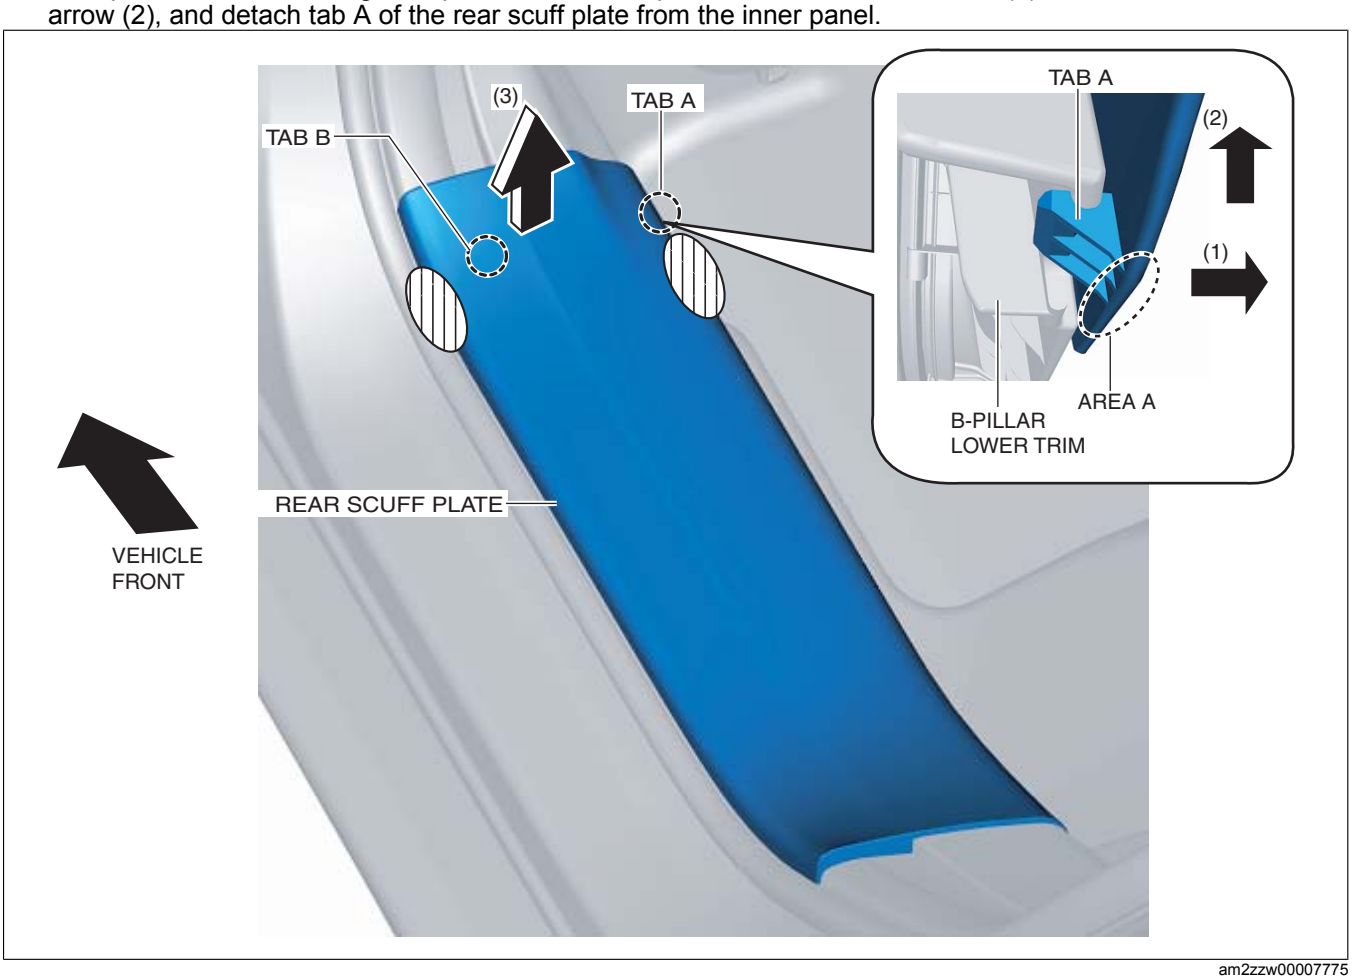


am2zzw00007775

2. Hold the shaded area shown in the figure, move the rear scuff plate in the direction of arrow (3), and detach tab B of the rear scuff plate from the inner panel.
3. Hold the shaded area shown in the figure, move the rear scuff plate in the direction of arrow (1), detach clip A from the inner panel, and pull out the pins.

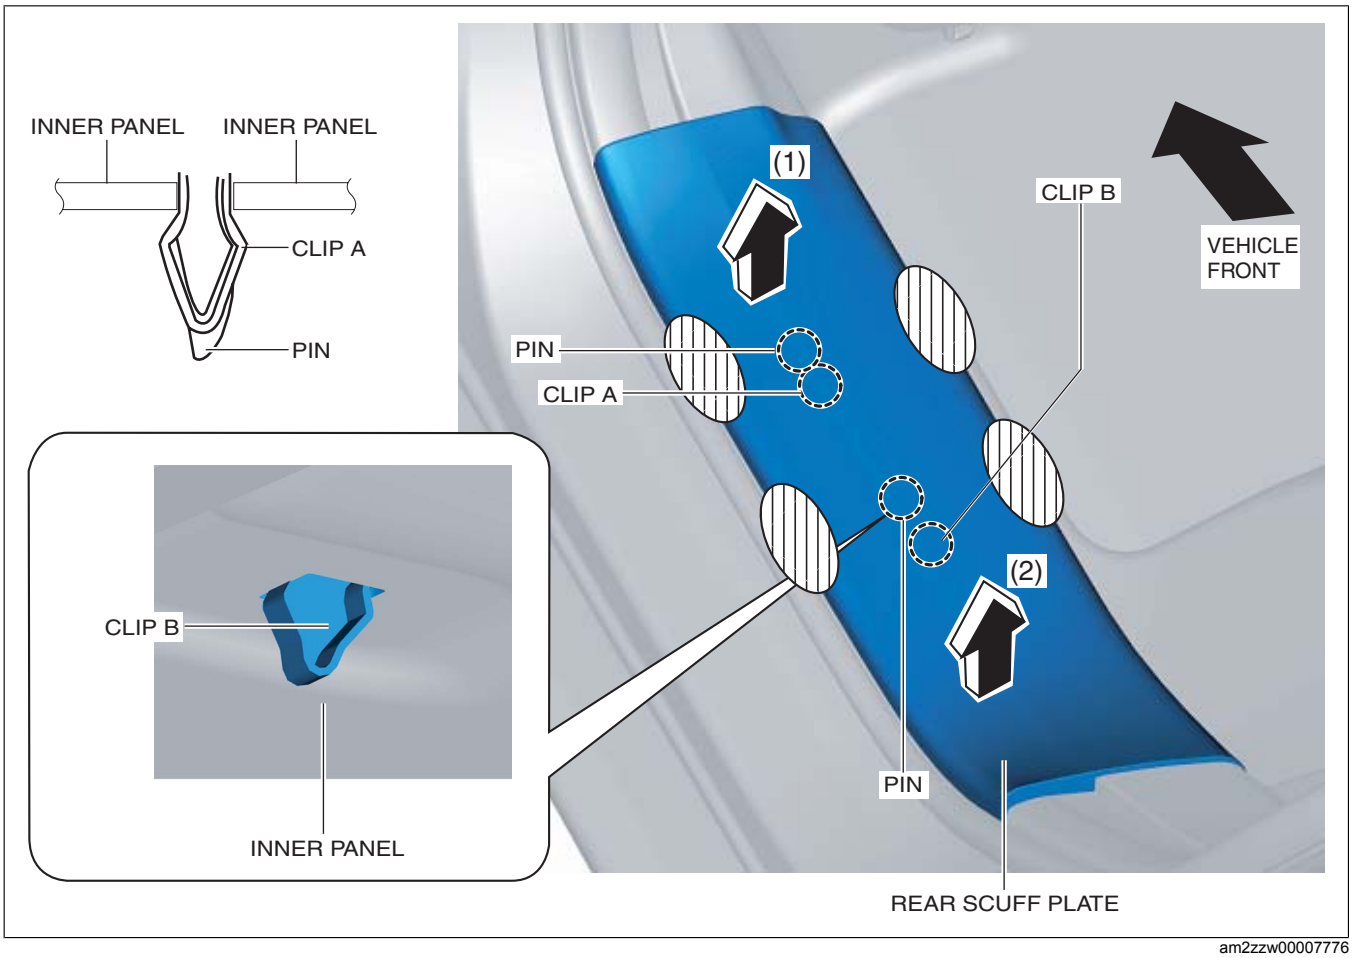

am2zzw00007776

4. Hold the shaded area shown in the figure, move the rear scuff plate in the direction of arrow (2), detach clip B from the inner side sill, and pull out the pins.
5. Hold part A shown in the figure, open the rear scuff plate in the direction of arrow (1), move it in the direction of arrow (2), and detach tab A of the rear scuff plate from the trunk side trim.

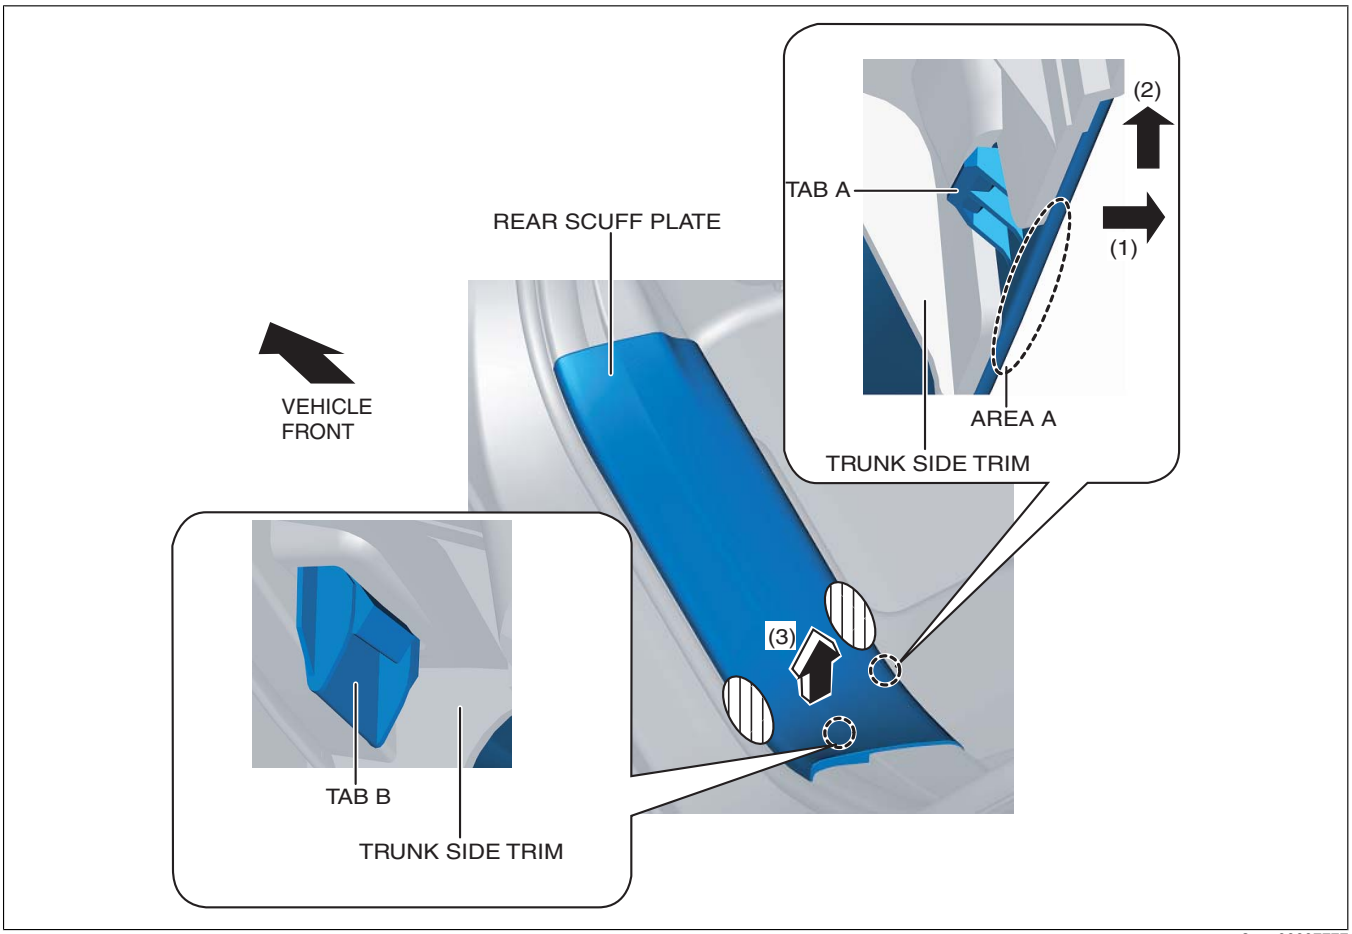


am2zzw00007777

6. Hold the shaded area shown in the figure, move the rear scuff plate in the direction of arrow (3) and detach tab B of the rear scuff plate from the trunk side trim.
7. Remove the rear scuff plate.


Installation

1. Align the rear scuff plate pins shown in the figure with the inner panel.

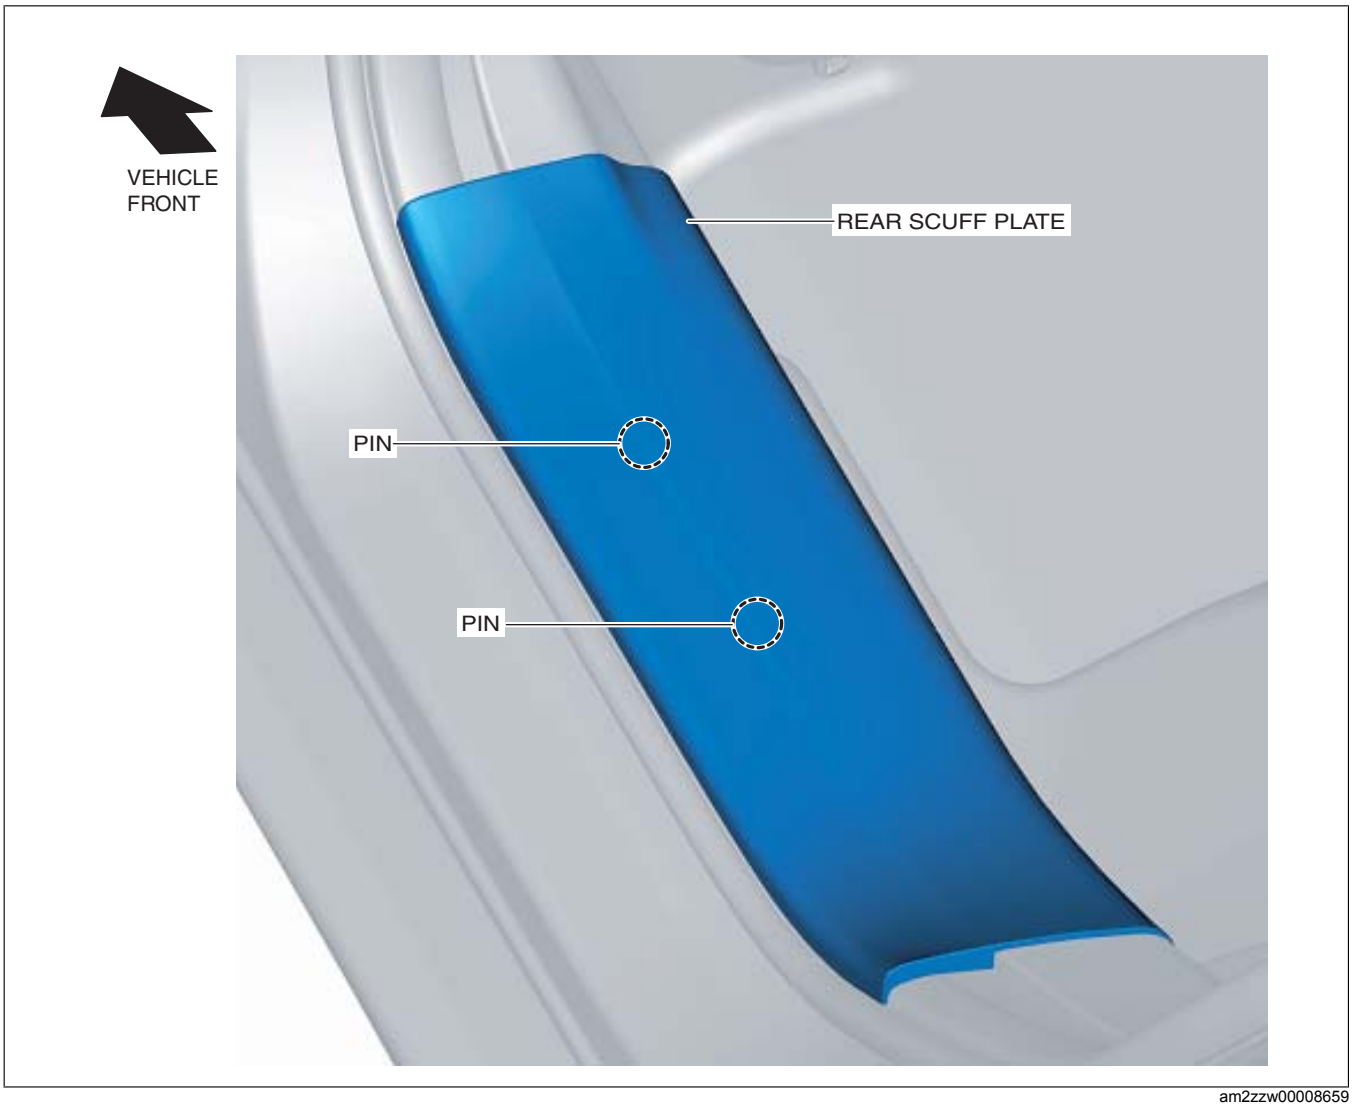


am2zzw00008659

2. Press the rear scuff plate in the direction of arrow (1) shown in the figure and install tabs B to the trunk side trim.

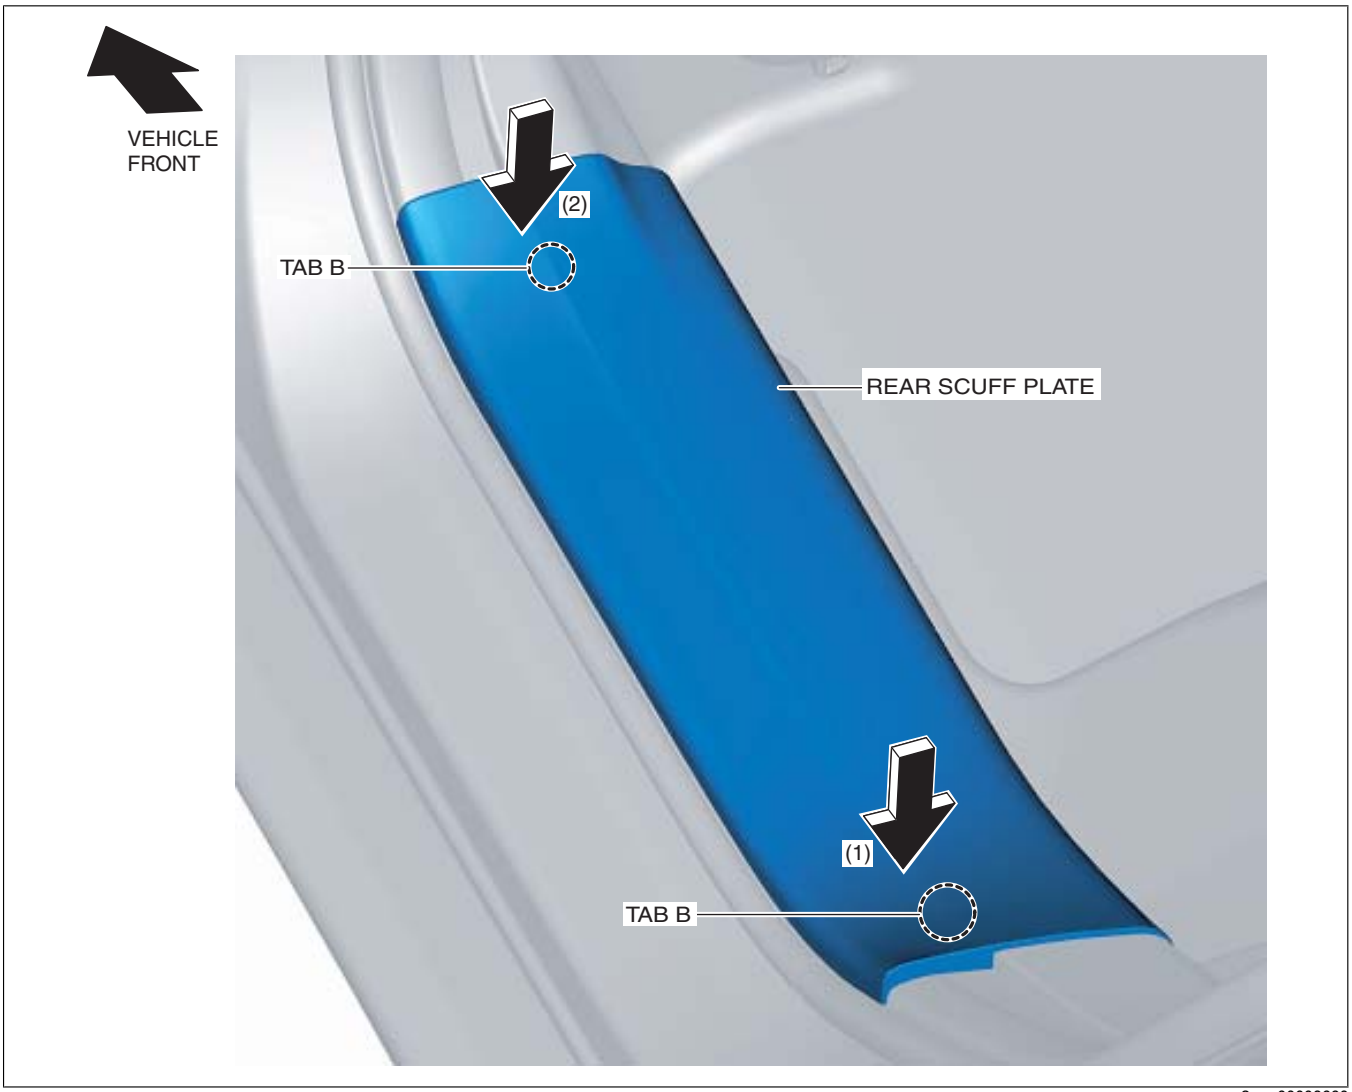


am2zzw00008660

3. Press the rear scuff plate in the direction of arrow (2) shown in the figure and install tabs B to the B-pillar lower trim.
4. Press the rear scuff plate in the direction of the arrows shown in the figure and install clips A and B to the inner panel.

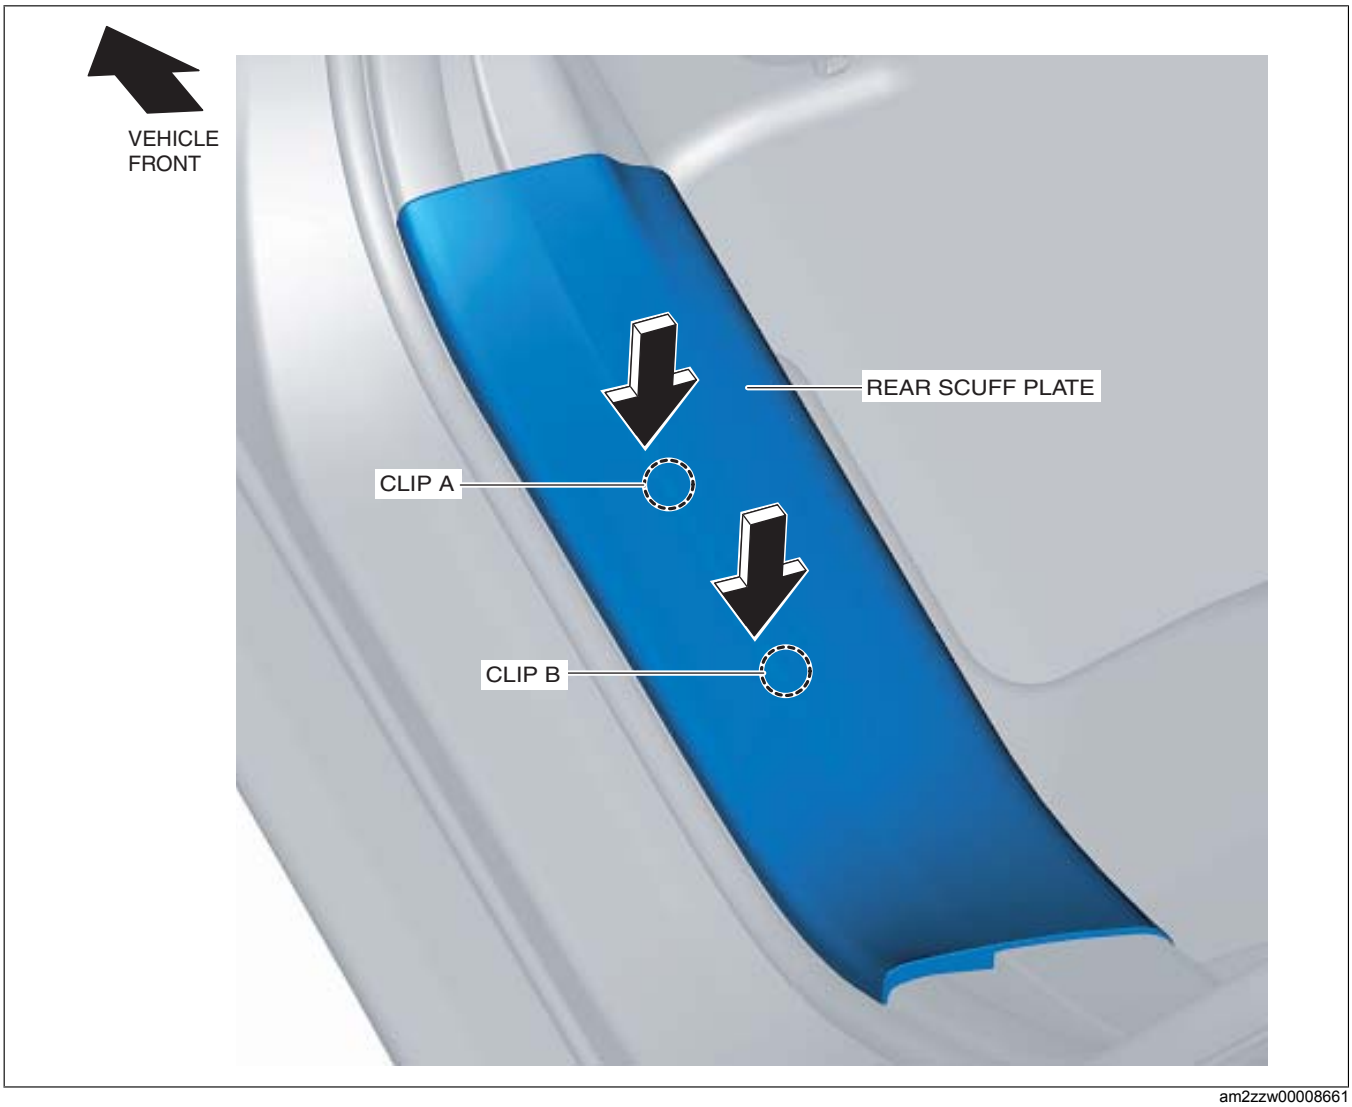

am2zzw00008661

5. Press the rear scuff plate in the direction of arrow (1) shown in the figure and install tabs A to the trunk side trim.

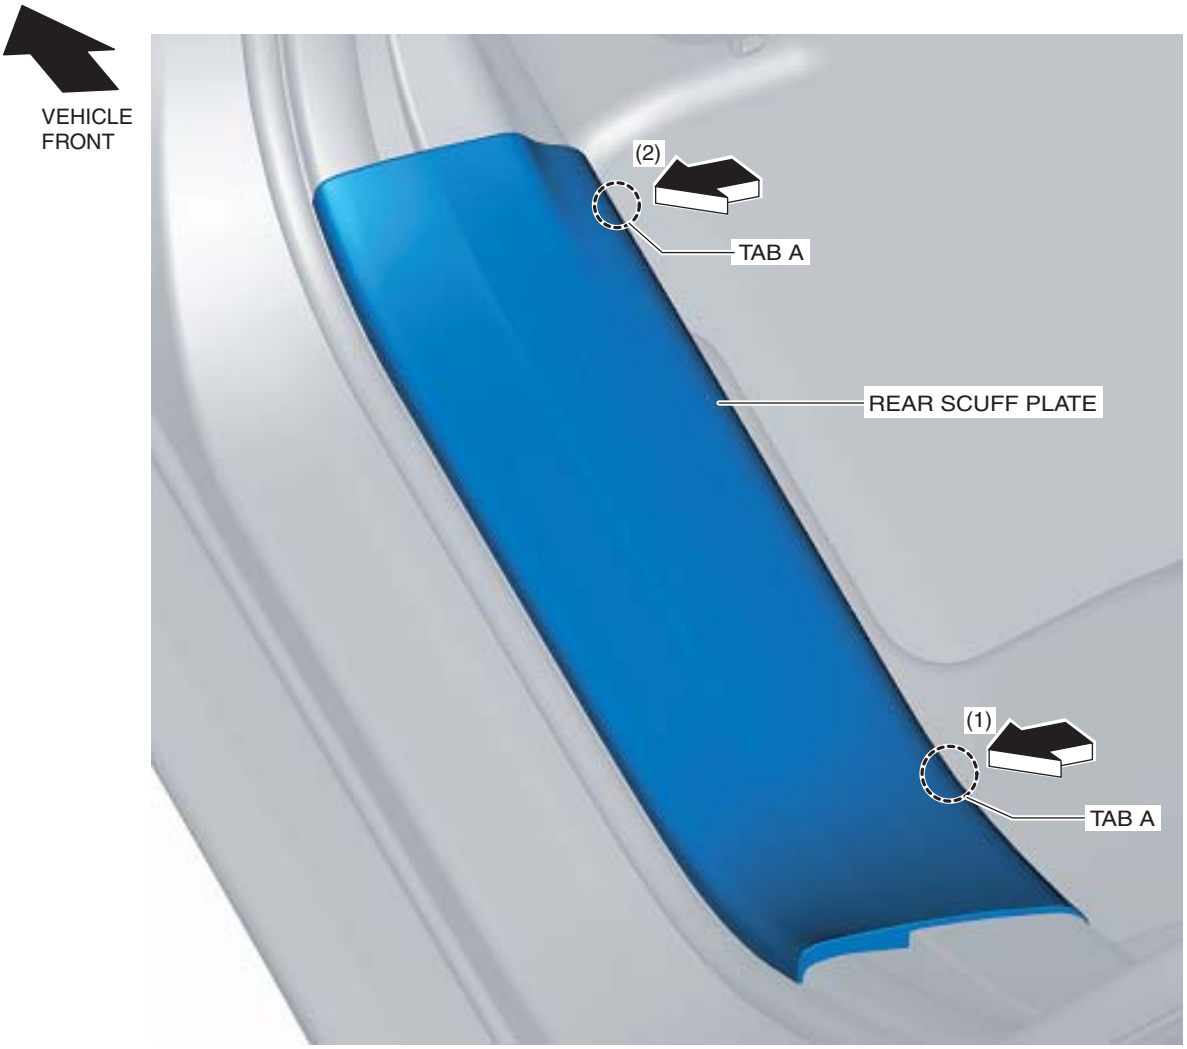

am2zzw00008662

6. Press the rear scuff plate in the direction of arrow (2) shown in the figure and install tabs A to the B-pillar lower trim.