
TRUNK END TRIM REMOVAL/INSTALLATION

id091700604300


5HB

1. Remove the trunk covering. (See TRUNK COVERING REMOVAL/INSTALLATION.)
2. Remove the trunk board. (See TRUNK BOARD REMOVAL/INSTALLATION.)
3. Partially peel back the seaming welt.
4. Remove the fasteners.

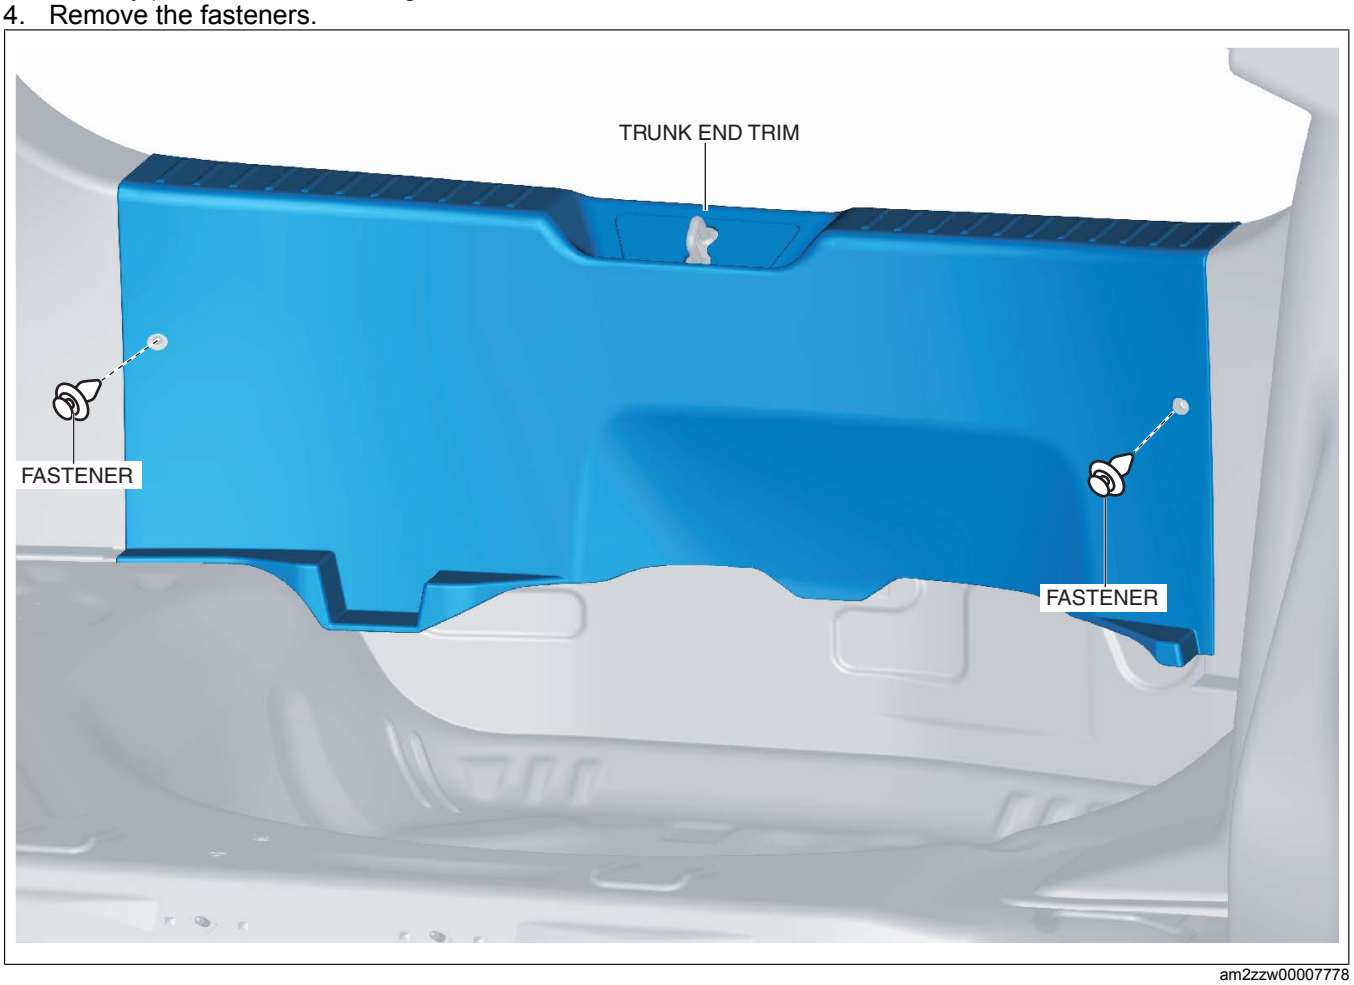


am2zzw00007778

5. Move the trunk end trim in the directions of the arrows shown in the figure and detach the trunk end trim tabs from the trunk side trim.

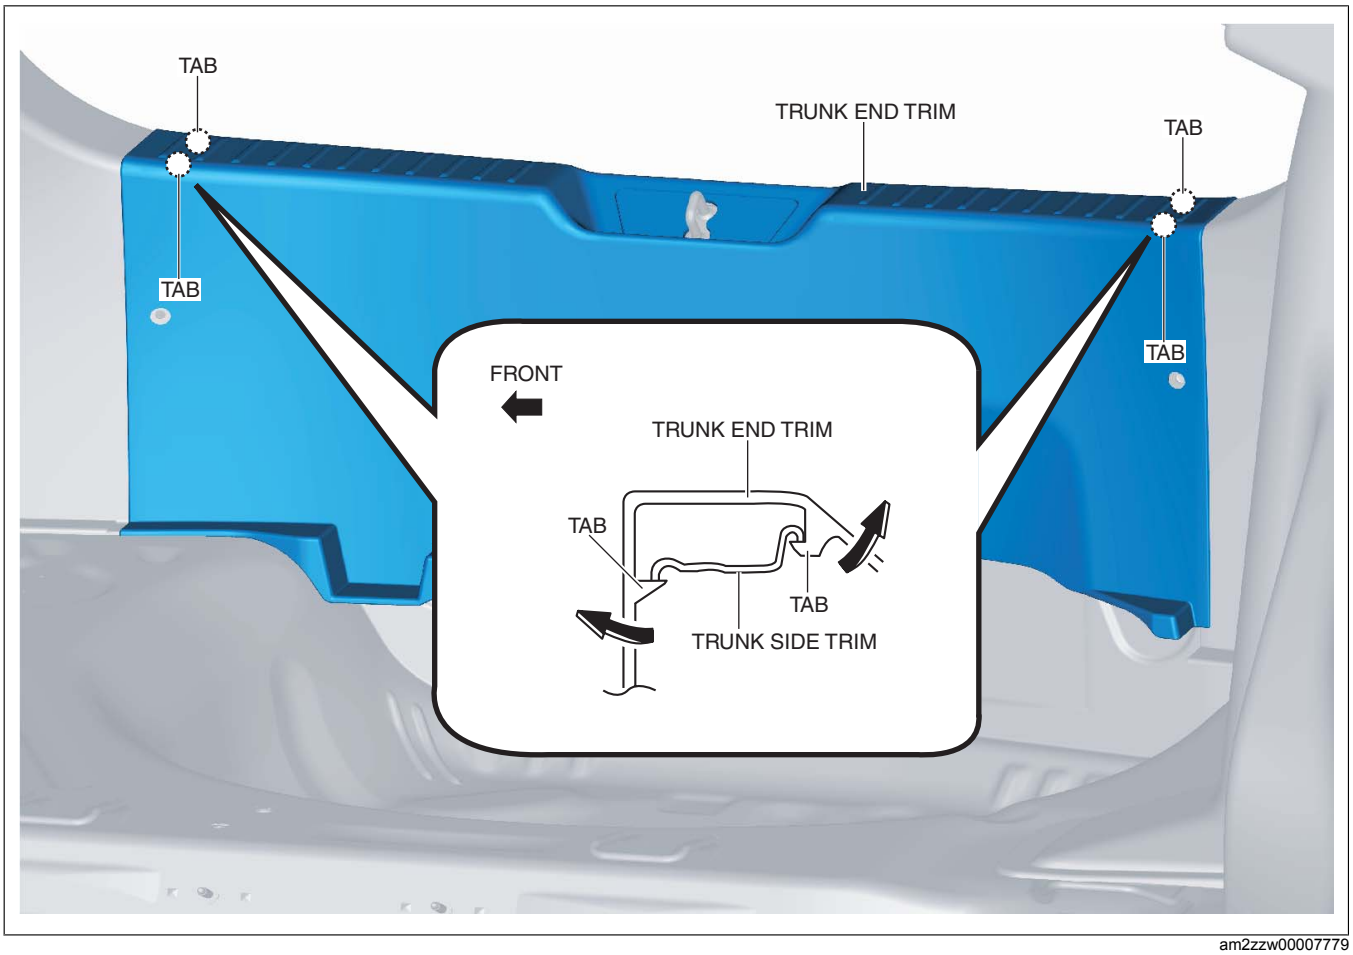

am2zzw00007779

6. Move the trunk end trim in the direction of the arrow shown in the figure, remove it while detaching clips A, pins A, pins B, clips B, and the guides.

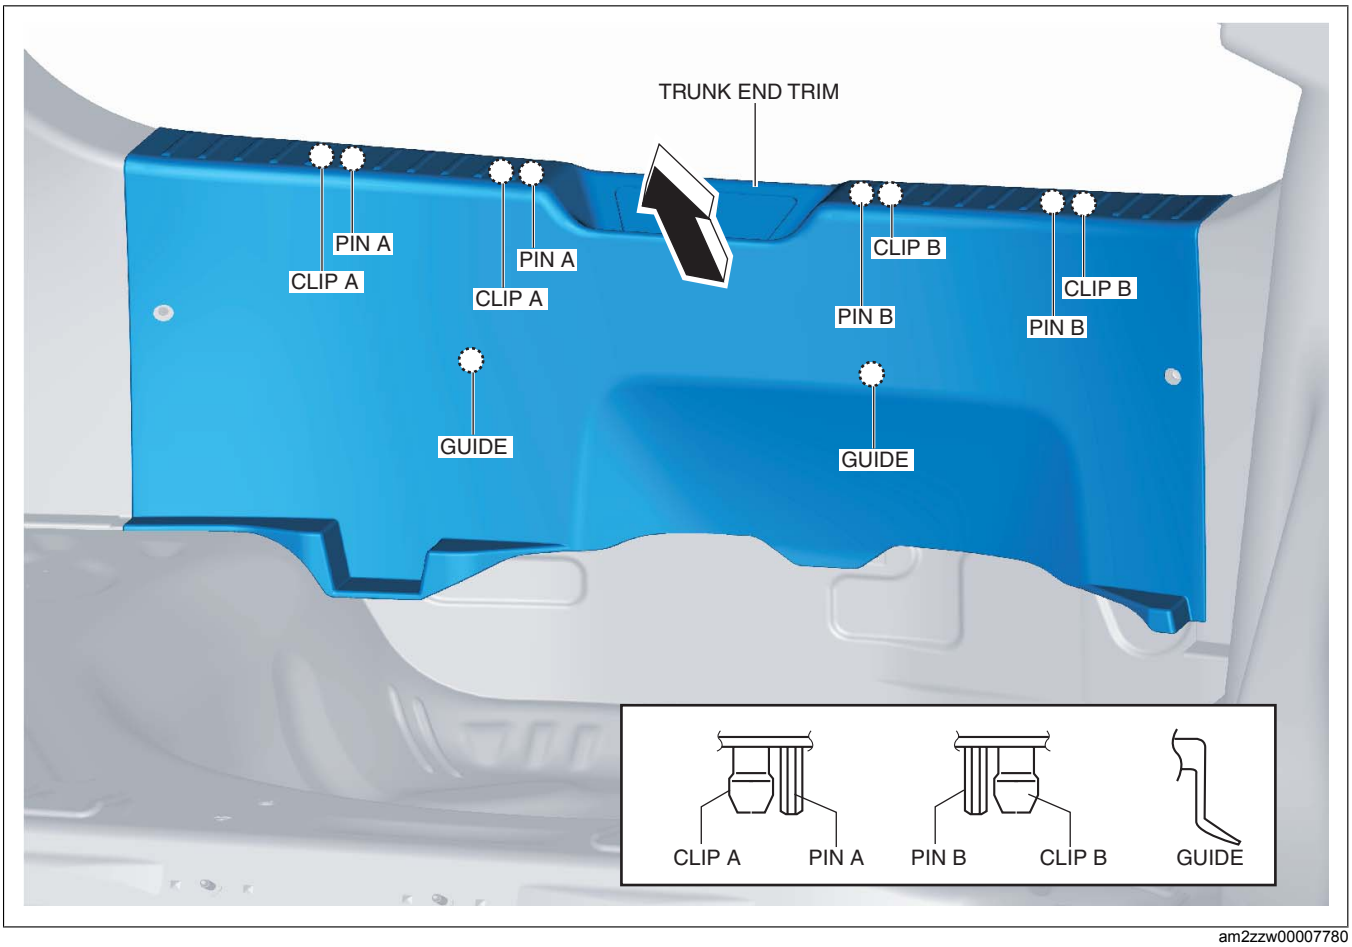


am2zzw00007780

7. Install in the reverse order of removal.


4SD

1. Remove the trunk covering. (See TRUNK COVERING REMOVAL/INSTALLATION.)
2. Remove the trunk board. (See TRUNK BOARD REMOVAL/INSTALLATION.)
3. Partially peel back the seaming welt.
4. Remove the fasteners.

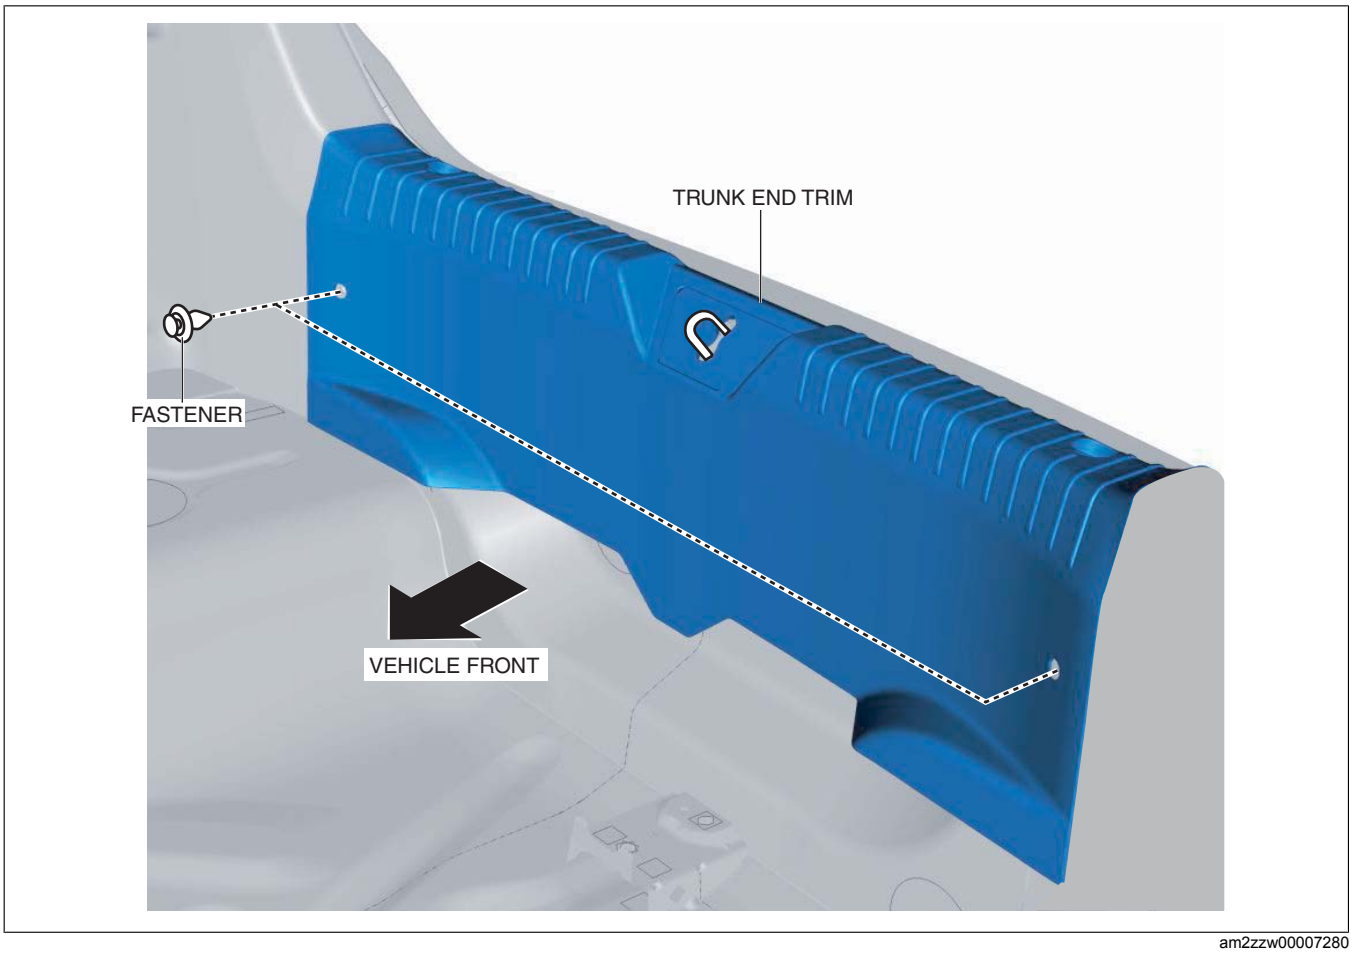


am2zzw00007280

5. Hold the shaded area shown in the figure, move the trunk end trim in the order of arrows (1) and (2), and remove the clips, pins, and guides.

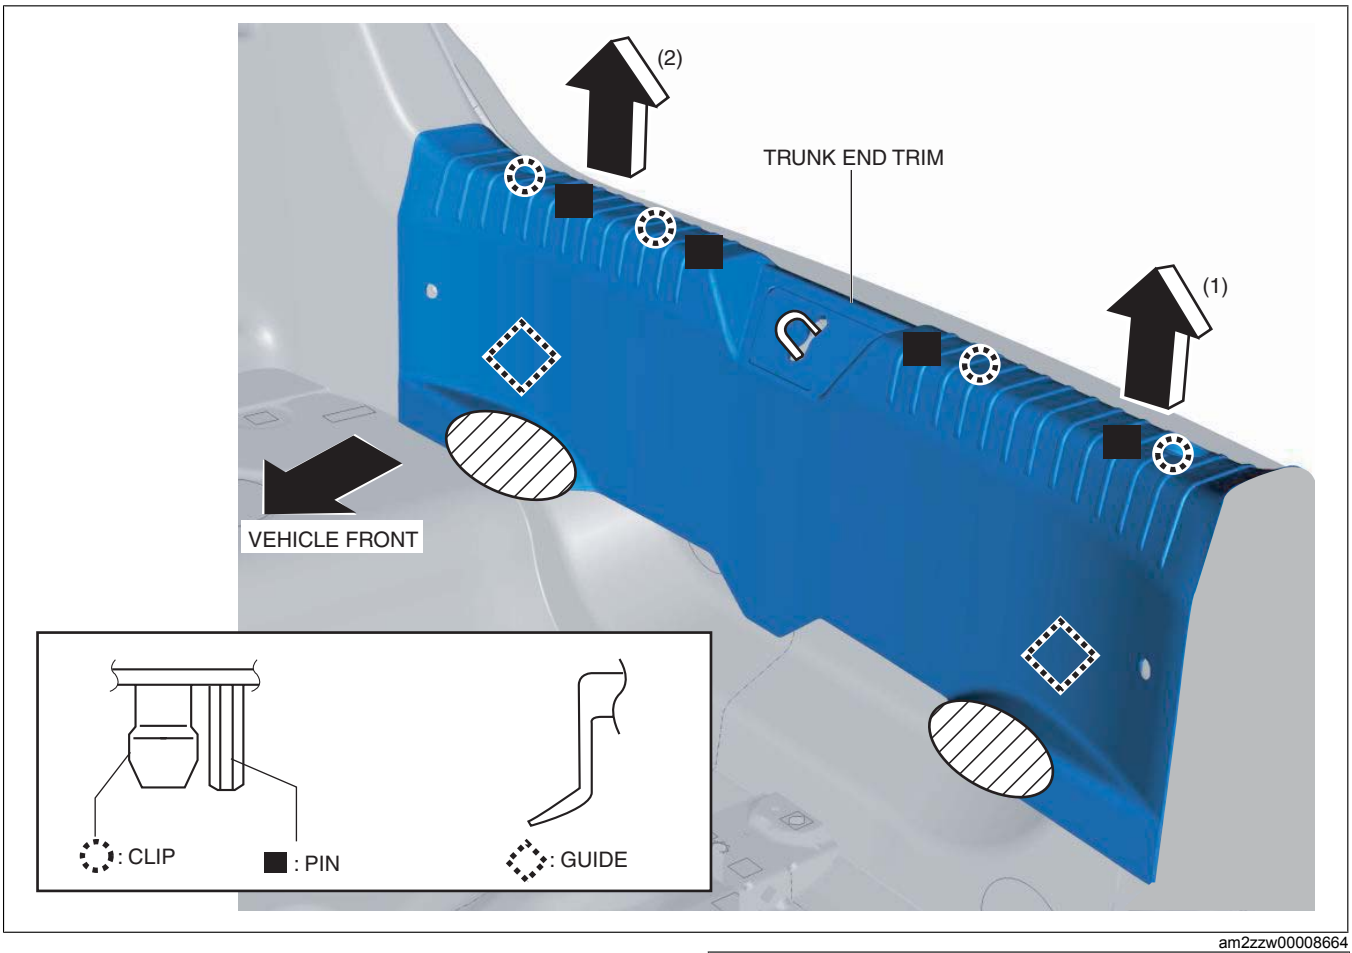

am2zzw00008664

6. Move the trunk end trim in the direction of the arrow shown in the figure and remove it.
7. Install in the reverse order of removal.

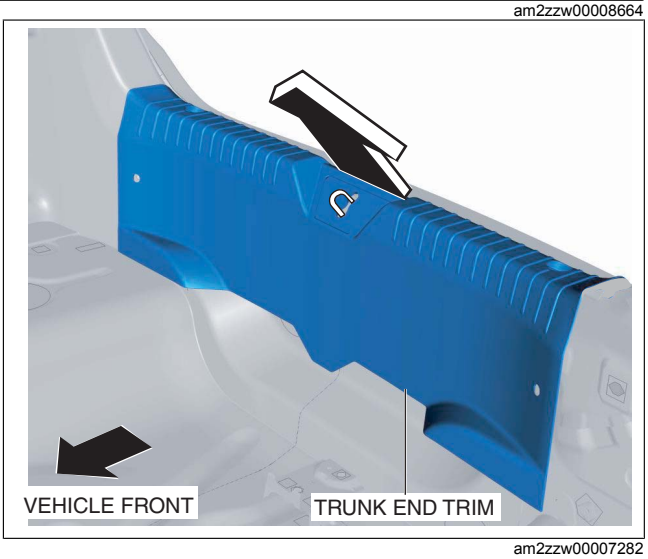

am2zzw00007282