
TRUNK SIDE TRIM REMOVAL/INSTALLATION

id091700604400


5HB

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Rear package tray (See REAR PACKAGE TRAY REMOVAL/INSTALLATION.)
   (2) Trunk covering (See TRUNK COVERING REMOVAL/INSTALLATION.)
   (3) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
   (4) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
   (5) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
   (6) Rear seat cushion (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
   (7) Rear center seat belt lower anchor installation bolt (See REAR SEAT BELT REMOVAL/INSTALLATION.)
   (8) Rear seat back (See REAR SEAT BACK REMOVAL/INSTALLATION.)
3. Remove the fastener.

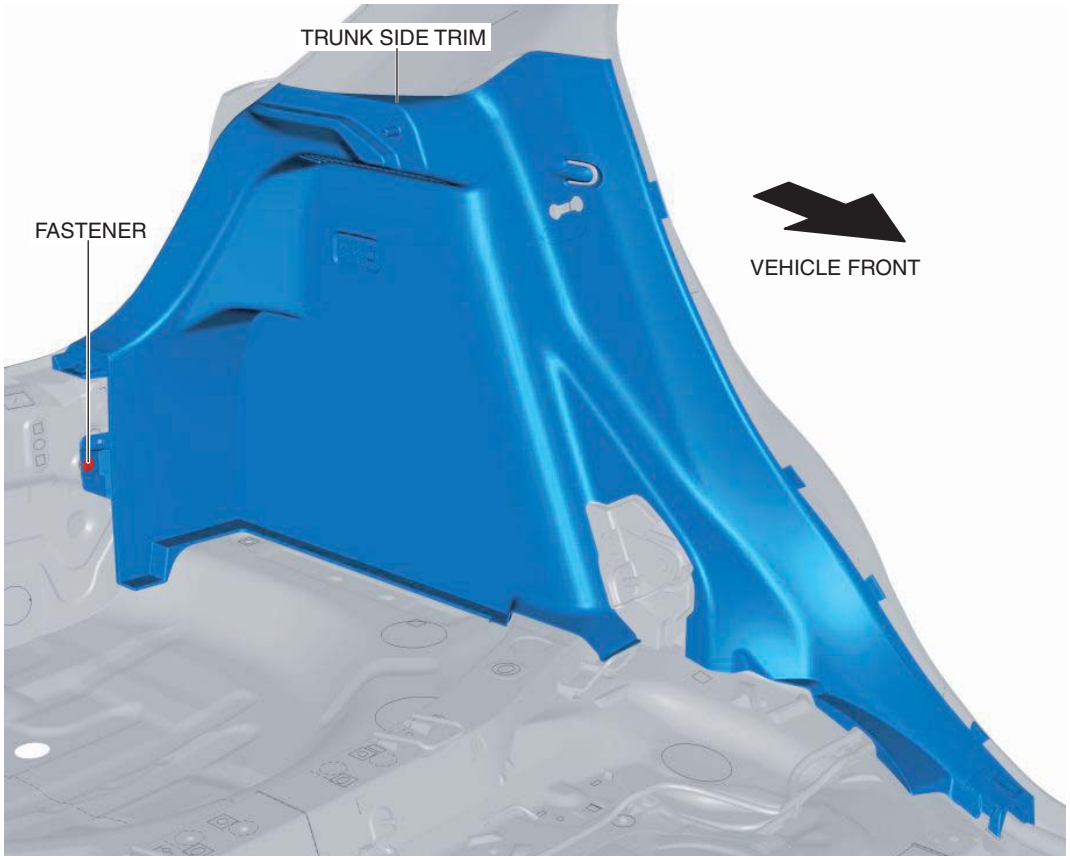


am2zzw00007781

4. Pull the trunk side trim in the order of the arrows shown in the figure and detach clips A, B, and C from the body or the C-pillar trim.

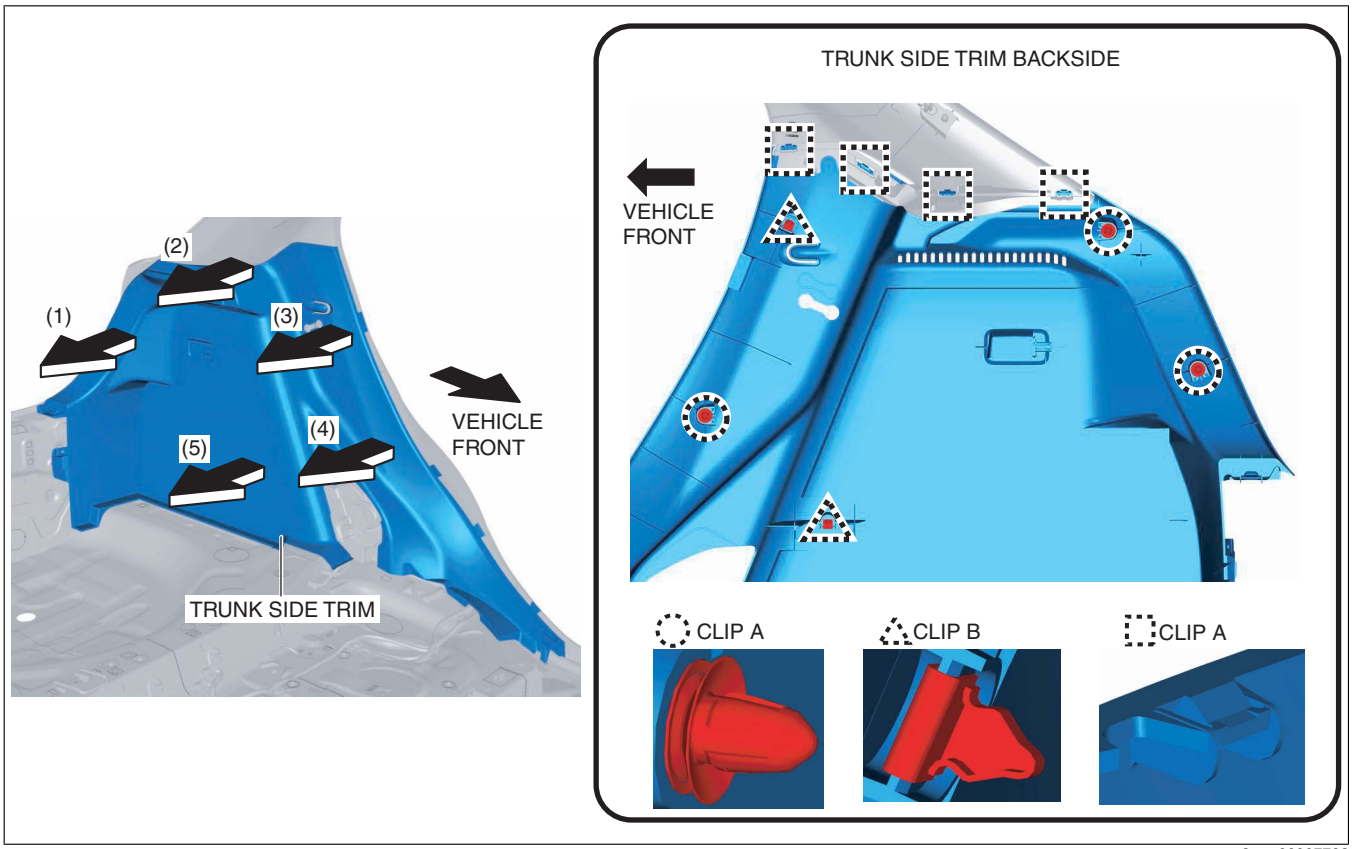

am2zzw00007782

5. Disconnect the connector. (LH only)

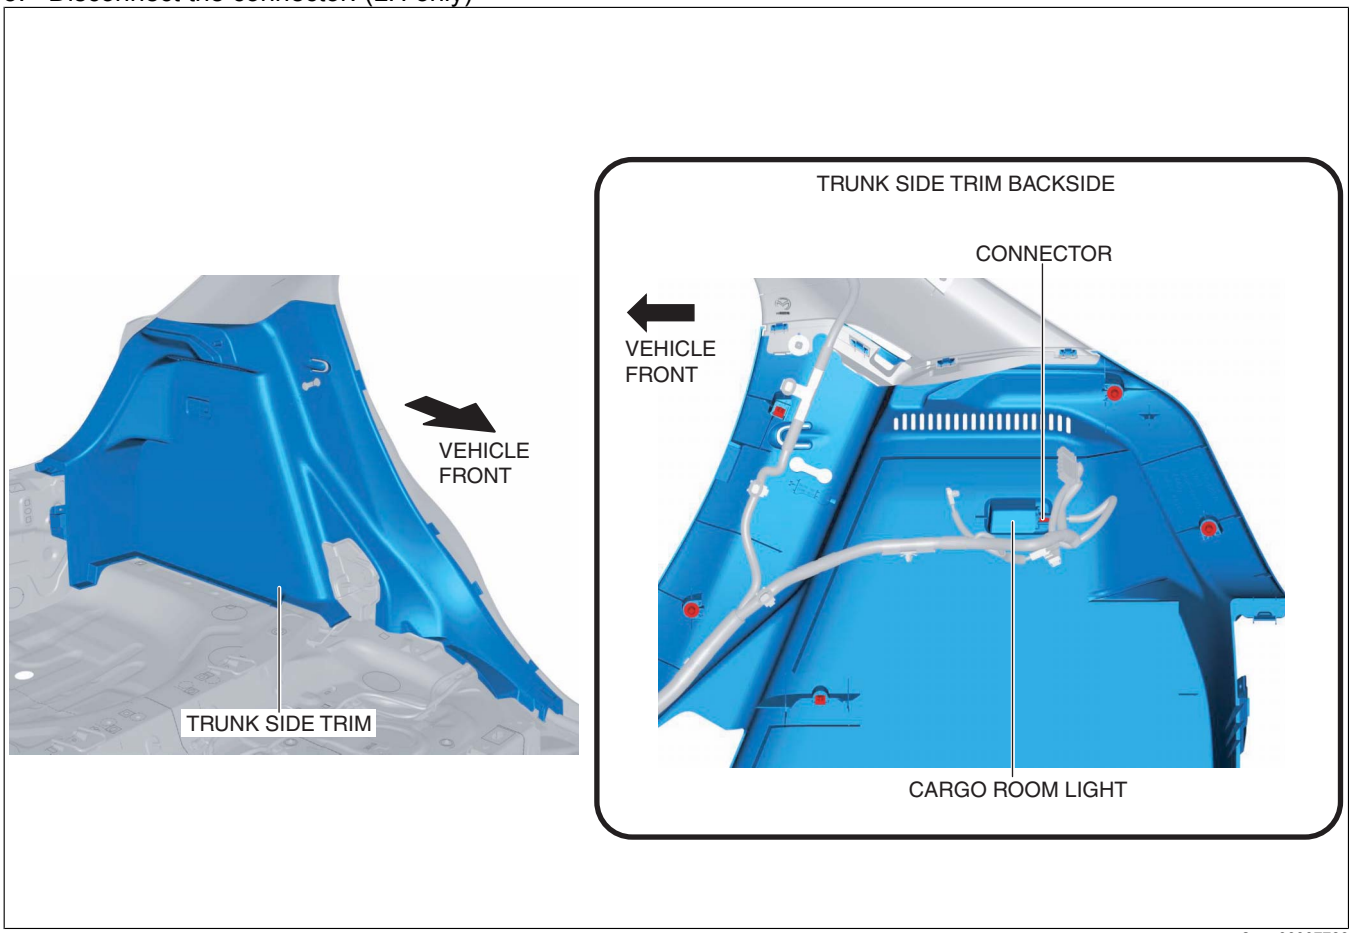


am2zzw00007783

6. Remove the cargo room light. (LH only) (See CARGO COMPARTMENT LIGHT REMOVAL/INSTALLATION.)
7. Install in the reverse order of removal.


4SD

1. Remove the following parts:
   (1) Trunk covering (See TRUNK COVERING REMOVAL/INSTALLATION.)
   (2) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
   (3) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
2. Lower the rear seat back.
3. Partially peel back the seaming welt.
4. Move the tire house trim in the direction of the arrow shown in the figure and peel it back partially until the hooks and clips A and B are detached.

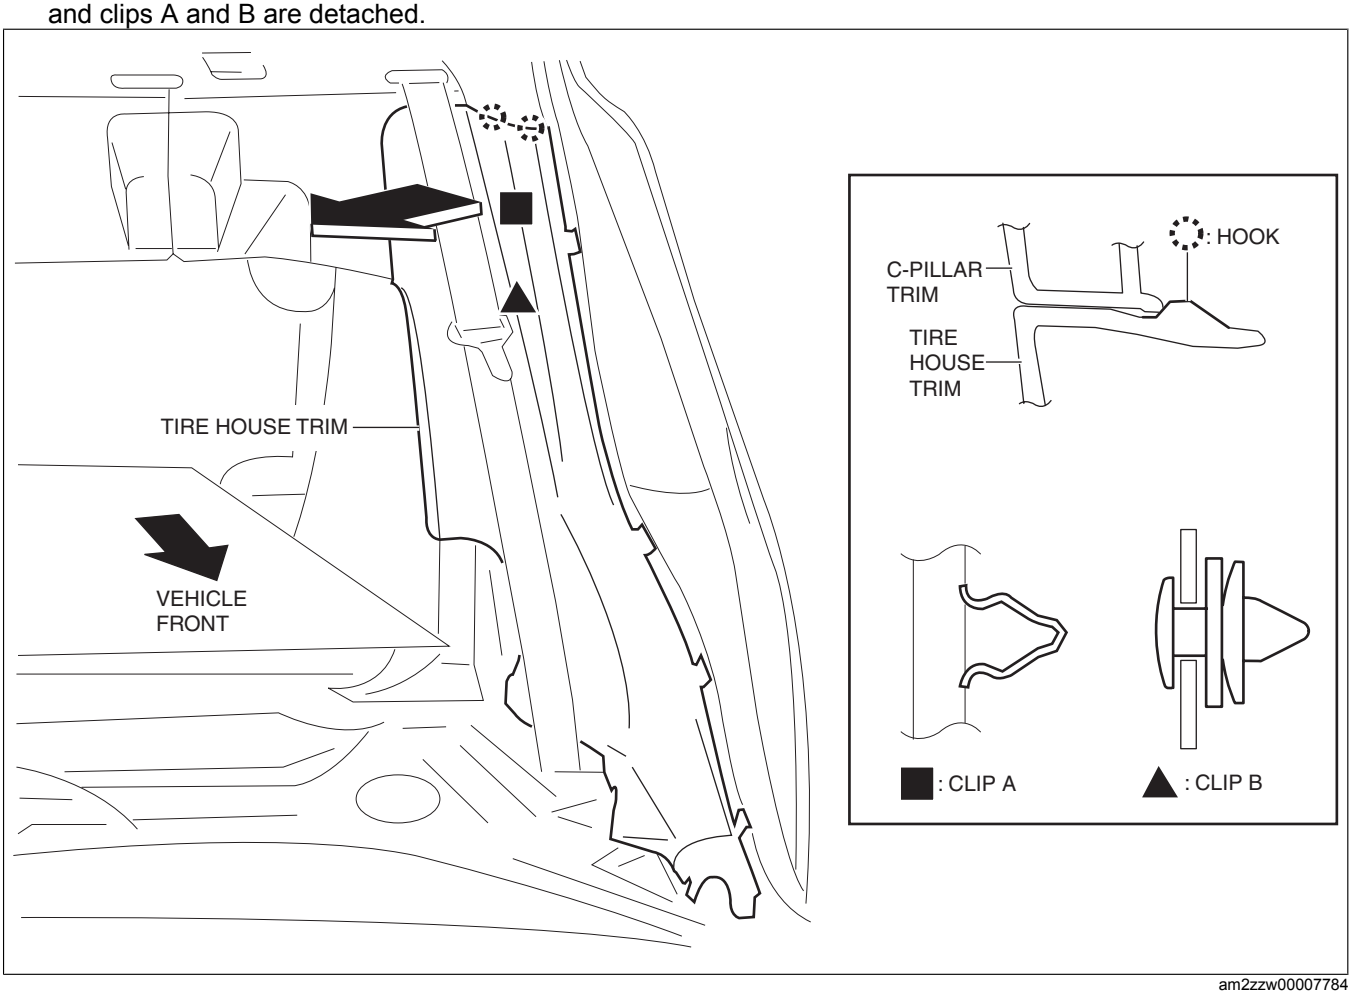


am2zzw00007784

5. Remove the fasteners.

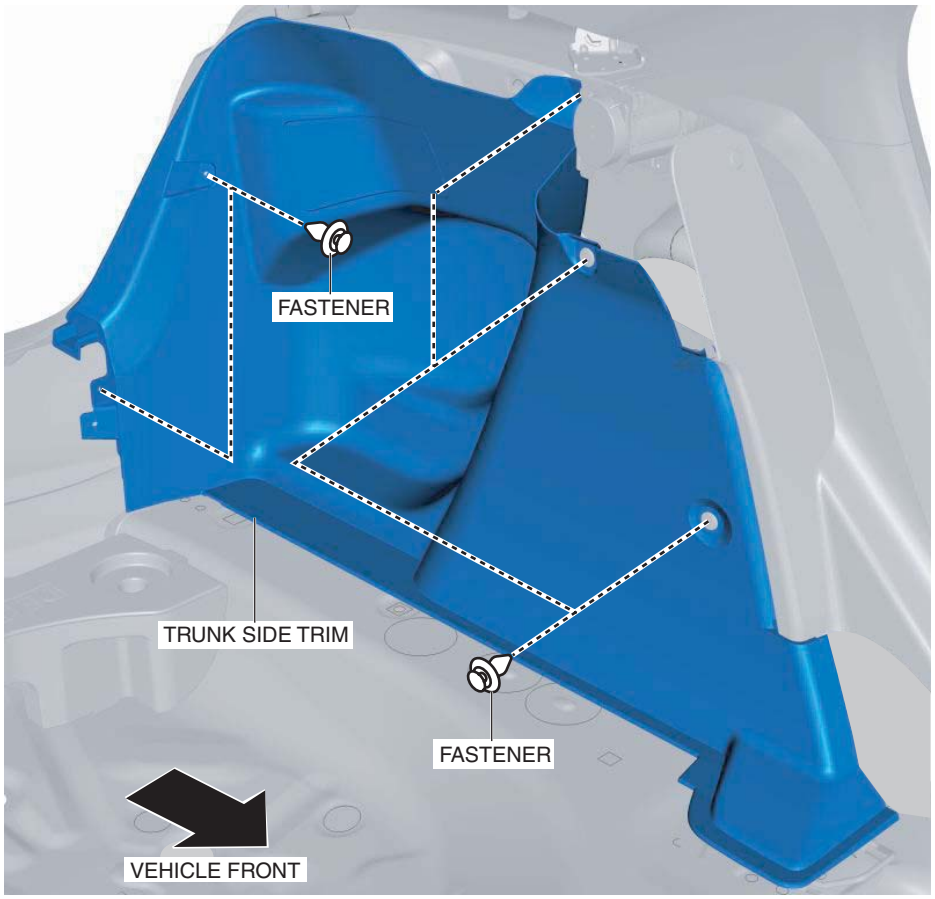

am2zzw00007278

6. Move the trunk side trim in the direction of the arrow shown in the figure and remove it while setting the tire house trim aside.

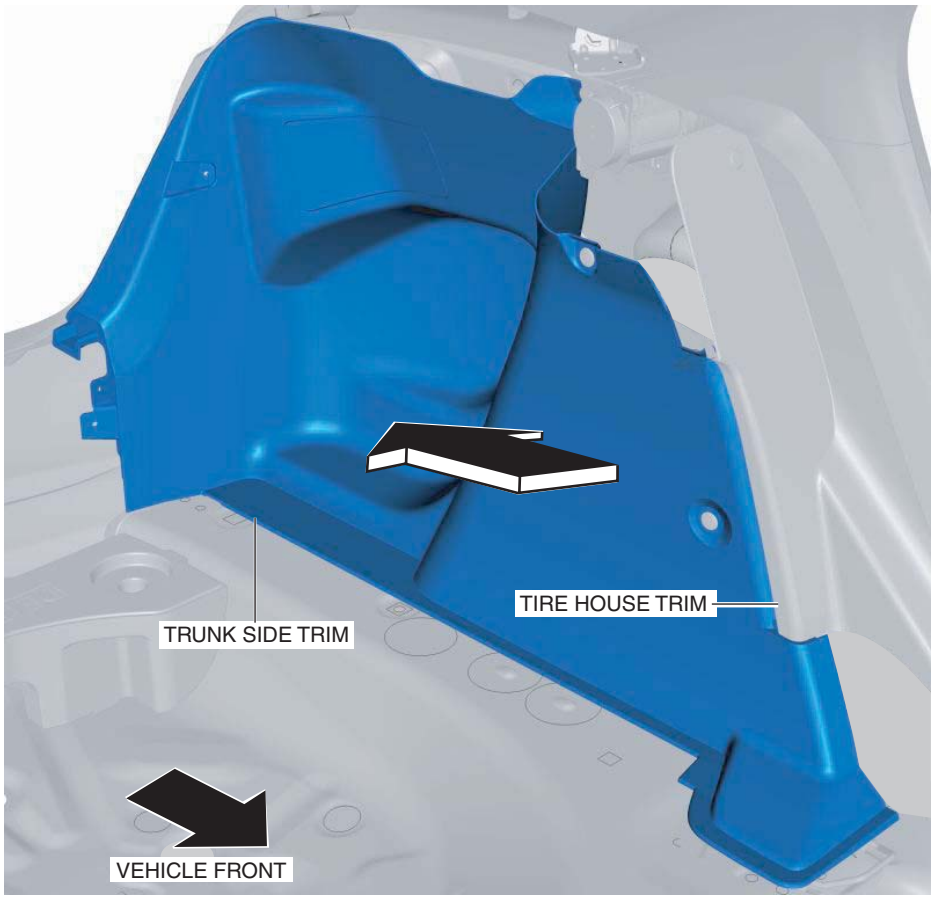

am2zzw00007279

7. Install in the reverse order of removal.