
TRUNK COVERING REMOVAL/INSTALLATION

id091700604600

5HB

1. Remove the trunk covering in the direction of arrow shown in the figure.

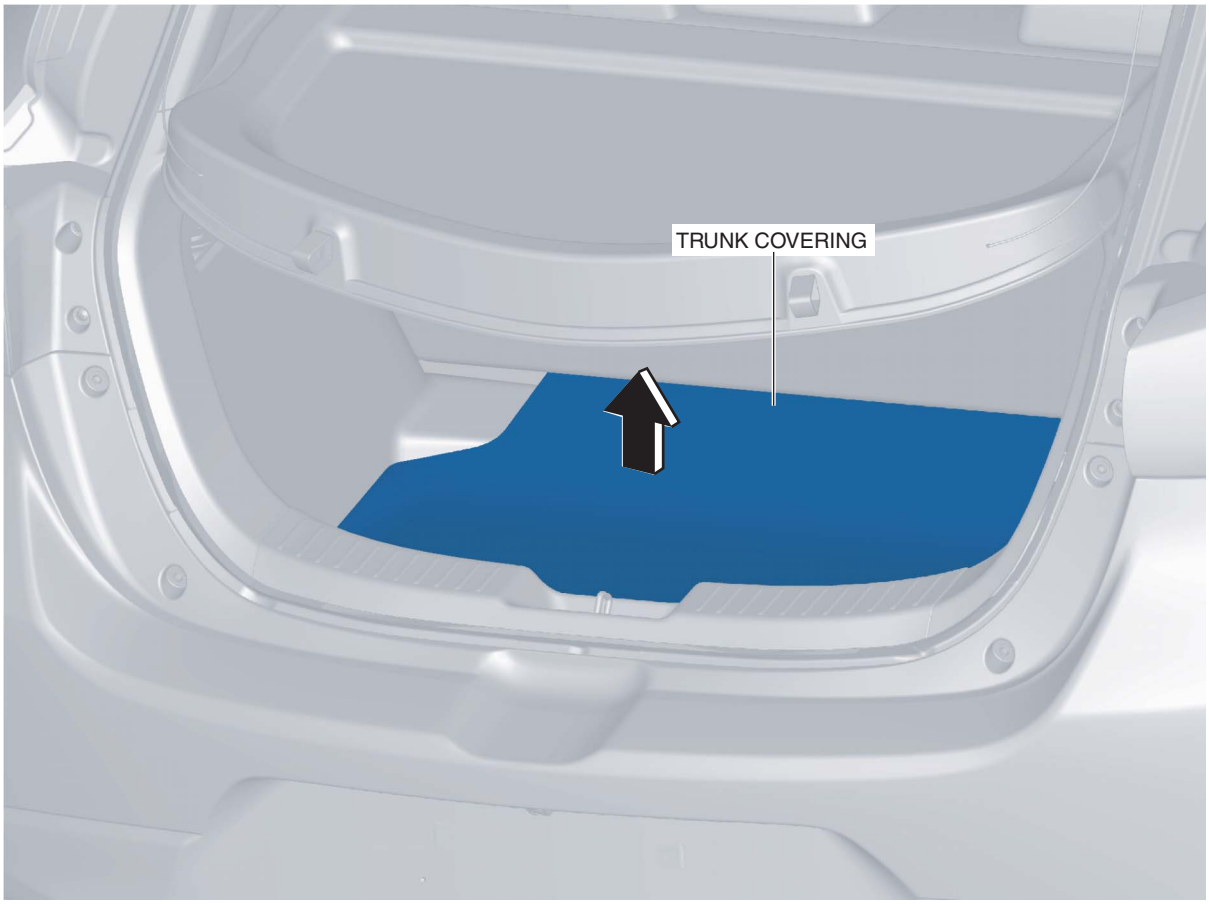


am2zzw00012480

2. Install in the reverse order of removal.

4SD

1. Remove the trunk covering in the direction of arrow shown in the figure.

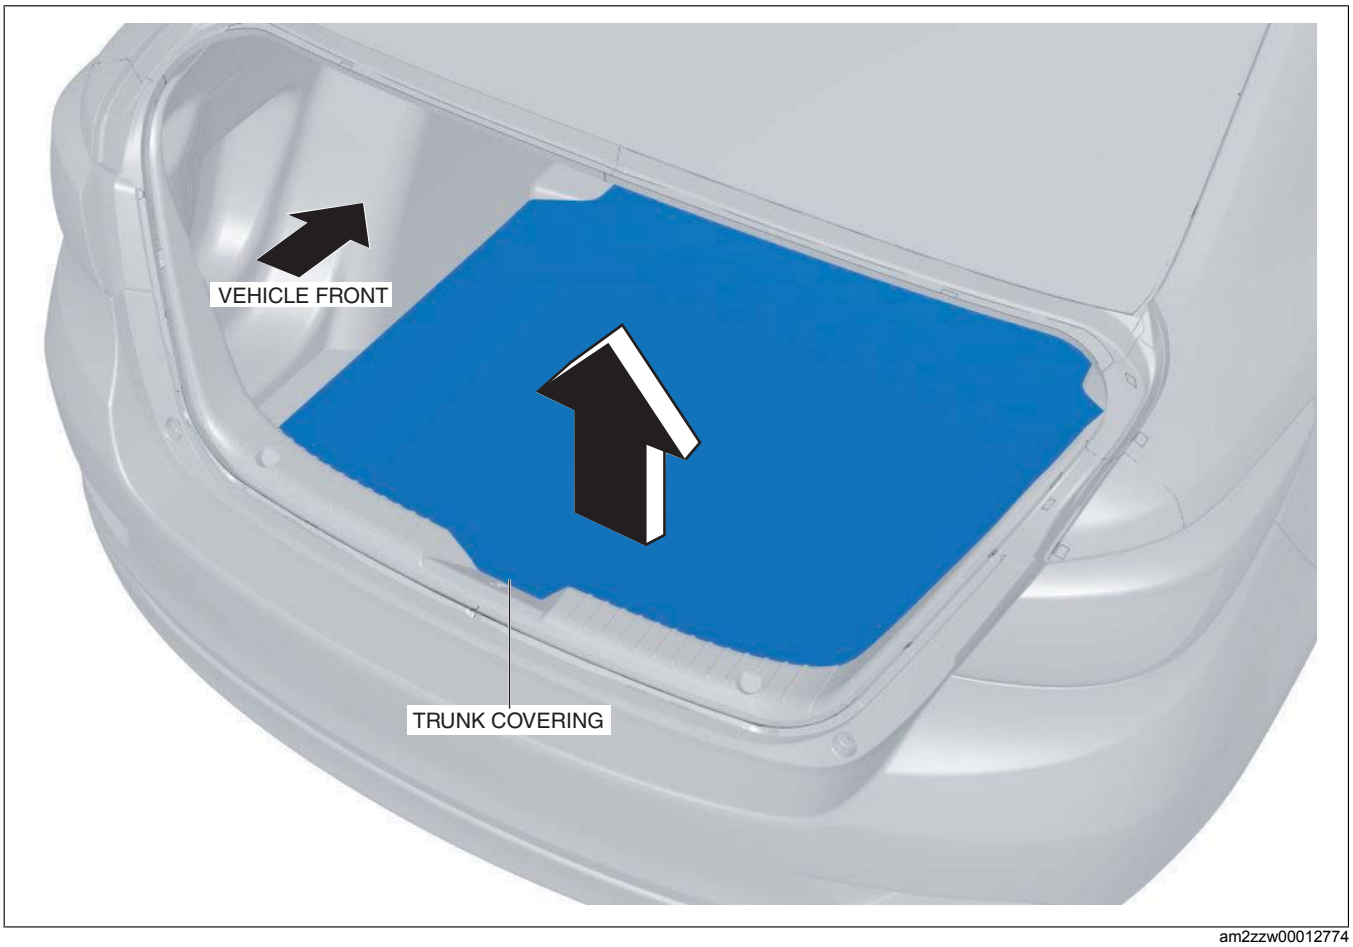

am2zzw00012774

2. Install in the reverse order of removal.