
TRUNK BOARD REMOVAL/INSTALLATION

id091700604700

5HB

1. Remove the trunk covering. (See TRUNK COVERING REMOVAL/INSTALLATION.)
2. Remove trunk board in the direction of the arrow shown in the figure.

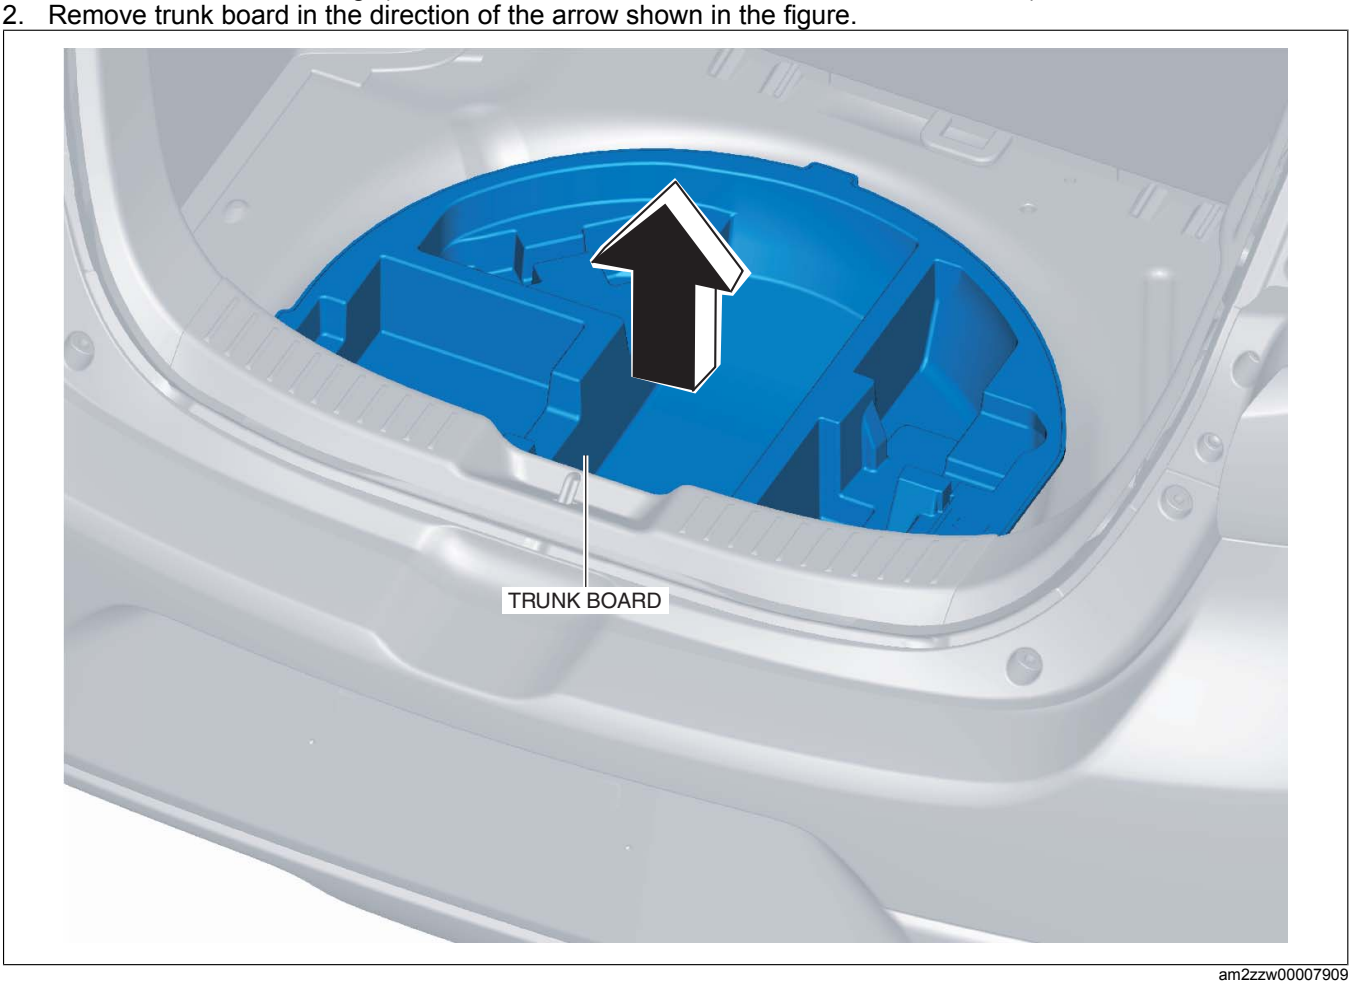


am2zzw00007909

3. Install in the reverse order of removal.

4SD

1. Remove the trunk covering. (See TRUNK COVERING REMOVAL/INSTALLATION.)
2. Remove trunk board in the direction of the arrow shown in the figure.

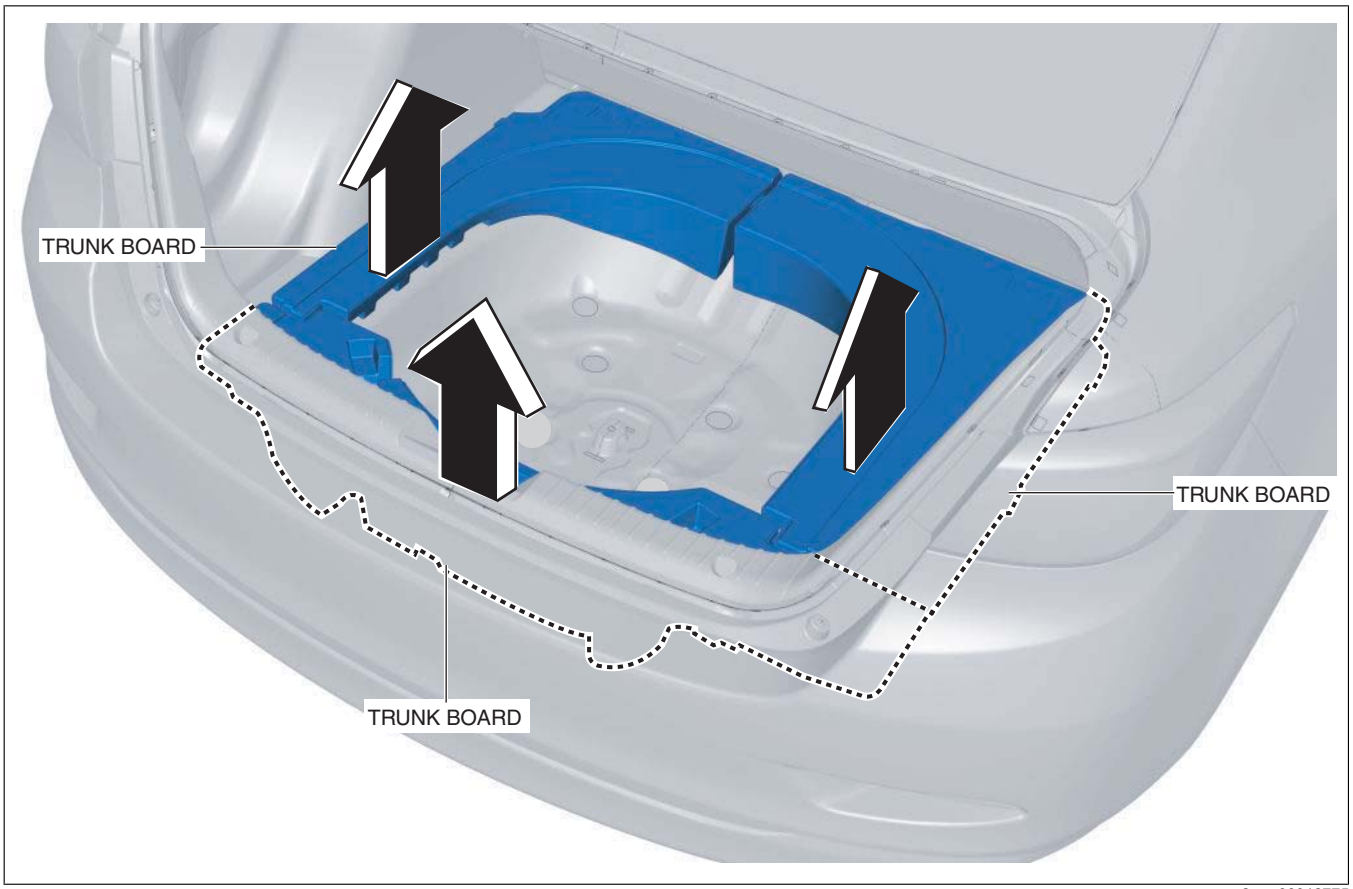

am2zzw00012775

3. Install in the reverse order of removal.