
## FLOOR COVERING REMOVAL/INSTALLATION

id091700605900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Front seat (See FRONT SEAT REMOVAL/INSTALLATION.)
   (2) Lower anchor cover of the front seat belt (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
   (3) Lower anchor bolt of the front seat belt (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
   (4) Center console tray (See CENTER CONSOLE TRAY REMOVAL/INSTALLATION.)
   (5) Shift bezel (See SHIFT BEZEL REMOVAL/INSTALLATION.)
   (6) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
   (7) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F65M-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F66M-R].)
   (8) Selector lever knob (ATX) (See AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.)
   (9) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
   (10) Console side panel (See CONSOLE SIDE PANEL REMOVAL/INSTALLATION.)
   (11) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
   (12) CD player (with CD player) (See CD PLAYER REMOVAL.) (See CD PLAYER INSTALLATION.)
   (13) DVD/CD player (with DVD/CD player) (See DVD/CD PLAYER REMOVAL.) (See DVD/CD PLAYER INSTALLATION.)
   (14) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
   (15) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
   (16) Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
   (17) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (18) Front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (19) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
   (20) B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
   (21) Rear seat cushion (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
   (22) Accelerator pedal (See ACCELERATOR PEDAL REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ACCELERATOR PEDAL REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
   (23) Joint cover (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
   (24) Front heat duct (passenger-side) (See FRONT HEAT DUCT REMOVAL/INSTALLATION.)
3. Set the selector lever component aside. (ATX) (See AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION.)
4. Set the shift lever component aside. (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION [F65M-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F66M-R].)
5. Remove fasteners.

carbasa.com

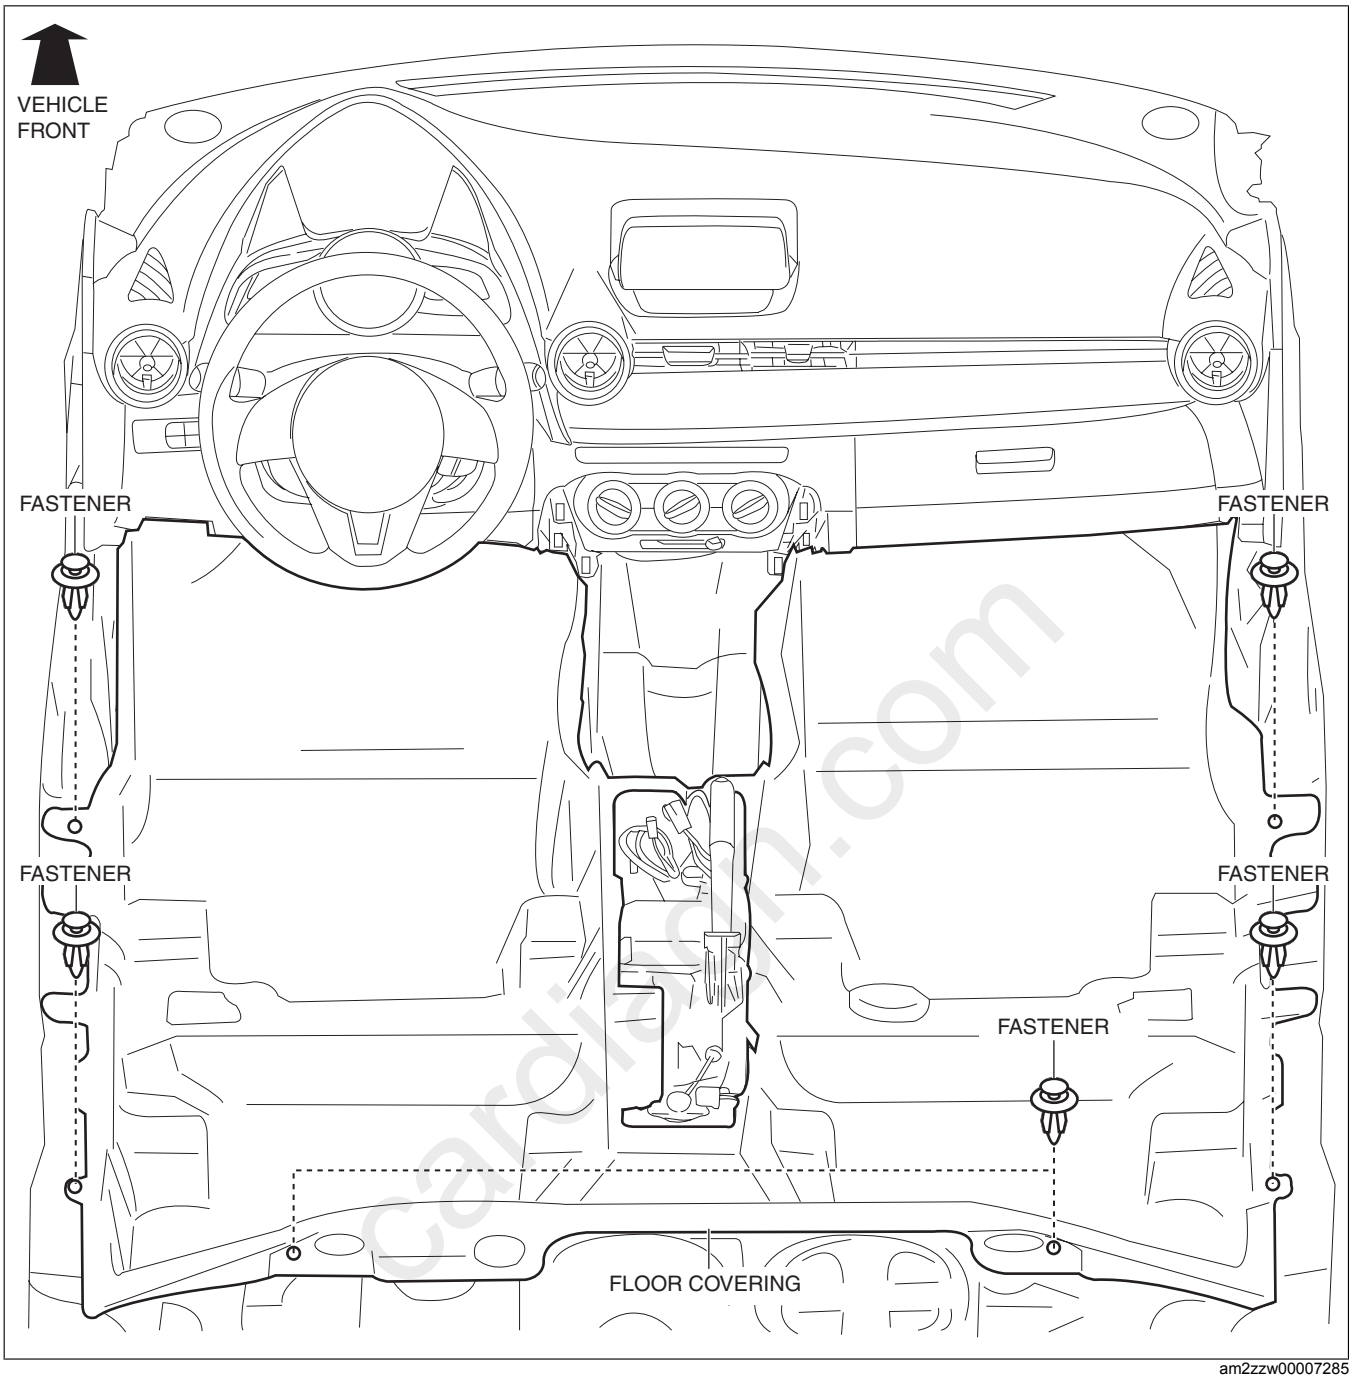


am2zzw00007285

6. Take the floor covering out from the door opening.
7. Install in the reverse order of removal. (See Floor Covering Installation Note.)

**Floor Covering Installation Note**

**Caution**
- **When installing the floor covering, the floor covering may press the A/C unit drain hose and deform it. When installing the floor covering, align the floor covering to the body to prevent deforming the A/C unit drain hose.**


1. Place the floor covering with it aligned to the body.
2. Before installing the side wall, verify that the A/C unit drain hose is not deformed.

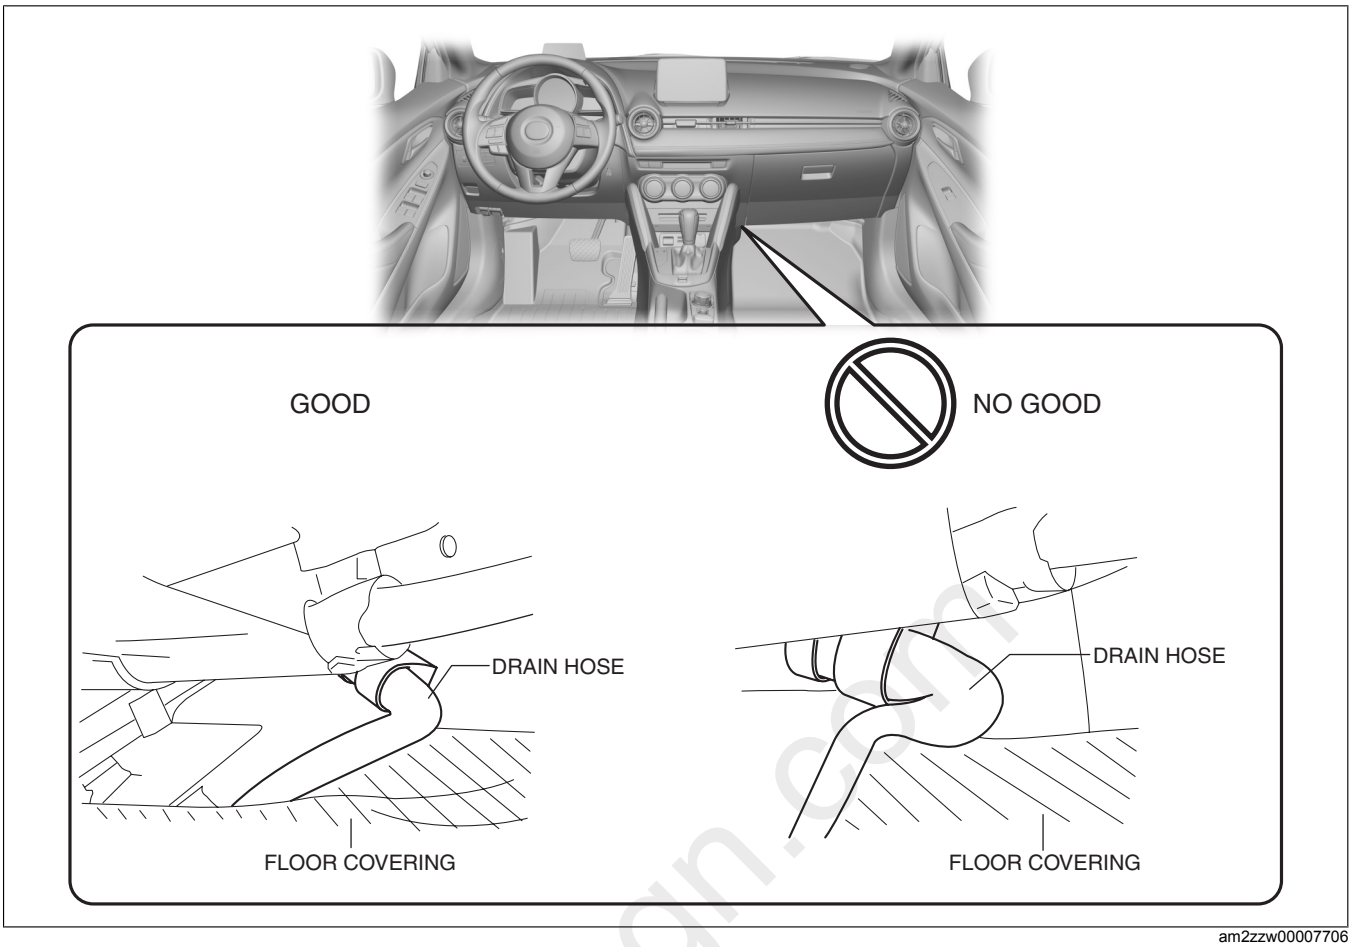


am2zzw00007706

- If the rear seat cushion lock lever is covered by the floor mat, the rear seat cushion lock cannot be released. When installing the floor mat, do not cover the rear seat cushion lock lever with the mat.

cardiagn.com

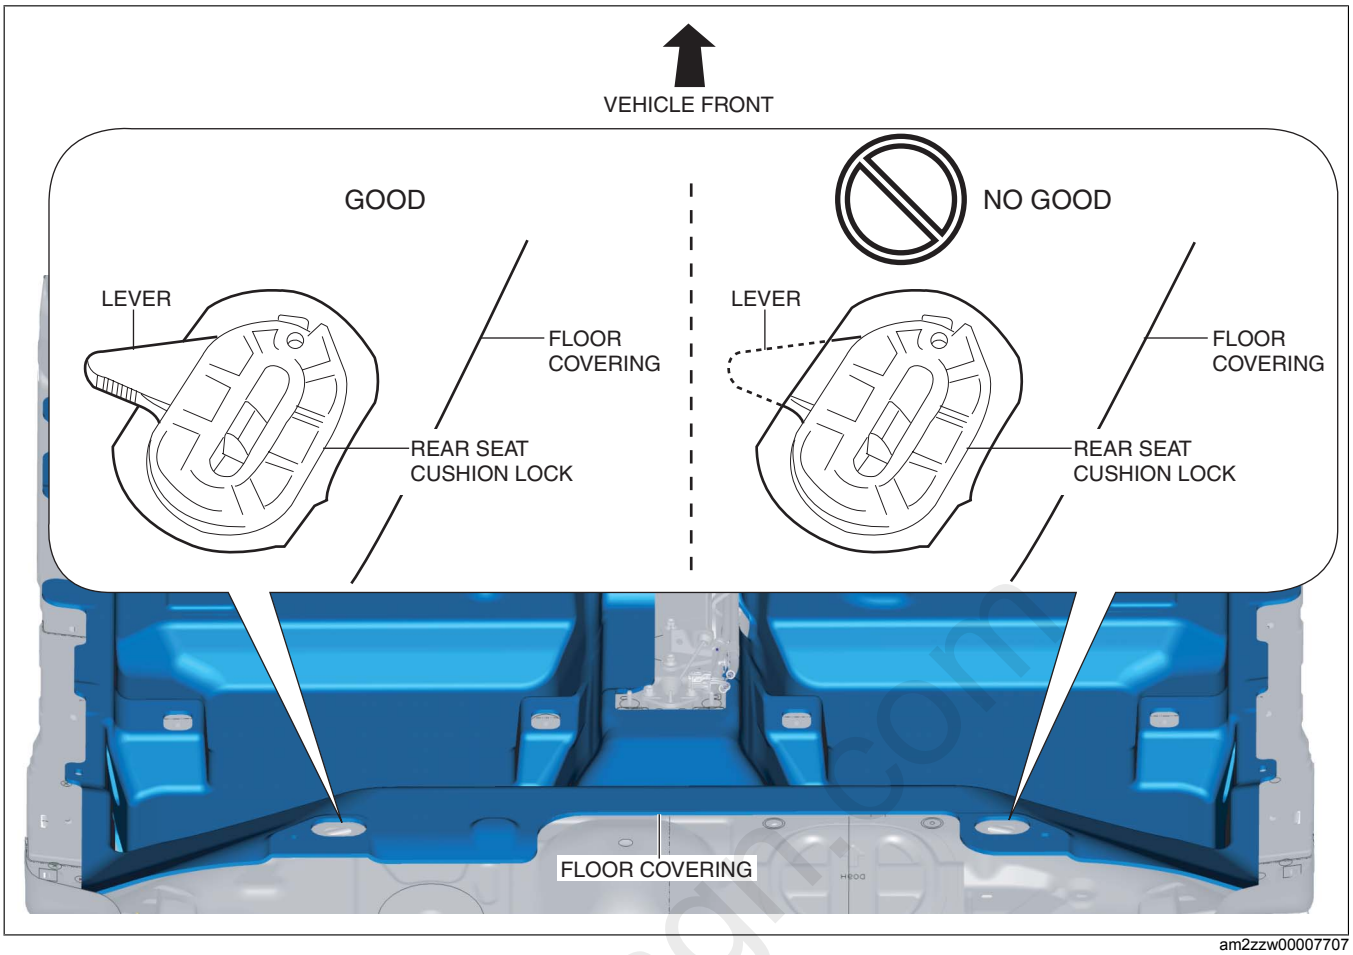


am2zzw00007707

cardiagn.com