
DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION


id091700606200

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Driver-side front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Driver-side front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (3) Bonnet release lever (See BONNET RELEASE LEVER AND RELEASE CABLE REMOVAL/ INSTALLATION.)
   (4) Fuel-filler lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)
3. Partially peel back the seaming welt.
4. Remove the bolt.

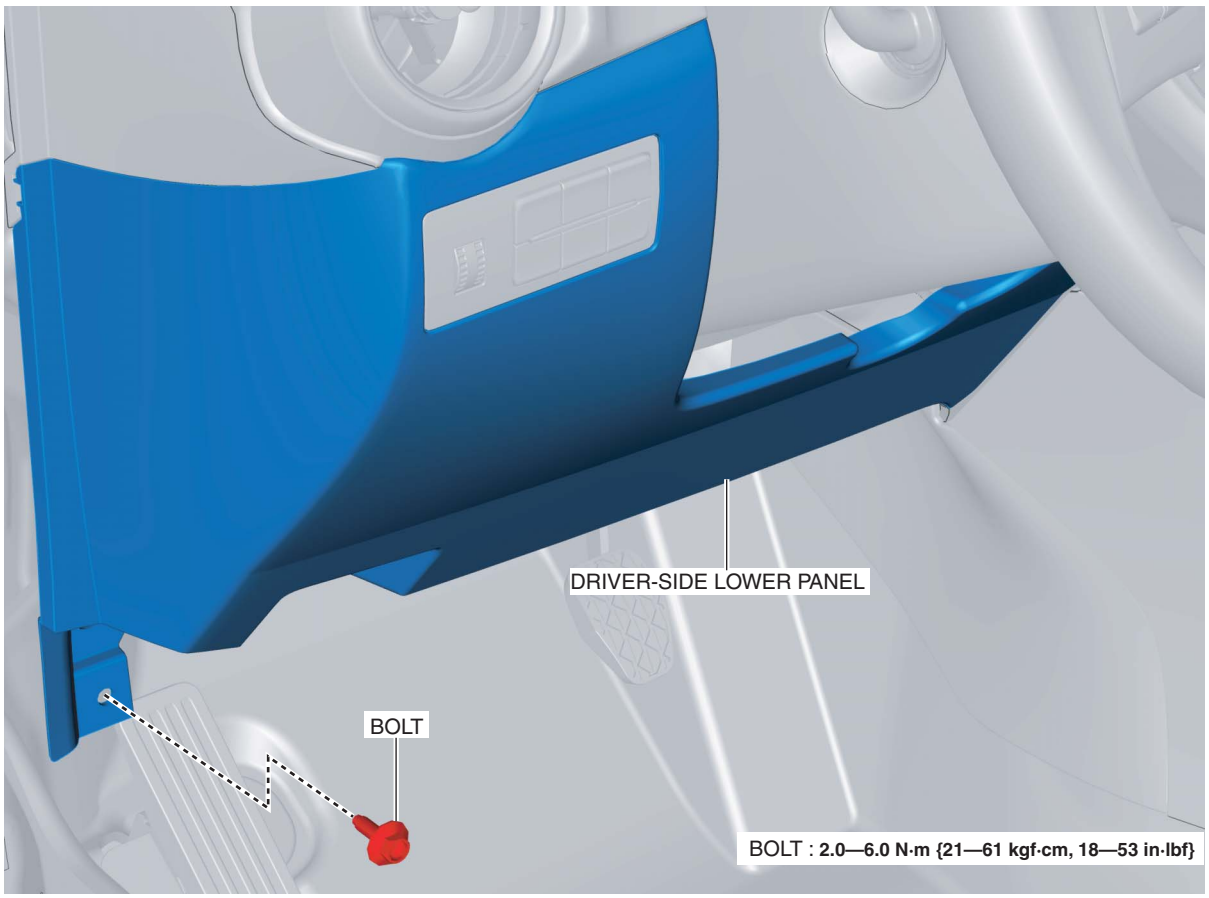


am2zzw00007606

5. Move the driver-side lower panel in the order of arrows (1), (2), and (3) shown in the figure, and detach clips A and B, and the hooks.

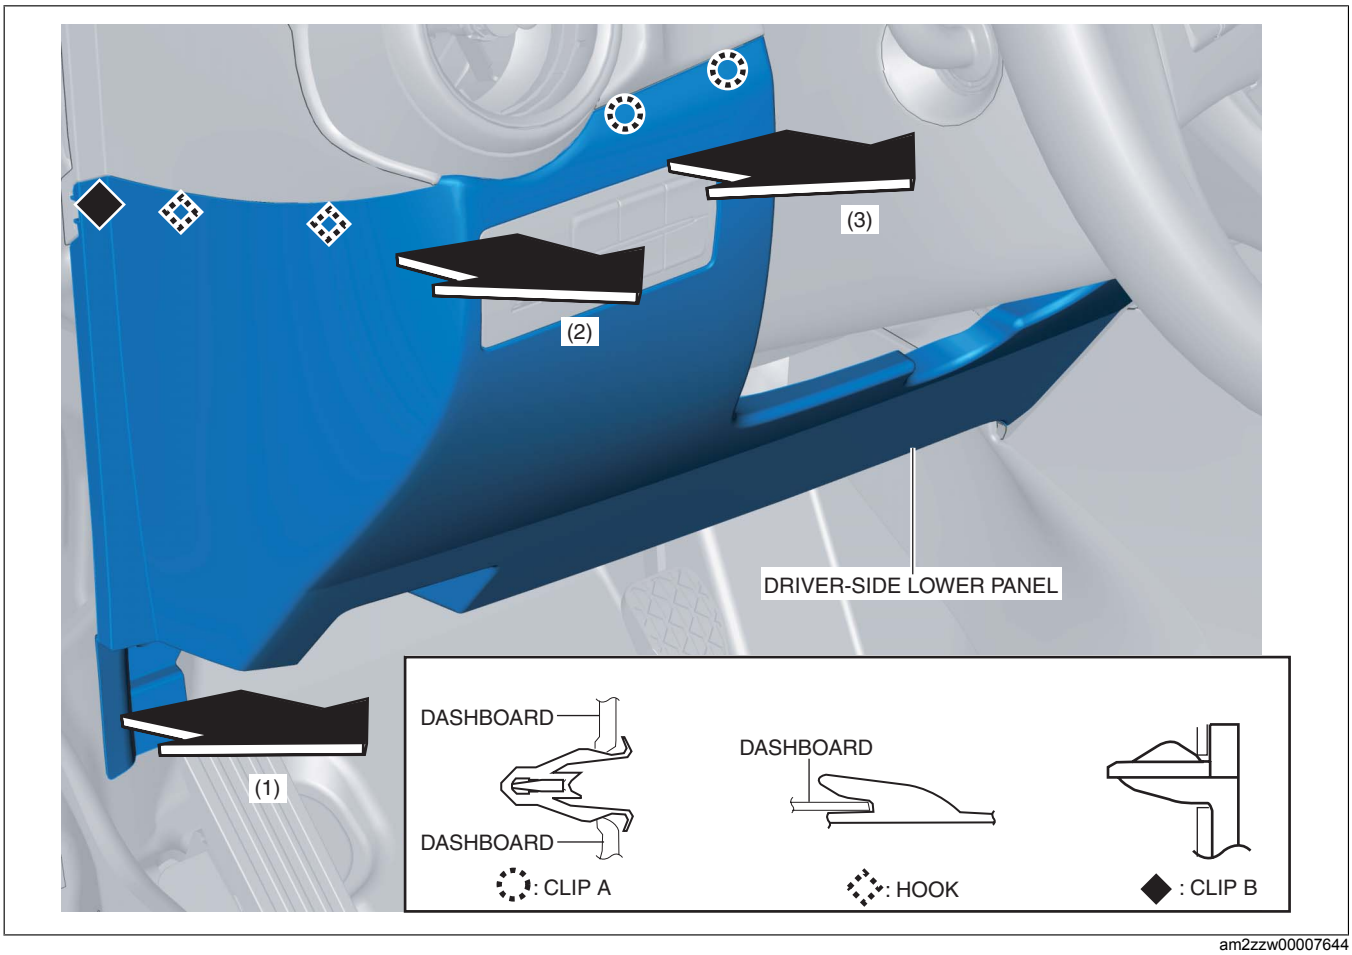


am2zzw00007644

6. Move the driver-side lower panel in the order of arrows (1) and (2) shown in the figure, and detach clips A and B, and the guide.

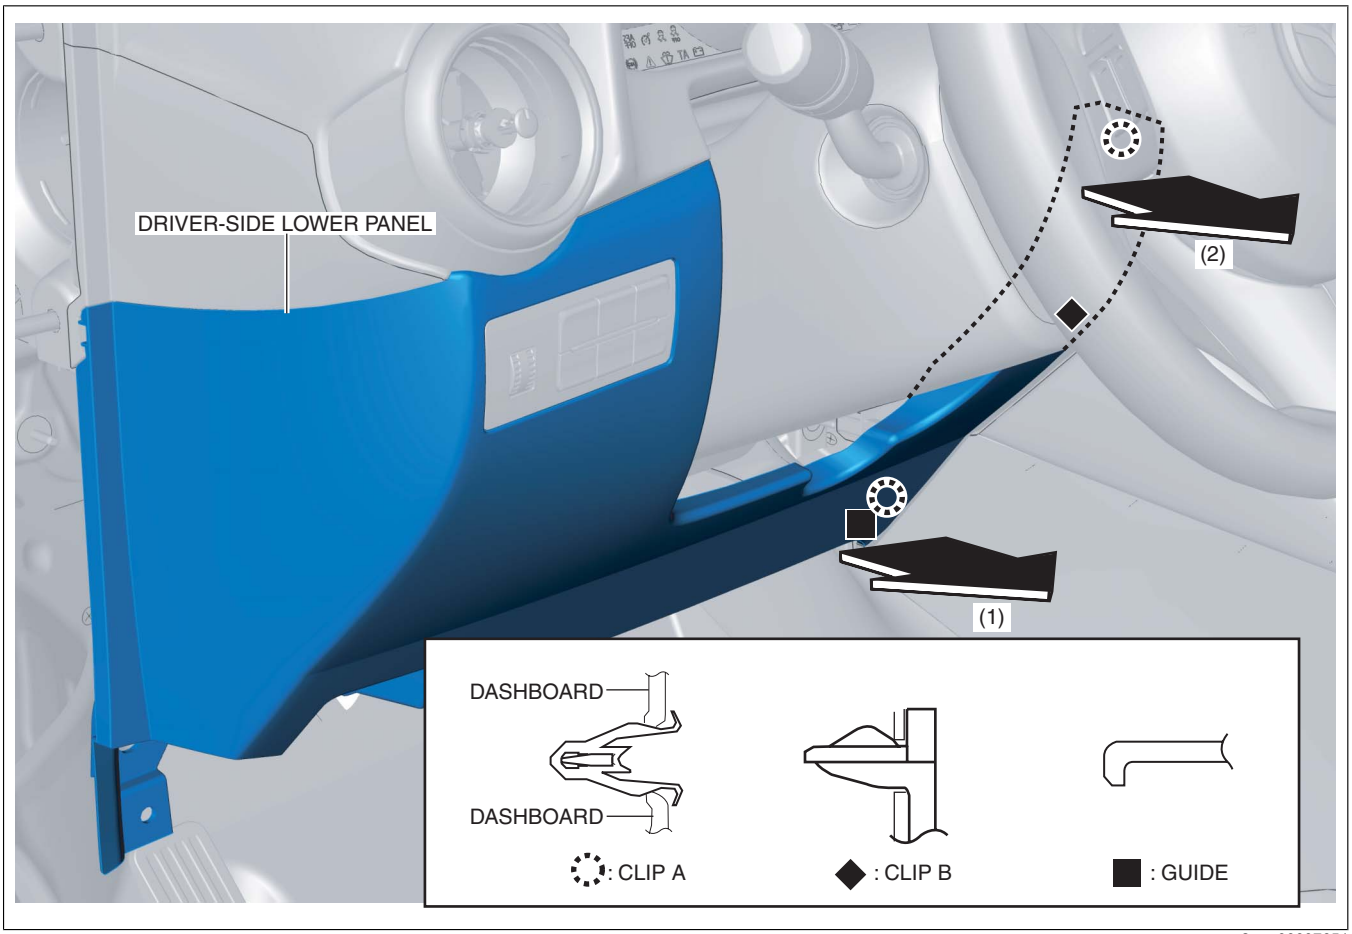


am2zzw00007651

7. Disconnect the cluster switch connector.
8. Remove the clip.
9. Remove the DLC-2 connector.
10. Remove the screw.

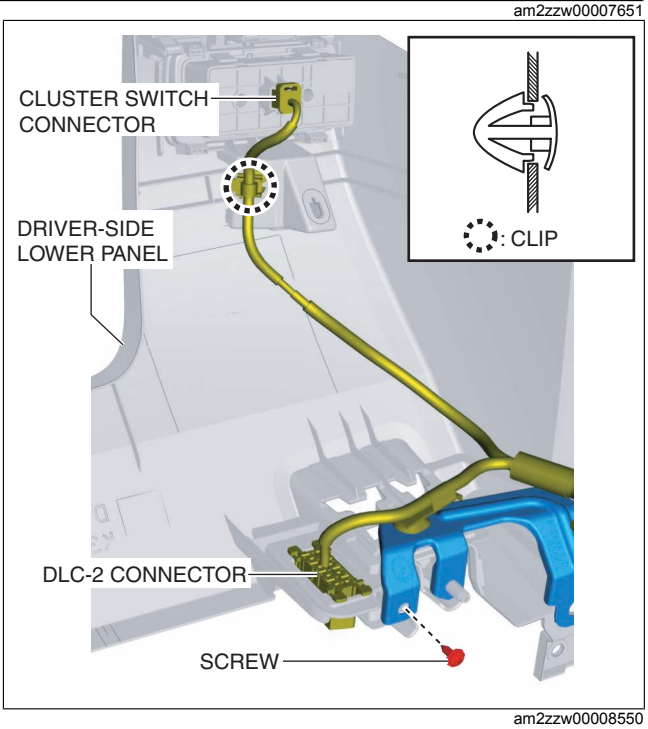

am2zzw00008550

11. Remove the bracket.
12. Remove the driver-side lower panel.
13. Remove the cluster switch when replacing the driver-side lower panel. (See CLUSTER SWITCH REMOVAL/INSTALLATION.)
14. Install in the reverse order of removal.

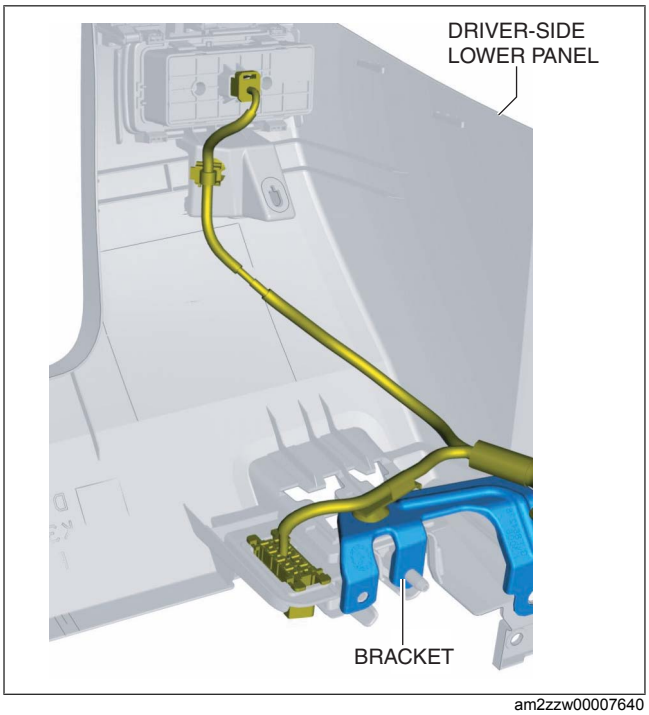

am2zzw00007640