
CONSOLE SIDE PANEL REMOVAL/INSTALLATION

id091700606600

Removal

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Center console tray (See CENTER CONSOLE TRAY REMOVAL/INSTALLATION.)
   (2) Shift bezel (See SHIFT BEZEL REMOVAL/INSTALLATION.)
   (3) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
   (4) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F65M-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F66M-R].)
   (5) Selector lever knob (ATX) (See AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION.)
   (6) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
3. Pull the console side panel in the direction of the arrow shown in the figure and detach the clips and hooks from the front console.

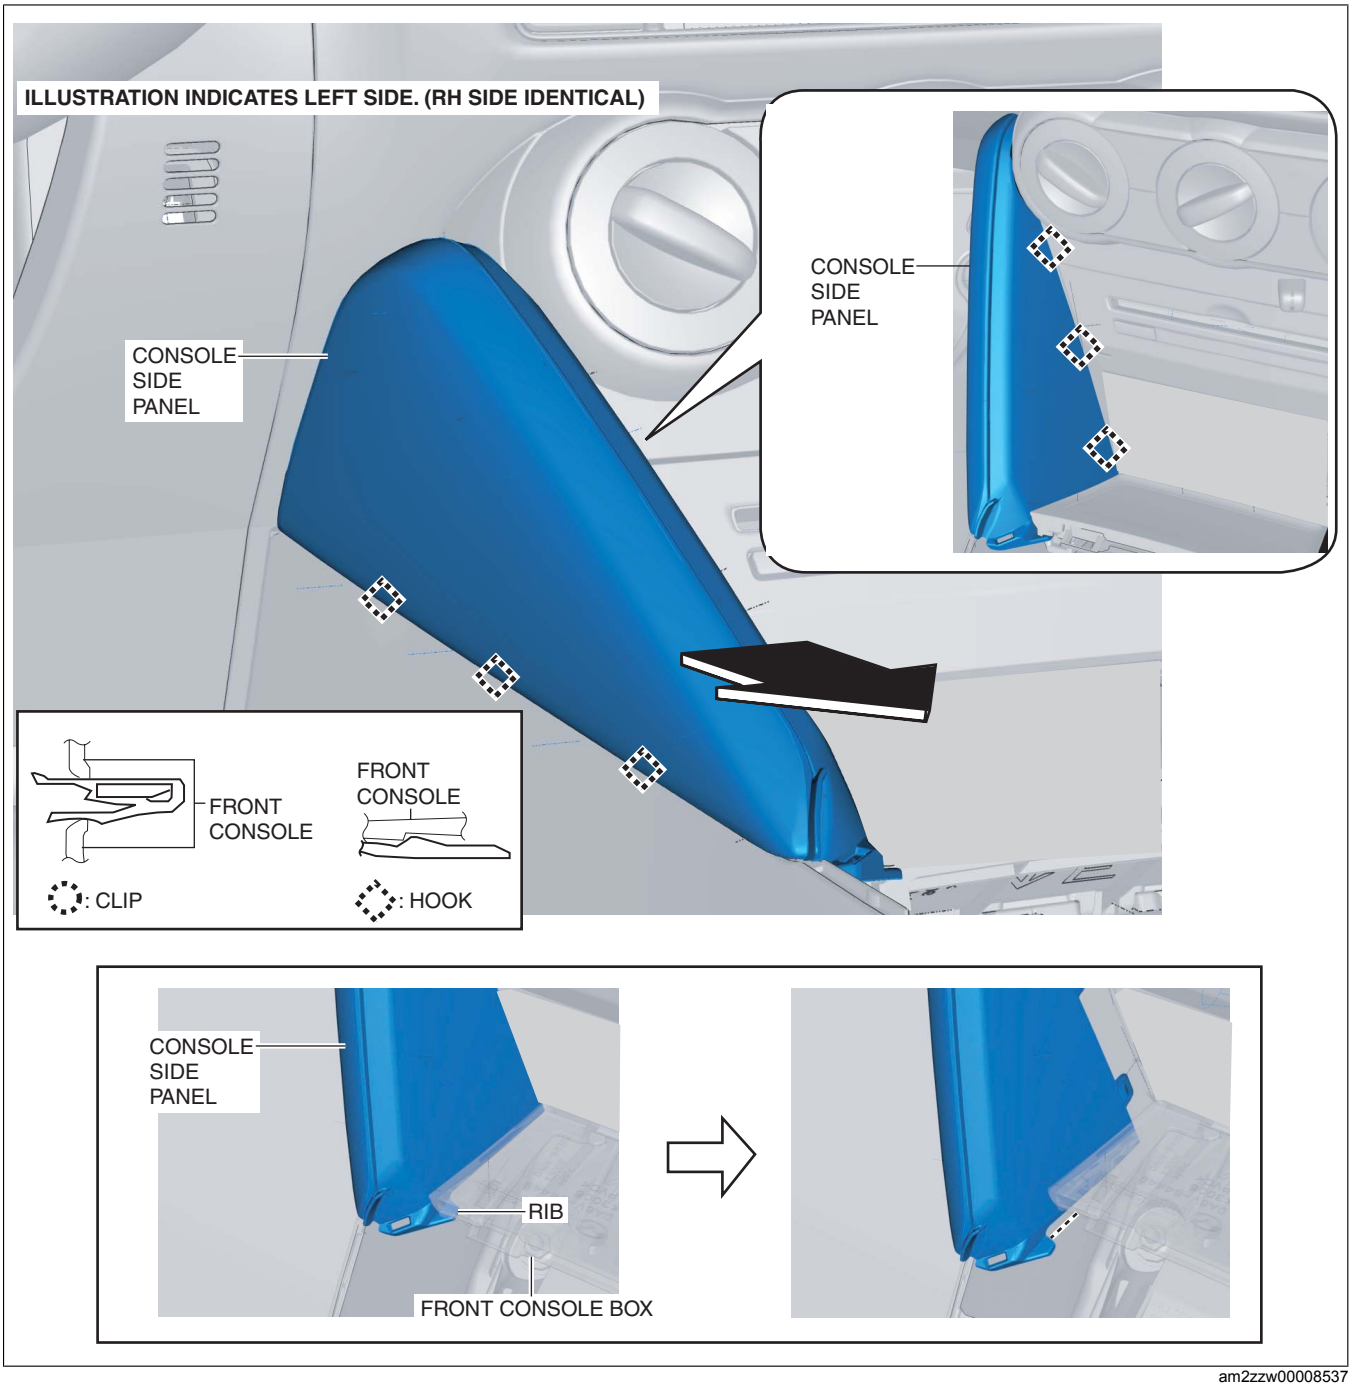


am2zzw00008537

4. Pull the console side panel in the direction of the arrow shown in the figure and remove it while releasing the rib.


Installation

1. While inserting the console side panel rib into the clearance between the front console and the front console box, press in the console side panel in the direction of the arrow shown in the figure while fitting it to the front console box.

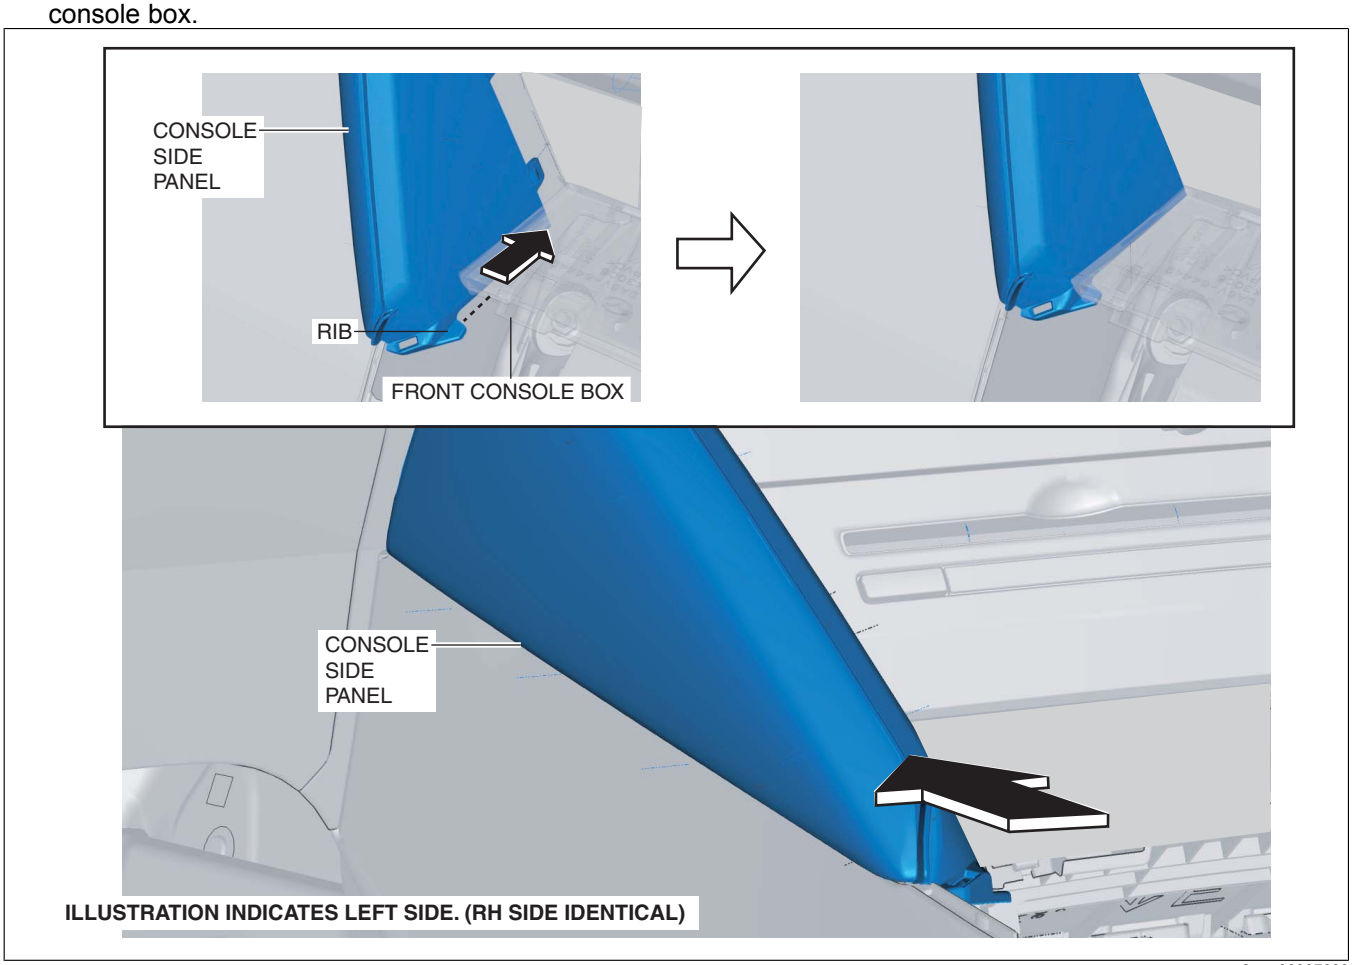

am2zzw00007689

2. Align the installation positions of the clips and hooks, and install the console side panel in the direction of the arrow shown in the figure.

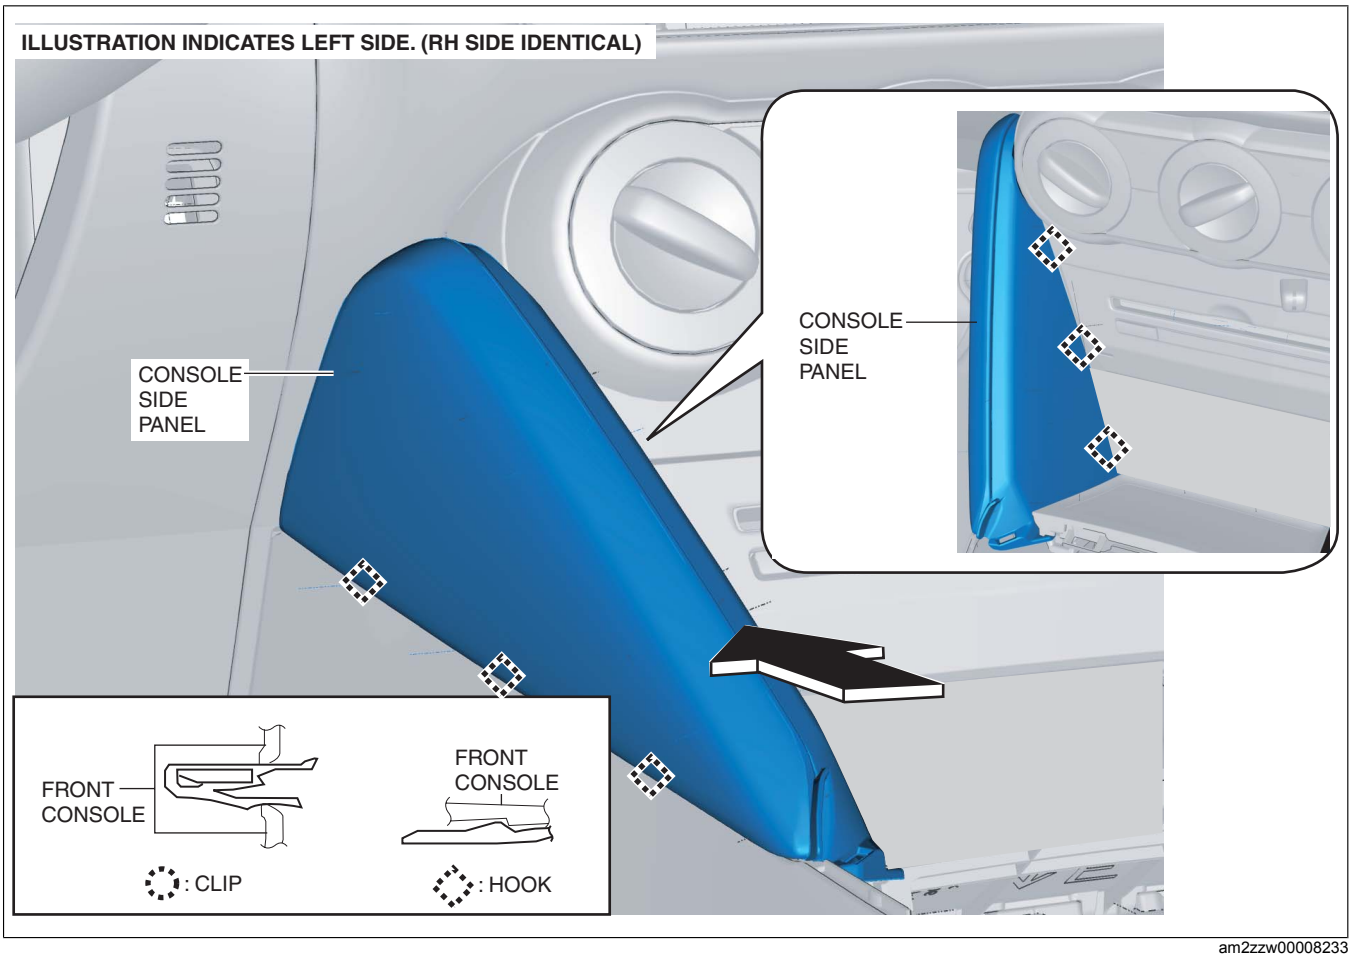

am2zzw00008233

3. Install the following parts:
   (1) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
   (2) Selector lever knob (ATX) (See AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION.)
   (3) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F65M-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F66M-R].)
   (4) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
   (5) Shift bezel (See SHIFT BEZEL REMOVAL/INSTALLATION.)
   (6) Center console tray (See CENTER CONSOLE TRAY REMOVAL/INSTALLATION.)
4. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)