HBC INDICATOR LIGHT (GREEN)/HBC WARNING LIGHT (AMBER)

id091800005200

Purpose

HBC indicator light (green)

- The HBC indicator light (green) notifies the driver that the High Beam Control (HBC) system is operating.

HBC warning light (amber)

- The HBC warning light (amber) warns the driver that a malfunction is occurring in the High Beam Control (HBC) system.


Function

HBC indicator light (green)

- The instrument cluster turns the HBC indicator light (green) on based on the system conditions display request signal sent via a CAN signal from the forward sensing camera (FSC).

HBC warning light (amber)


- The instrument cluster turns the HBC warning light (amber) on based on the system conditions display request signal sent via a CAN signal from the forward sensing camera (FSC).
- The instrument cluster flashes the HBC warning light (amber) based on the system malfunction display request signal sent via a CAN signal from the forward sensing camera (FSC).
- The flash pattern of the HBC warning light (amber) is as indicated in the table.

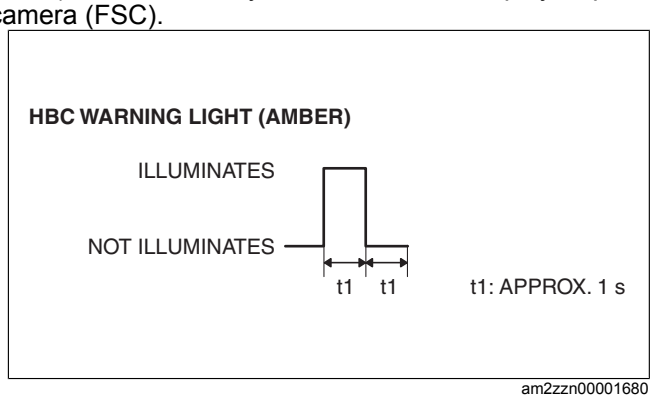

am2zzn00001680

Construction

- The HBC indicator light (green) and HBC warning light (amber) are built into the instrument cluster.

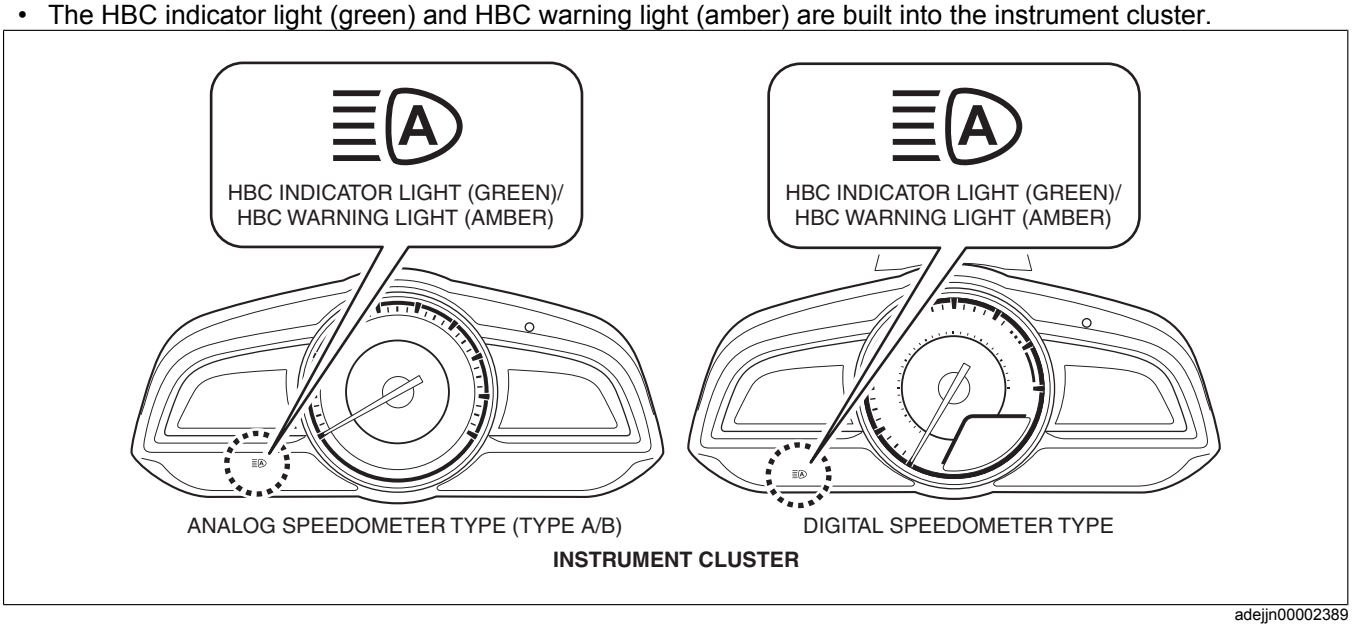


adejjn00002389

Operation

HBC indicator light (green)


1. When the high beam control (HBC) system operates, the forward sensing camera (FSC) sends (1) a system conditions display request signal to the instrument cluster via CAN communication.
2. The instrument cluster turns the transistor on (2) based on the system conditions display request signal.
3. When the transistor turns on, a ground circuit with the HBC indicator light (green) is established, and the HBC indicator light (green) turns on (3).

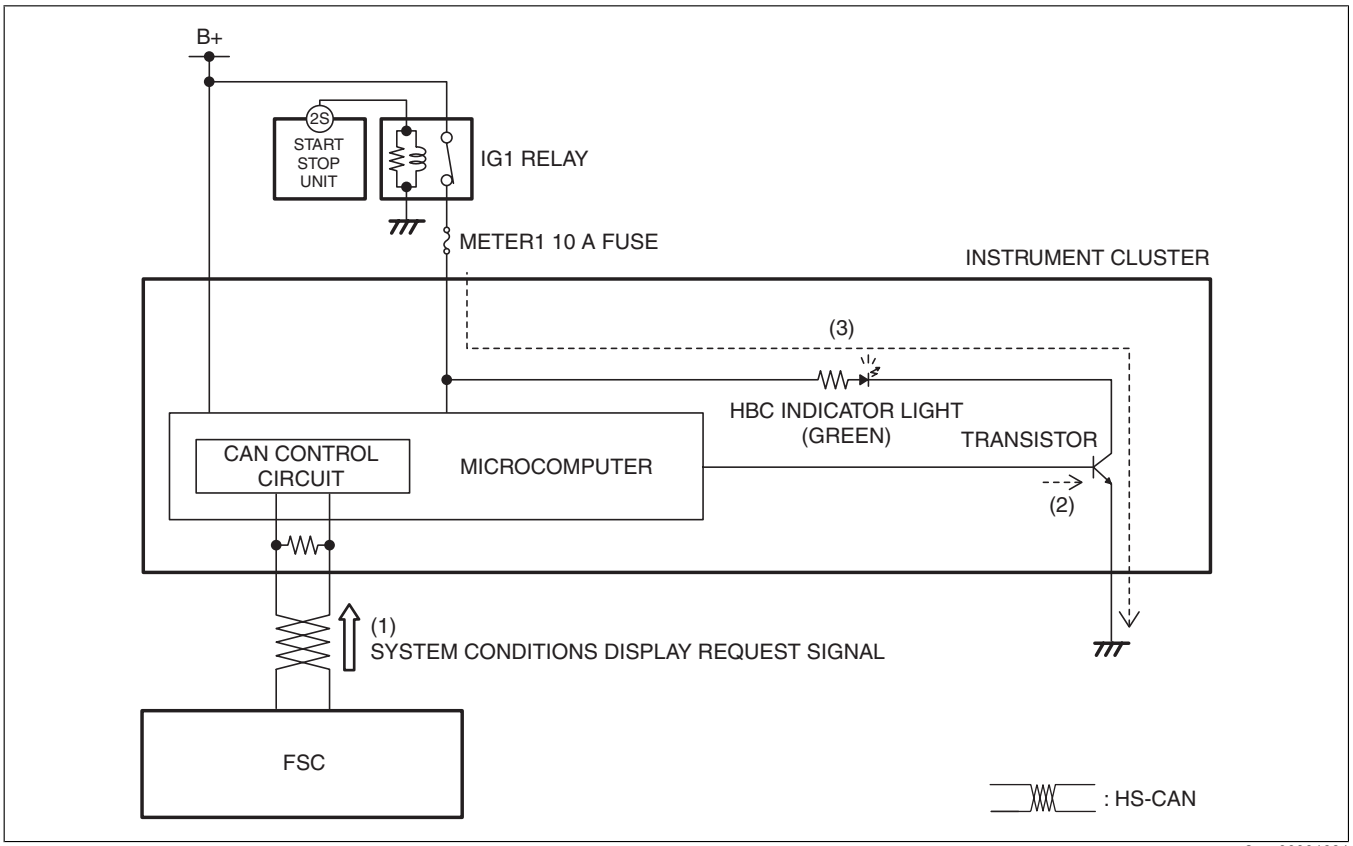

am2zzn00001681

HBC warning light (amber)

1. If there is a malfunction in the high beam control (HBC) system, the forward sensing camera (FSC) sends (1) a system malfunction display request signal or system conditions display request signal to the instrument cluster via CAN communication.
2. The instrument cluster turns the transistor on (2) intermittently for a system malfunction display request signal and continuously for a system conditions display request signal.
3. When the transistor is turned on intermittently, the HBC warning light (amber) flashes, and when it is turned on continuously, the HBC warning light (amber) turns on (3).

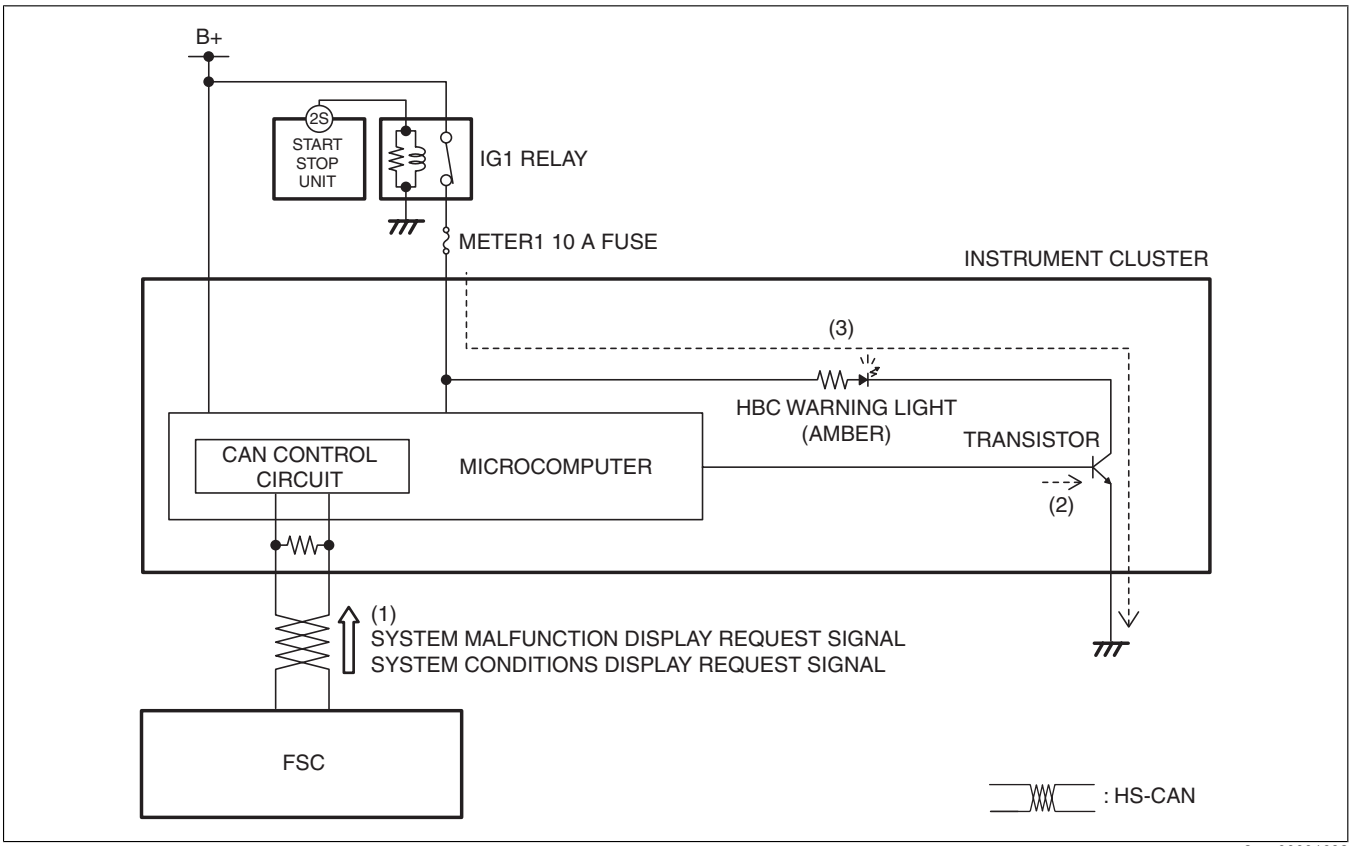

am2zzn00001682

Fail-safe

- Not applicable