RUNNING LIGHT SYSTEM

id091800011700

Outline

- The running light system automatically turns on the running lights while the vehicle is driven.

Functions


- The BCM controls the running lights according to the vehicle conditions.

—: Not applicable

Transmission type	Vehicle speed	Ignition switch	Parking brake	Selector lever position	Light switch position	Dimmer switch position	Auto light system control	Running light
ATX	**3 km/h {2 mph} or more**	ON (engine on)	Release	Except P position	OFF	HI	—	ON
						LO		ON
						FLASH-TO-PASS		ON
					AUTO	HI	OFF	ON
							ON	OFF
						LO	OFF	ON
							ON	OFF
						FLASH-TO-PASS	OFF	ON
							ON	OFF
					TNS	HI	—	OFF
						LO		OFF
						FLASH-TO-PASS		OFF
					HEAD	HI	—	OFF
						LO		OFF
						FLASH-TO-PASS		OFF
MTX				—	OFF	HI	—	ON
						LO		ON
						FLASH-TO-PASS		ON
					AUTO	HI	OFF	ON
							ON	OFF
						LO	OFF	ON
							ON	OFF
						FLASH-TO-PASS	OFF	ON
							ON	OFF
					TNS	HI	—	OFF
						LO		OFF
						FLASH-TO-PASS		OFF
					HEAD	HI	—	OFF
						LO		OFF
						FLASH-TO-PASS		OFF


cardiagn.com

Structural View

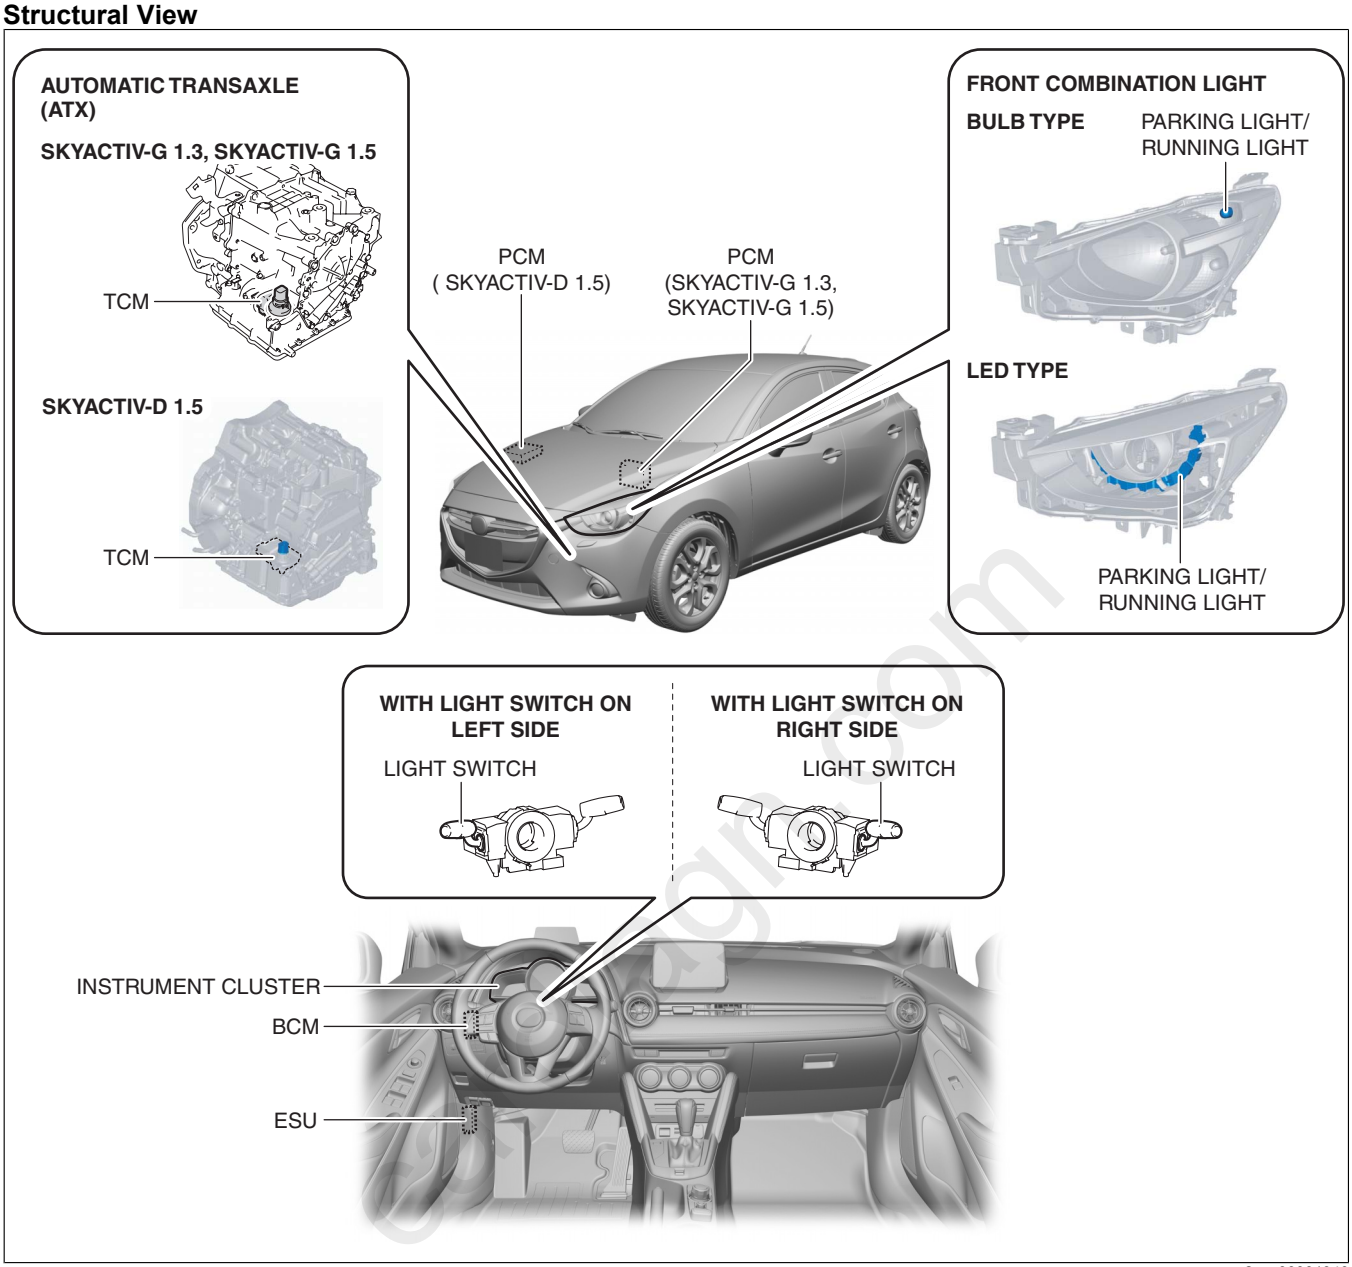


am2zzn00001949

System Wiring Diagram

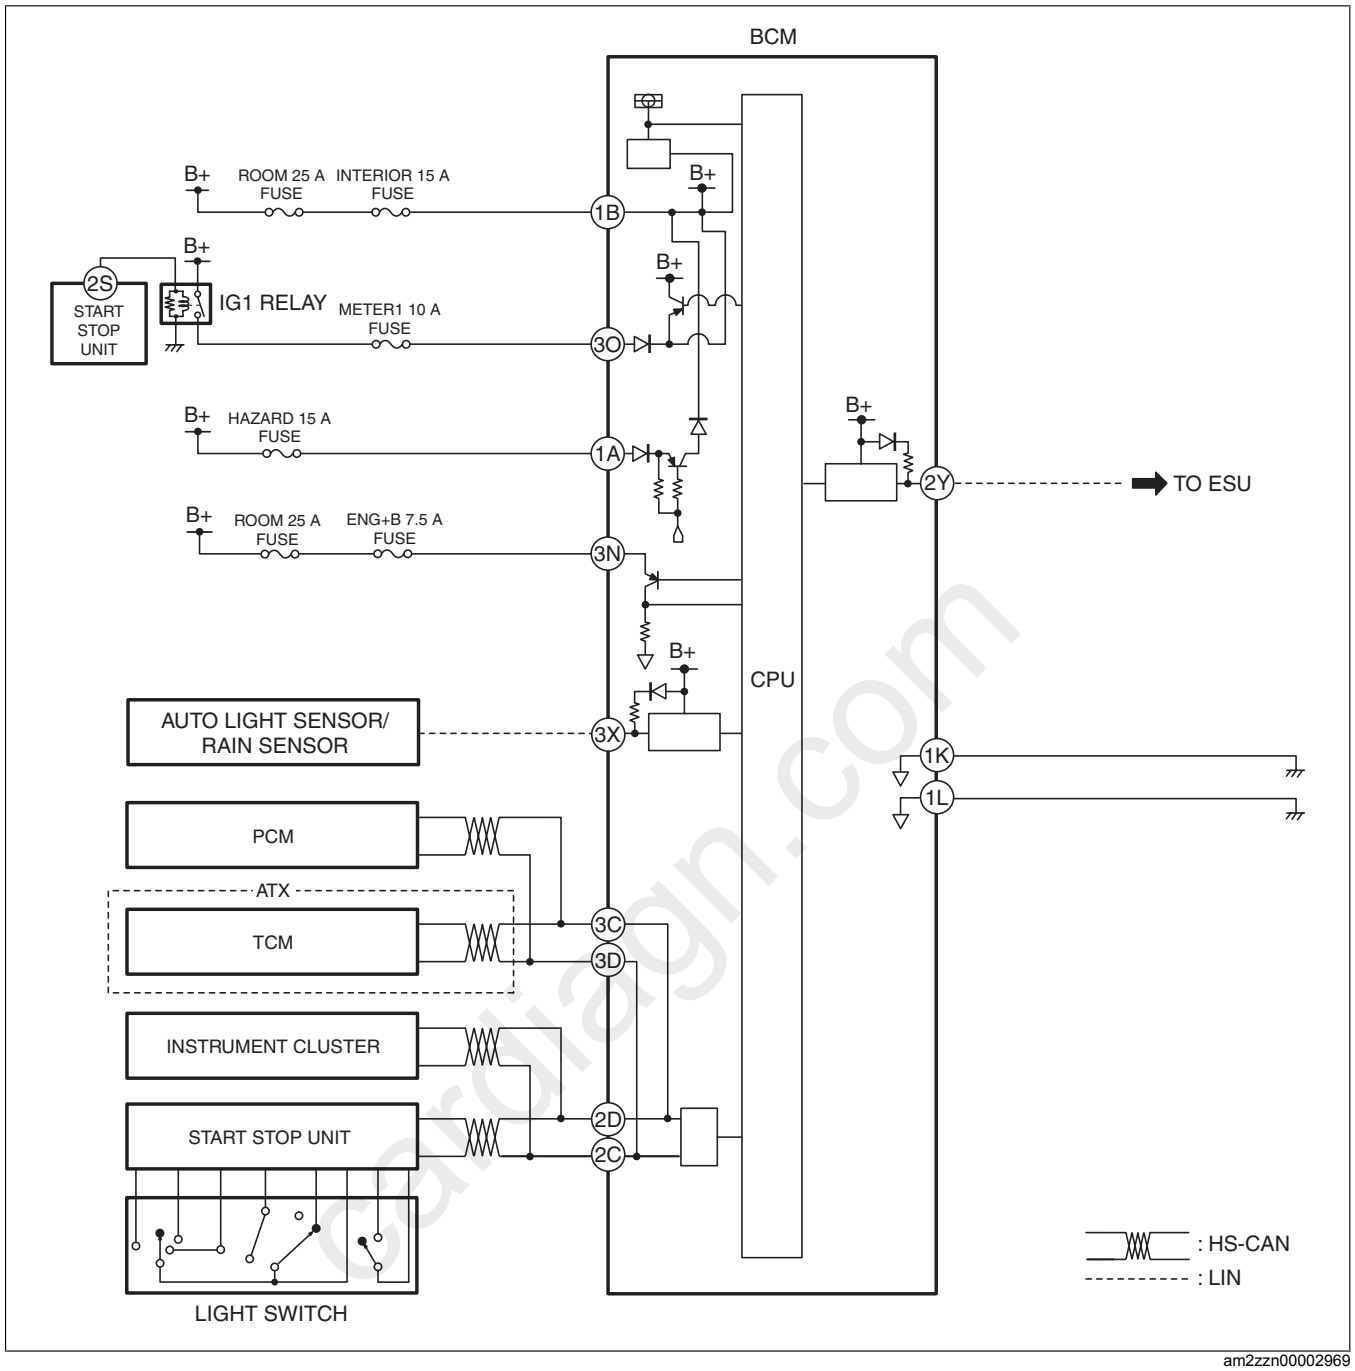

cardiagn.com

am2zzn00002969

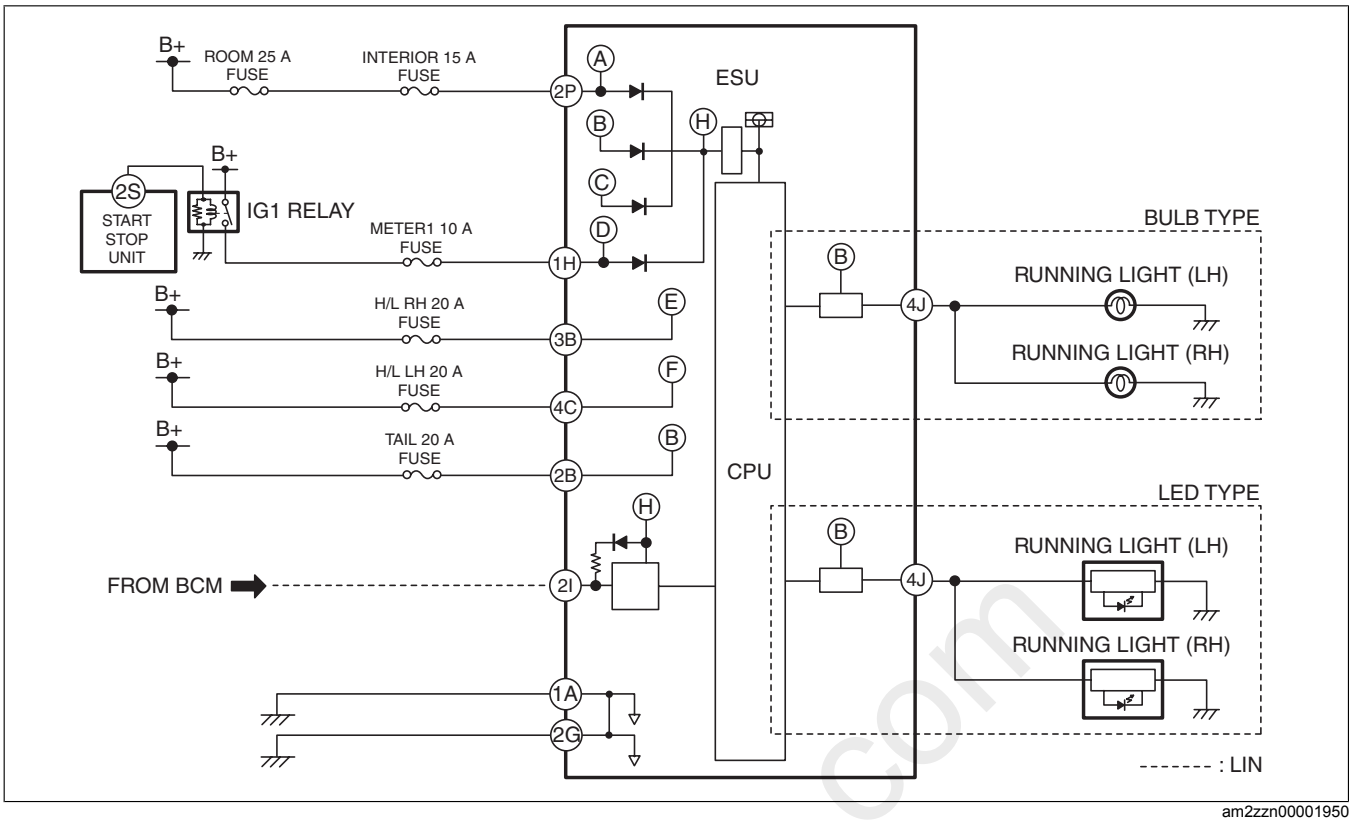

am2zzn00001950


Operation

Operation conditions

- When the following operation conditions are met, the BCM activates the running light system.
  - — Vehicle speed: **3 km/h {2 mph} or more** (vehicle speed signal)
  - — Ignition switched ON (engine on) (ignition switch position signal)
  - — Parking brake: Released (parking brake switch signal)
  - — Selector lever position: Except P position (selector lever position signal) (ATX)
  - — Light switch position: OFF or AUTO (auto light system not operated) (light switch signal)

Operation

1. When the operation conditions are met (1), the BCM sends (2) a running light on request signal to the electrical supply unit (ESU) via LIN communication.
2. When the electrical supply unit (ESU) receives the running light on request signal, it turns the running lights on (3).

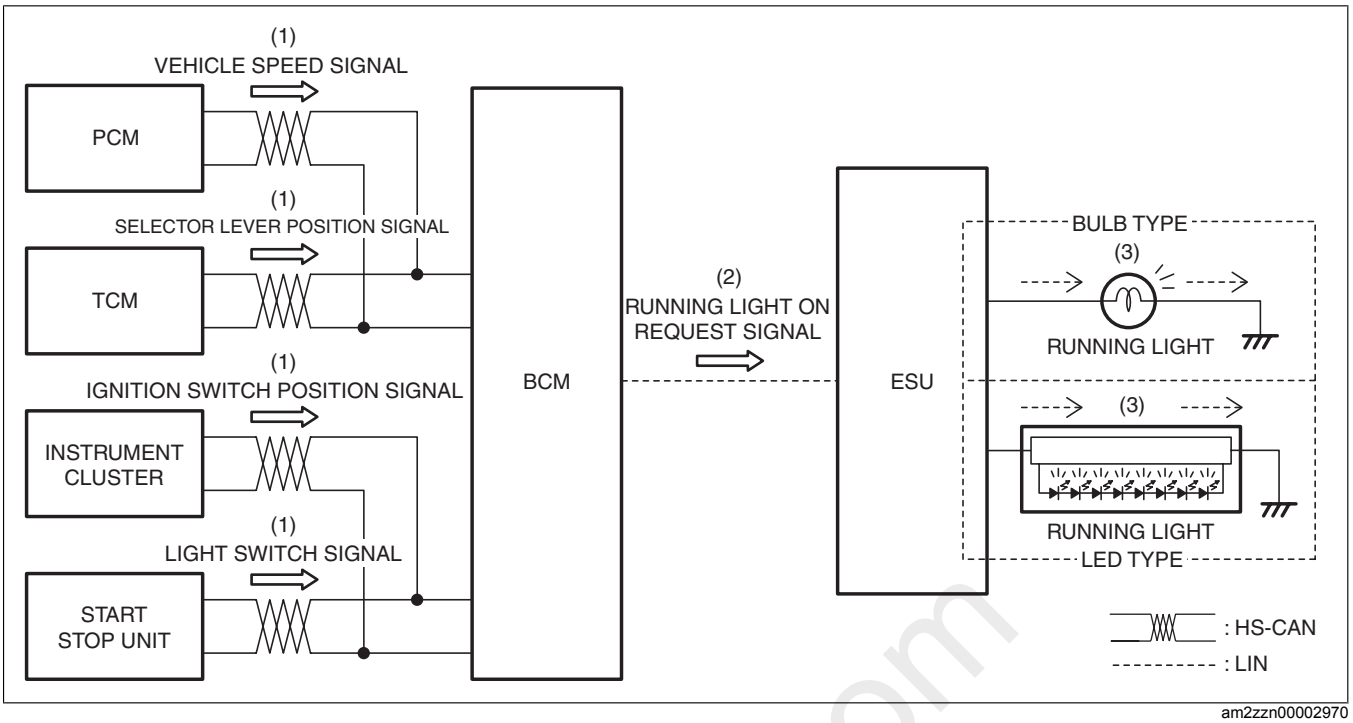

am2zzn00002970

cardiagn.com