
HEADLIGHT HIGH-BEAM INDICATOR LIGHT

id091800013600

Purpose
- The headlight high-beam indicator light notifies the driver that the headlights HI are turned on.

Function
- When the instrument cluster receives the headlight HI signal sent from the BCM via CAN communication, it turns the headlight high-beam indicator light on.


Construction
- The headlight high-beam indicator light is built into the instrument cluster.

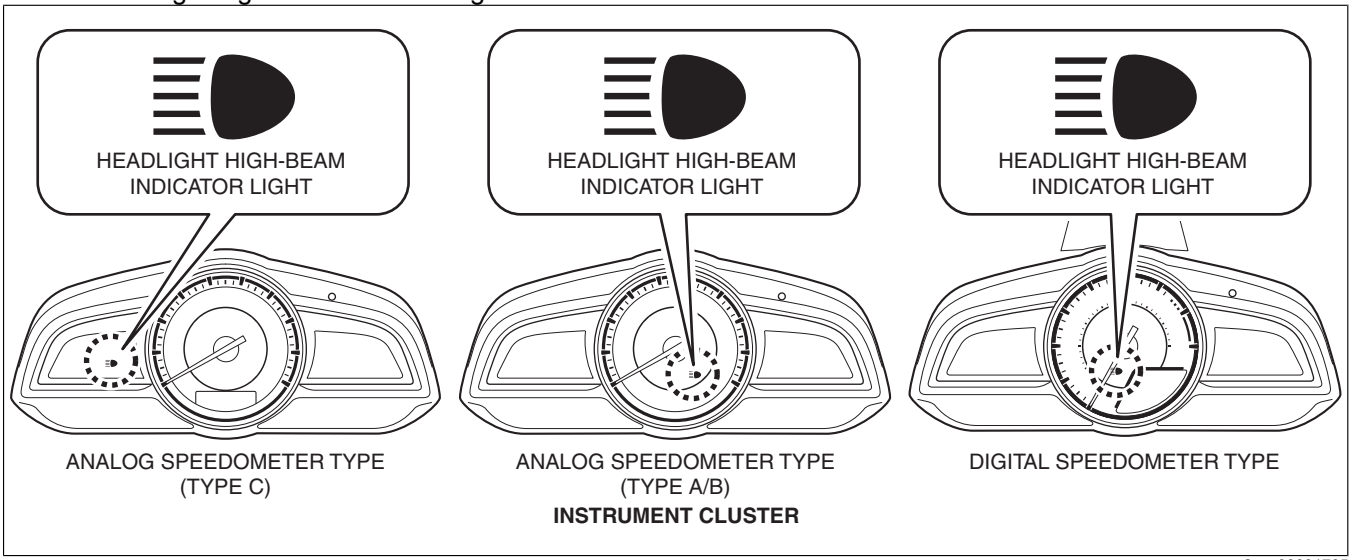

INSTRUMENT CLUSTER

am2zzn00001765

Operation
1. When the light switch is moved to any of the following positions, the start stop unit sends (1) a headlight HI signal to the BCM via CAN communication.
   — Light switch at HEAD position and dimmer switch at HI position
   — Dimmer switch at FLASH-TO-PASS position
2. When the BCM receives the headlight HI signal with the ignition switched ON (engine off or on), it sends (2) a headlight HI signal to the instrument cluster.
3. The instrument cluster turns the transistor on (3) based on the headlight HI signal.
4. When the transistor turns on, a ground circuit with the headlight high-beam indicator light is established, and the headlight high-beam indicator light turns on (4).

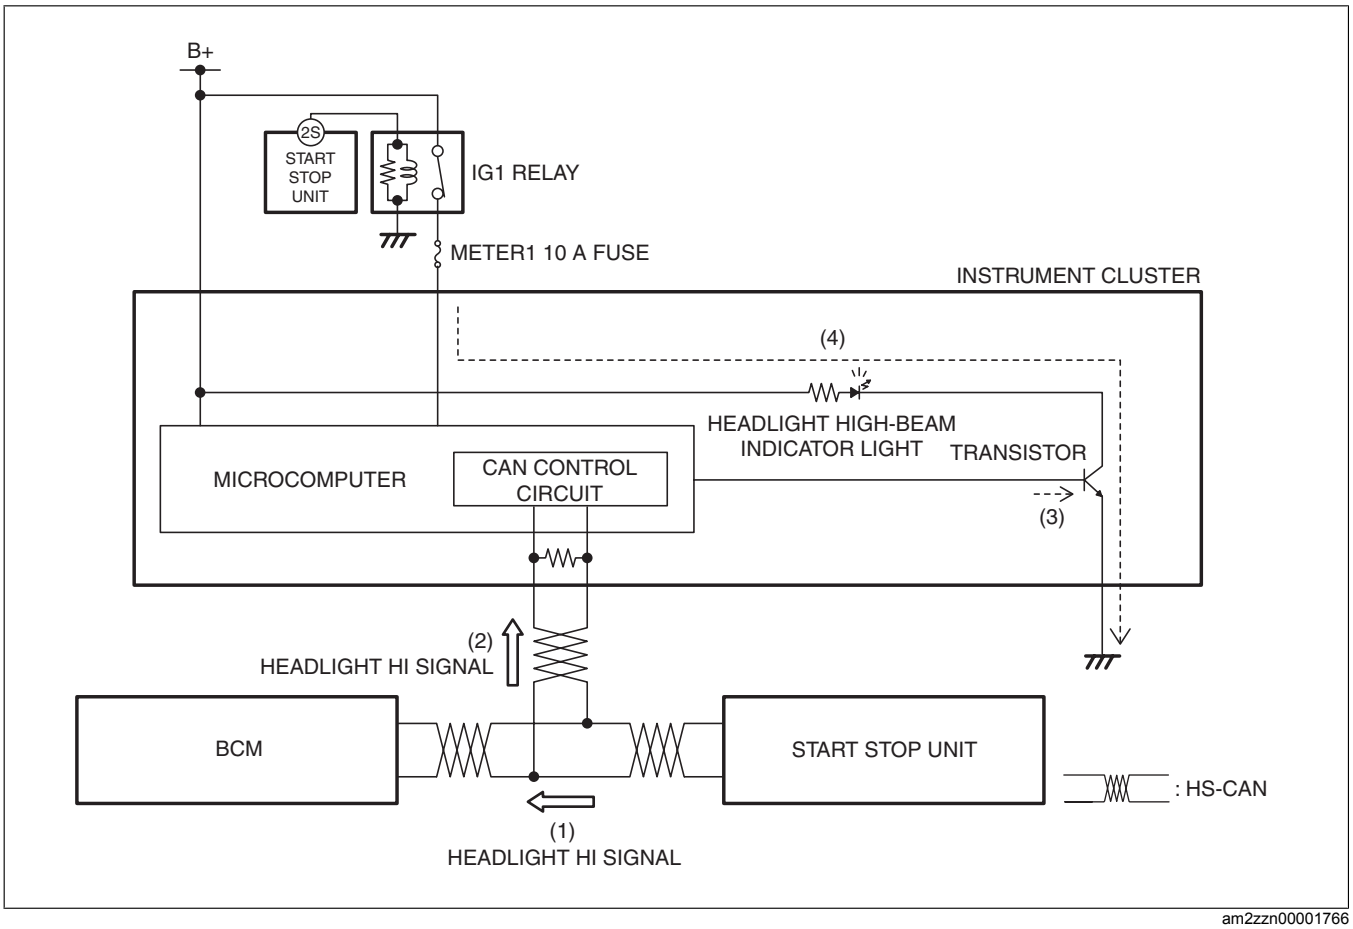

am2zzn00001766

Fail-safe

- Not applicable