LIGHTING SYSTEM PERSONALIZATION FEATURES SETTING PROCEDURE

id091800112900

Note
- Settings of some personalization features displayed on the M-MDS cannot be switched depending on the vehicle specification.

Auto Light System
- There are two methods for personalizing the turn light system: One using the M-MDS and the other using the center display (with center display). Refer to the following and perform the setting.
  Using M-MDS
  — CONTROL SYSTEM PERSONALIZATION FEATURES SETTING PROCEDURE
  Using center display
  — CENTER DISPLAY PERSONALIZATION FEATURES SETTING PROCEDURE

Turn Light System
- There are two methods for personalizing the turn light system: One using the M-MDS and the other using the center display (with center display). Refer to the following and perform the setting.
  Using M-MDS
  — CONTROL SYSTEM PERSONALIZATION FEATURES SETTING PROCEDURE
  Using center display
  — CENTER DISPLAY PERSONALIZATION FEATURES SETTING PROCEDURE

High Beam Control (HBC) System
- There are two methods for personalizing the high beam control (HBC) system: One using the M-MDS and the other using the center display (with center display). Refer to the following and perform the setting.
  Using M-MDS
  — FORWARD SENSING CAMERA (FSC) PERSONALIZATION FEATURES SETTING PROCEDURE
  Using center display
  — CENTER DISPLAY PERSONALIZATION FEATURES SETTING PROCEDURE


Coming Home Light System
- There are two methods for personalizing the coming home light system: One using the M-MDS and the other using the center display (with center display). Refer to the following and perform the setting.
  Using M-MDS
  — CONTROL SYSTEM PERSONALIZATION FEATURES SETTING PROCEDURE
  Using center display
  — CENTER DISPLAY PERSONALIZATION FEATURES SETTING PROCEDURE

Leaving Home Light System
- There are three methods for personalizing the leaving home light system: Using the M-MDS, using the center display (with center display), and using the light switch.
  Using M-MDS
  — CONTROL SYSTEM PERSONALIZATION FEATURES SETTING PROCEDURE
  Using center display
  — CENTER DISPLAY PERSONALIZATION FEATURES SETTING PROCEDURE
  Using dimmer switch
  1. Switch the ignition off.

  Caution
  - **Perform the procedure in Steps 2-4 within 10 s.**

  2. Operate the dimmer switch to the passing position and wait for 3 s or more.
  3. Operate the dimmer switch back to the LO position.
  4. Operate the dimmer switch to the passing position and wait for 3 s.

5. Verify that the headlight high-beam indicator light flashes two times.
   - If the headlight high-beam indicator light does not flash two times, the procedure may have been performed incorrectly. Repeat the procedure from Step 2.

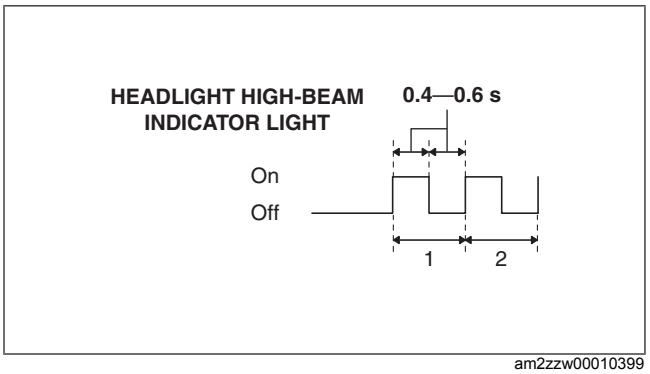

am2zzw00010399

Room Light Control System

- There are two methods for personalizing the room light control system: One using the M-MDS and the other using the center display (with center display). Refer to the following and perform the setting.
  Using M-MDS
  — CONTROL SYSTEM PERSONALIZATION FEATURES SETTING PROCEDURE
  Using center display
  — CENTER DISPLAY PERSONALIZATION FEATURES SETTING PROCEDURE


Running Light System

Function	Initial setting	Setting contents	Control module
The running light system function can be set.	On (Running light illumination)	Off (Running light non-illumination)/ On (Running light illumination)	Body control module (BCM)

- Perform the following procedure to change the running light illumination/non-illumination setting.

Note

- Because each procedure needs to be completed within a predetermined period of time, refer to the following procedure before performing the set up work, and then verify the content of the work and the time limit.
- Depending on the vehicle specification, the running lights on some vehicles cannot be turned off.

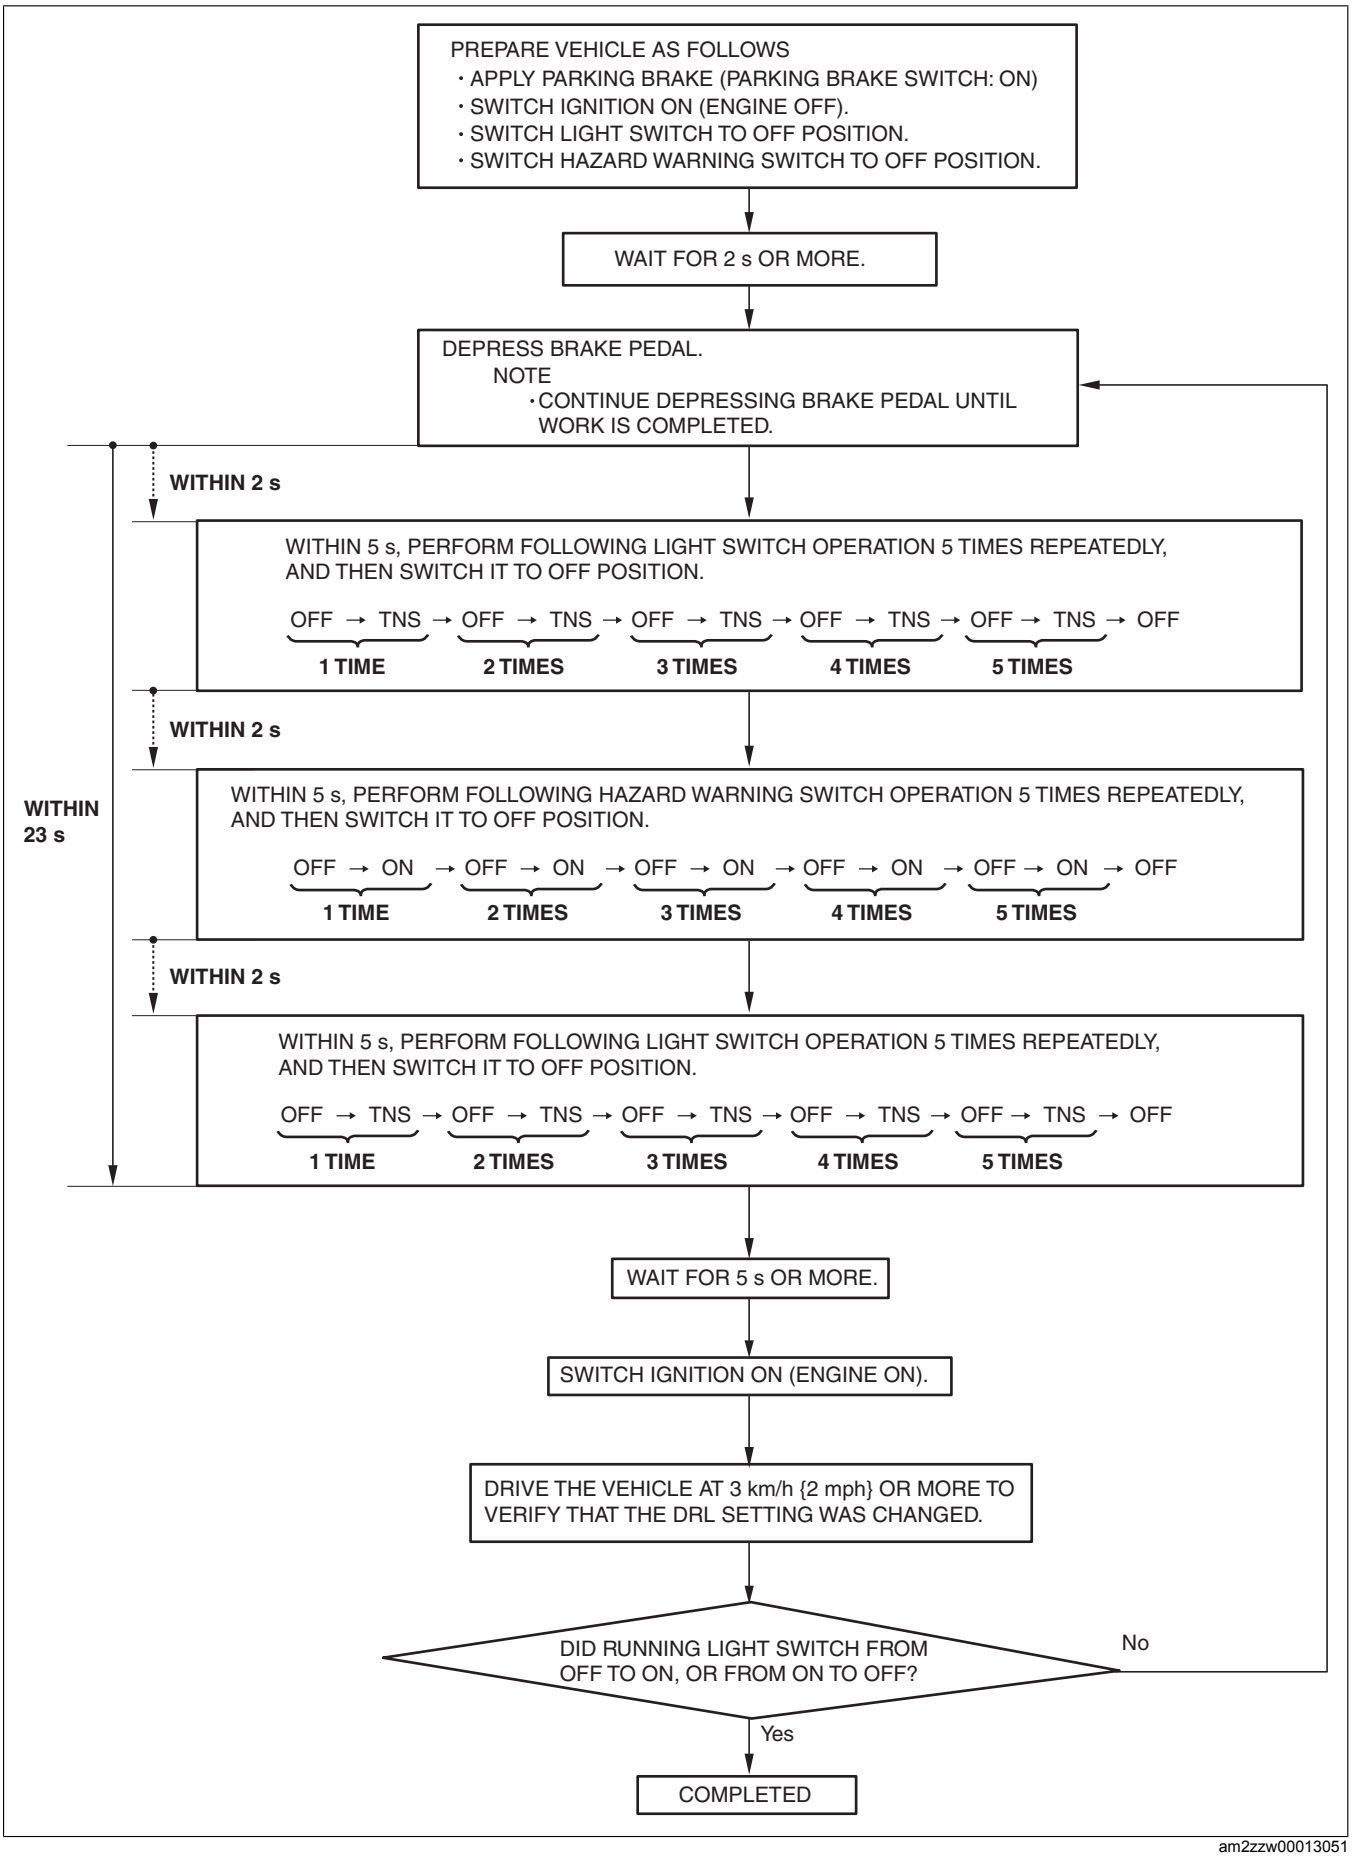

am2zzw00013051