


LIGHTING SYSTEMS LOCATION INDEX

id091800800100

Exterior

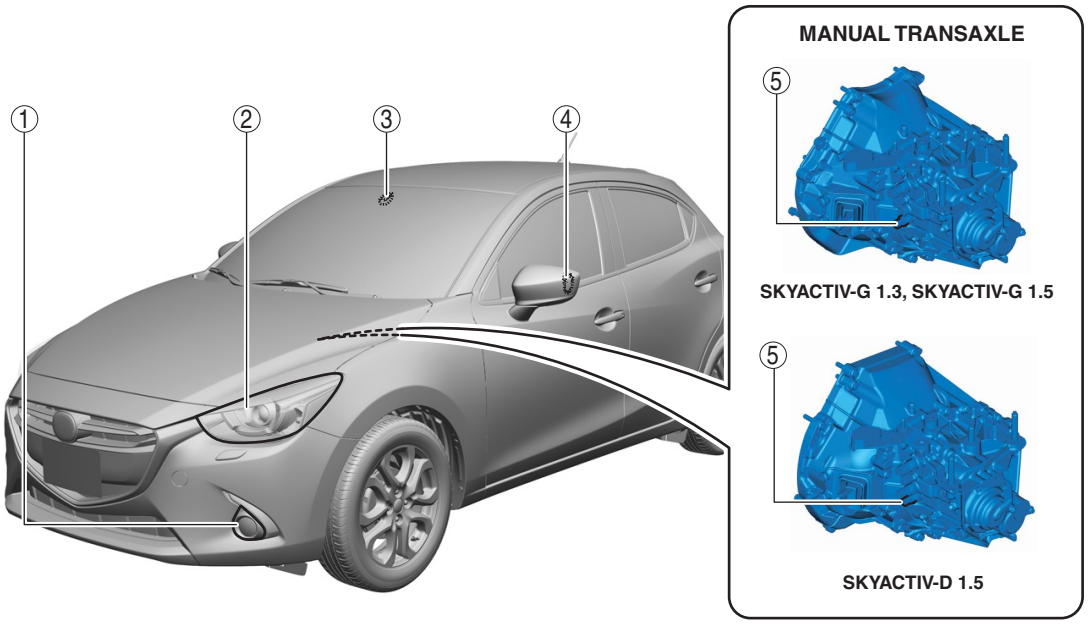

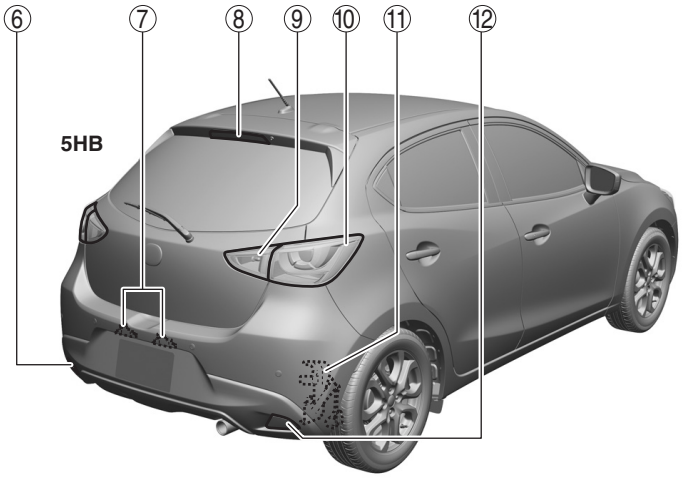


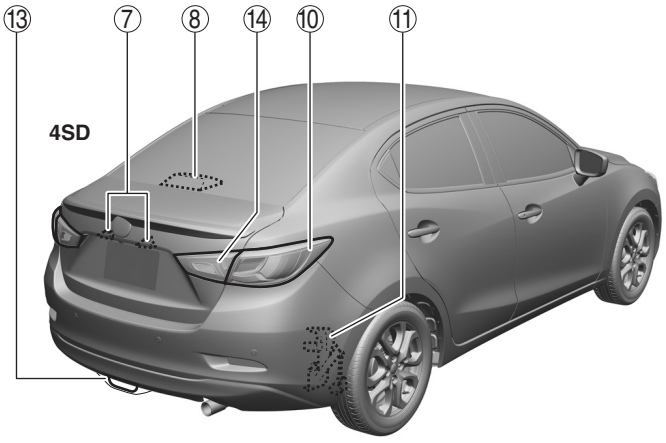

am2zzw00010401

1	Front fog light (with front fog lights) (See FRONT FOG LIGHT REMOVAL/ INSTALLATION.) (See FRONT FOG LIGHT BULB REMOVAL/ INSTALLATION.) (See FRONT FOG LIGHT AIMING.)
2	Front combination light (See FRONT COMBINATION LIGHT REMOVAL/ INSTALLATION.) (See FRONT COMBINATION LIGHT DISASSEMBLY/ASSEMBLY.) (See HEADLIGHT BULB REMOVAL/ INSTALLATION.) (See HEADLIGHT AIMING.) (See HEADLIGHT LEVELING ACTUATOR INSPECTION.) (See PARKING LIGHT BULB REMOVAL/ INSTALLATION.) (See FRONT TURN LIGHT BULB REMOVAL/ INSTALLATION.) (See LIGHTING SYSTEM PERSONALIZATION FEATURES SETTING PROCEDURE.)
3	Auto light sensor (with auto light system) (See AUTO LIGHT SENSOR REMOVAL/ INSTALLATION.) (See LIGHTING SYSTEM PERSONALIZATION FEATURES SETTING PROCEDURE.)
4	Side turn light (See SIDE TURN LIGHT REMOVAL/ INSTALLATION.) (See SIDE TURN LIGHT INSPECTION.)
5	Back-up light switch (MTX) (See BACK-UP LIGHT SWITCH INSPECTION.)
6	Rear fog light (5HB) (L.H.D.) (See REAR FOG LIGHT REMOVAL/ INSTALLATION.) (See REAR FOG LIGHT BULB REMOVAL/ INSTALLATION.)
7	License plate lights (See LICENSE PLATE LIGHT REMOVAL/ INSTALLATION.) (See LICENSE PLATE LIGHT BULB REMOVAL/ INSTALLATION.) (See LICENSE PLATE LIGHT SHORT-CORD REMOVAL/INSTALLATION.) (See LICENSE PLATE LIGHT SHORT-CORD INSPECTION.)
8	High-mount brake light (See HIGH-MOUNT BRAKE LIGHT REMOVAL/ INSTALLATION.)
9	Liftgate light (5HB) (See LIFTGATE LIGHT REMOVAL/ INSTALLATION.) (See BACK-UP LIGHT BULB REMOVAL/ INSTALLATION.)
10	Rear combination light (See REAR COMBINATION LIGHT REMOVAL/ INSTALLATION.) (See REAR TURN LIGHT BULB REMOVAL/ INSTALLATION.) (See BRAKE LIGHT/TAILLIGHT BULB REMOVAL/ INSTALLATION.) (See REAR COMBINATION LIGHT SHORT-CORD REMOVAL/INSTALLATION.) (See REAR COMBINATION LIGHT SHORT-CORD INSPECTION.)
11	Auto leveling sensor (with headlight auto leveling system) (See AUTO LEVELING SENSOR REMOVAL/ INSTALLATION.) (See AUTO LEVELING SENSOR INSPECTION.) (See HEADLIGHT AUTO LEVELING SYSTEM INITIALIZATION.)
12	Rear fog light (5HB) (R.H.D.) (See REAR FOG LIGHT REMOVAL/ INSTALLATION.) (See REAR FOG LIGHT BULB REMOVAL/ INSTALLATION.)
13	Rear fog light (4SD) (See REAR FOG LIGHT REMOVAL/ INSTALLATION.) (See REAR FOG LIGHT BULB REMOVAL/ INSTALLATION.) (See REAR FOG LIGHT SHORT CORD REMOVAL/ INSTALLATION.)
14	Trunk lid light (4SD) (See TRUNK LID LIGHT REMOVAL/ INSTALLATION.) (See BACK-UP LIGHT BULB REMOVAL/ INSTALLATION.)

Interior

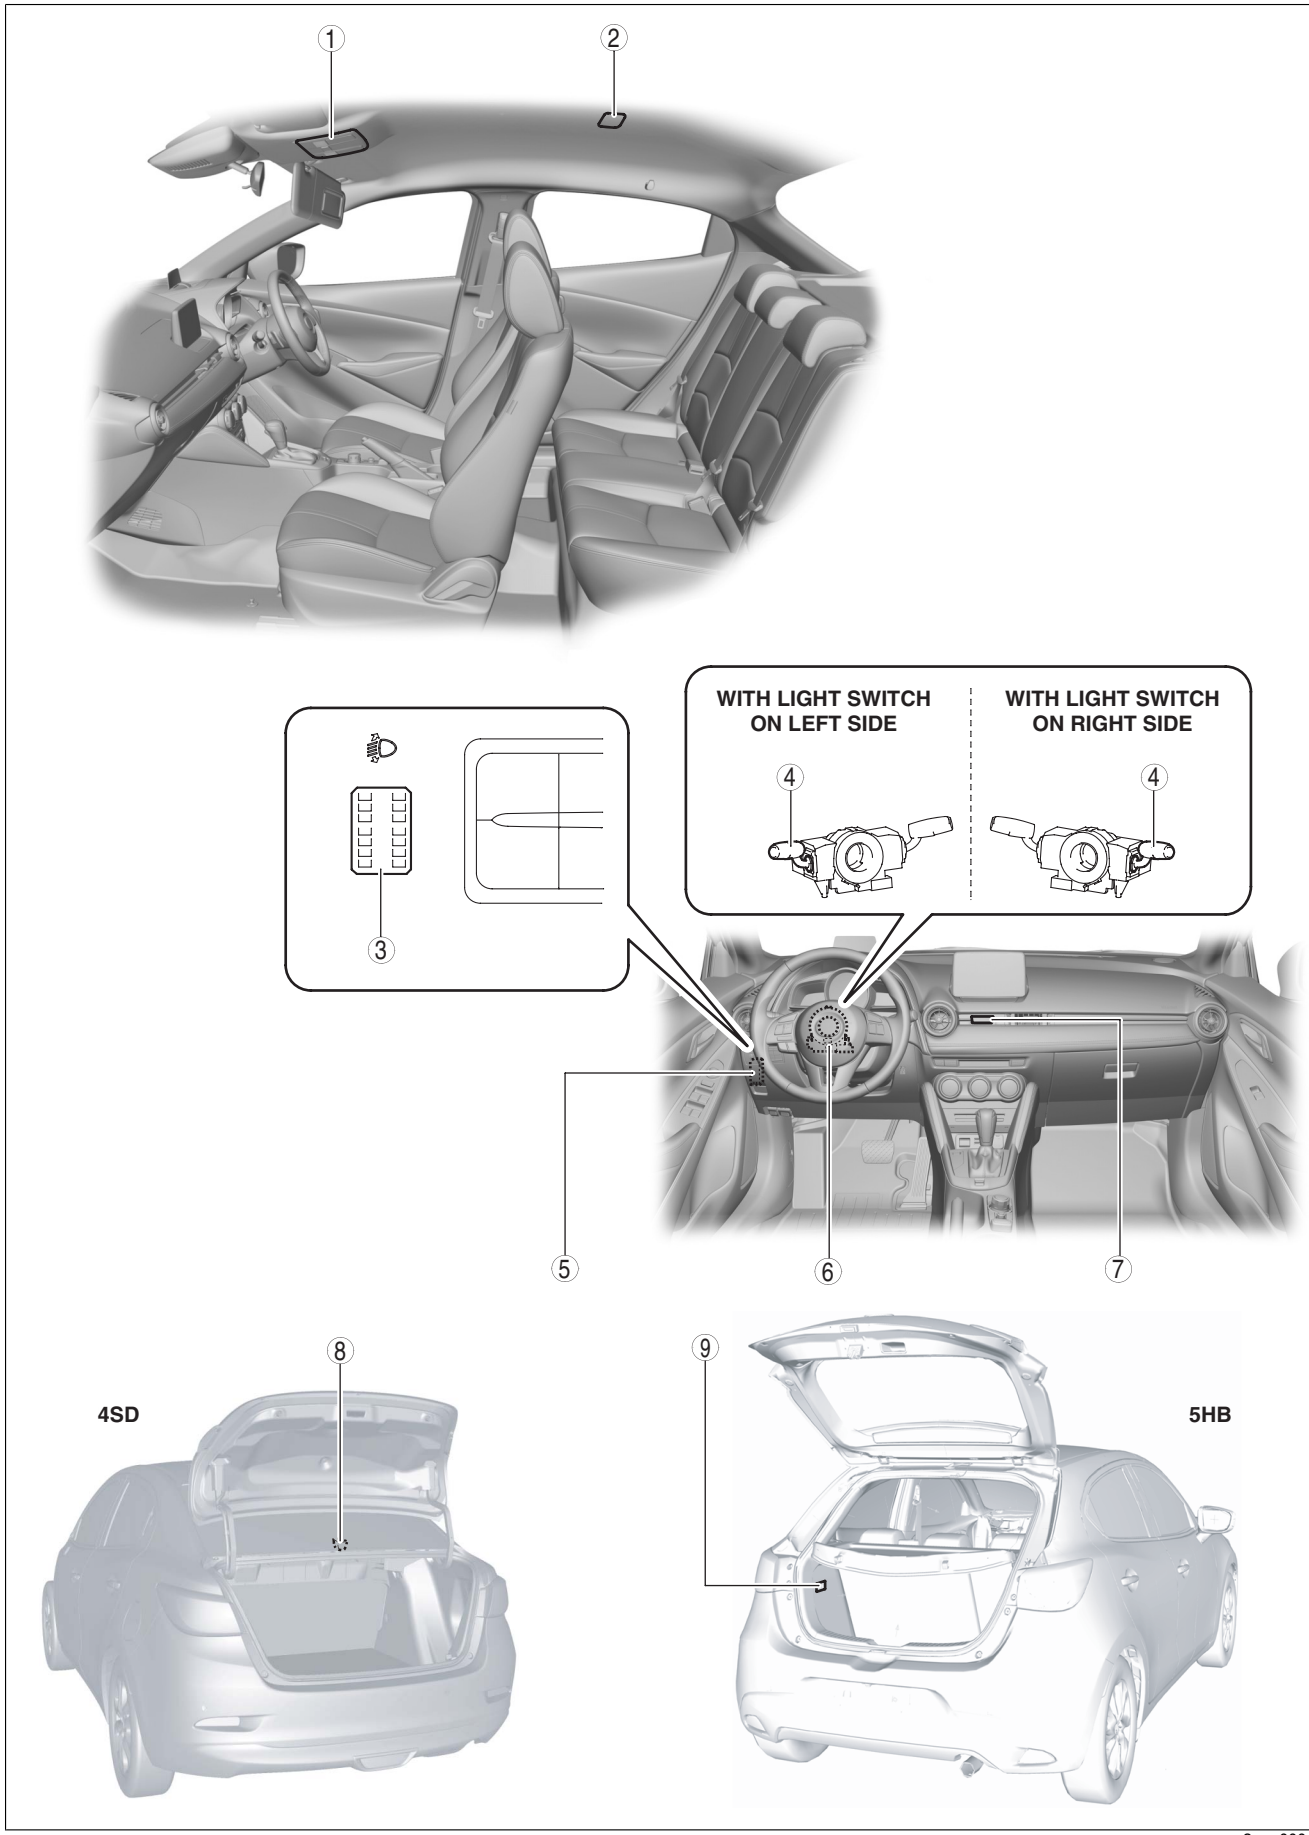

am2zzw00010402

1	Front map light (See LIGHTING SYSTEM PERSONALIZATION FEATURES SETTING PROCEDURE.) (See FRONT MAP LIGHT REMOVAL/ INSTALLATION.) (See FRONT MAP LIGHT BULB REMOVAL/ INSTALLATION.) (See FRONT MAP LIGHT INSPECTION.)
2	Rear map light (with rear map light) (See LIGHTING SYSTEM PERSONALIZATION FEATURES SETTING PROCEDURE.) (See REAR MAP LIGHT REMOVAL/ INSTALLATION.) (See REAR MAP LIGHT BULB REMOVAL/ INSTALLATION.)
3	Headlight leveling switch (with headlight manual leveling system) (See HEADLIGHT LEVELING SWITCH REMOVAL/ INSTALLATION.) (See HEADLIGHT LEVELING SWITCH INSPECTION.)
4	Light switch (See LIGHT SWITCH REMOVAL/INSTALLATION.) (See LIGHT SWITCH INSPECTION.) (See FRONT FOG LIGHT SWITCH INSPECTION.) (See REAR FOG LIGHT SWITCH INSPECTION.)
5	Auto leveling control module (with headlight auto leveling system) (See AUTO LEVELING CONTROL MODULE REMOVAL/INSTALLATION.) (See HEADLIGHT AUTO LEVELING SYSTEM INITIALIZATION.)
6	Steering angle sensor (with smart city brake support (SCBS)) (See STEERING ANGLE SENSOR REMOVAL/ INSTALLATION.) (See STEERING ANGLE SENSOR INSPECTION.)
7	Hazard warning switch (See HAZARD WARNING SWITCH REMOVAL/ INSTALLATION.) (See HAZARD WARNING SWITCH INSPECTION.)
8	Trunk compartment light (4SD) (See TRUNK COMPARTMENT LIGHT BULB REMOVAL/INSTALLATION.)
9	Cargo compartment light (5HB) (See CARGO COMPARTMENT LIGHT REMOVAL/ INSTALLATION.) (See CARGO COMPARTMENT LIGHT BULB REMOVAL/INSTALLATION.) (See CARGO COMPARTMENT LIGHT INSPECTION.)