BACK-UP LIGHT SWITCH INSPECTION

id091800800300


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the air cleaner, the air hose, and the fresh-air duct assembly. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
3. Disconnect the back-up light switch connector. (See BACK-UP LIGHT SWITCH REMOVAL/INSTALLATION [F65M-R].) (See BACK-UP LIGHT SWITCH REMOVAL/INSTALLATION [F66M-R].)
4. Verify that the continuity between the back-up light switch terminals is as indicated in the table.

○—○: Continuity

Shift lever position	Terminal	
	A	B
Reverse	○	○
Other		

am2zzw00010403

- If not as indicated in the table, replace the back-up light switch. (See BACK-UP LIGHT SWITCH REMOVAL/INSTALLATION [F65M-R].) (See BACK-UP LIGHT SWITCH REMOVAL/INSTALLATION [F66M-R].)

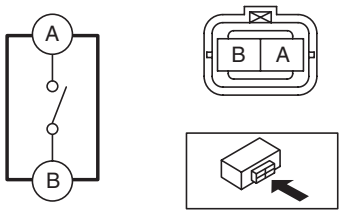

adejjw00009529