
HEADLIGHT AIMING

id091800800400

Note


- If the following servicing is done, perform the headlight aiming adjustment.
  - — Front combination light replacement
  - — Suspension replacement and removal/installation, servicing requiring vehicle height to be changed
- If servicing was done which changes the vehicle height, perform the headlight auto leveling system initial setting first to record the vehicle height under the unloaded condition to the auto leveling control module, then perform headlight aiming. (With headlight auto leveling system) (See HEADLIGHT AUTO LEVELING SYSTEM INITIALIZATION.)
- For the headlight (bulb type), perform the aiming adjustment on the low beams only because the same bulb is used for the low and high beams.
- For the headlight (LED type), perform the aiming adjustment on the low beams only because the reflectors of the low and high beams operate together.
- When using a aiming tester, set the percentage inclination value (tilt angle) to **1.0 %** and follow the instructions of the aiming tester manufacturer.

1. Empty the vehicle except for the spare tire, jack and vehicle tools.
2. Adjust the tire pressure to the specification. (See WHEEL AND TIRE SPECIFICATION.)
3. Move the vehicle to level ground.
4. Sit on the driver-side seat alone.
5. Make an adjustment-use screen as shown in the figure using double-weight, white paper.

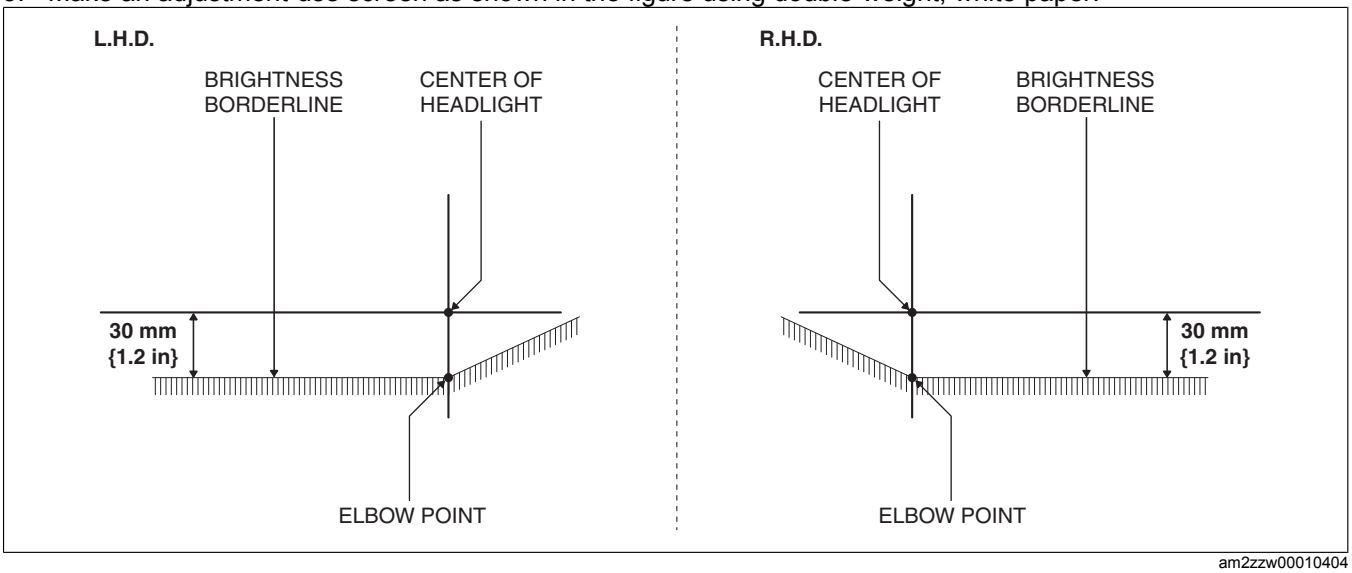

am2zzw00010404


6. Line up the vehicle with the wall so that the distance to the headlights is 3 m {118 in} from the wall.

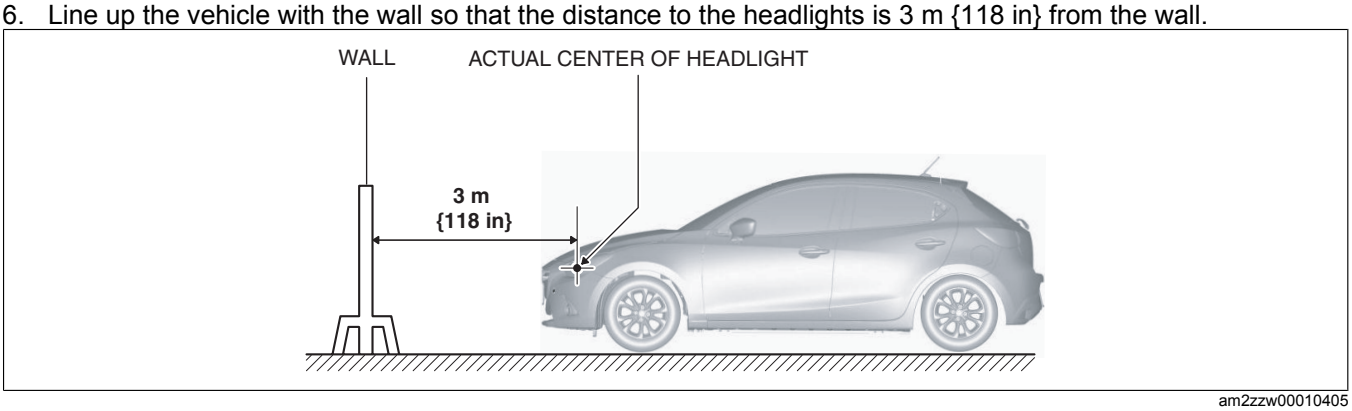

am2zzw00010405


7. Measure the height at the center point of the headlight.

Note
- Measure the height at the center point of the headlight in which the aiming is being adjusted because the vehicle height differs depending on vehicle conditions.

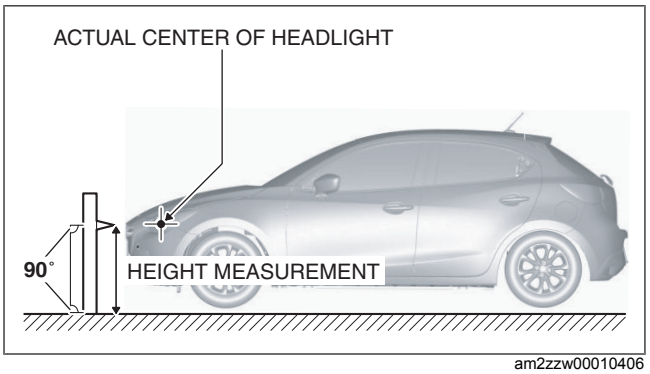

am2zzw00010406


8. Align the center of the headlight to be adjusted with the center of the headlight on the adjustment screen.

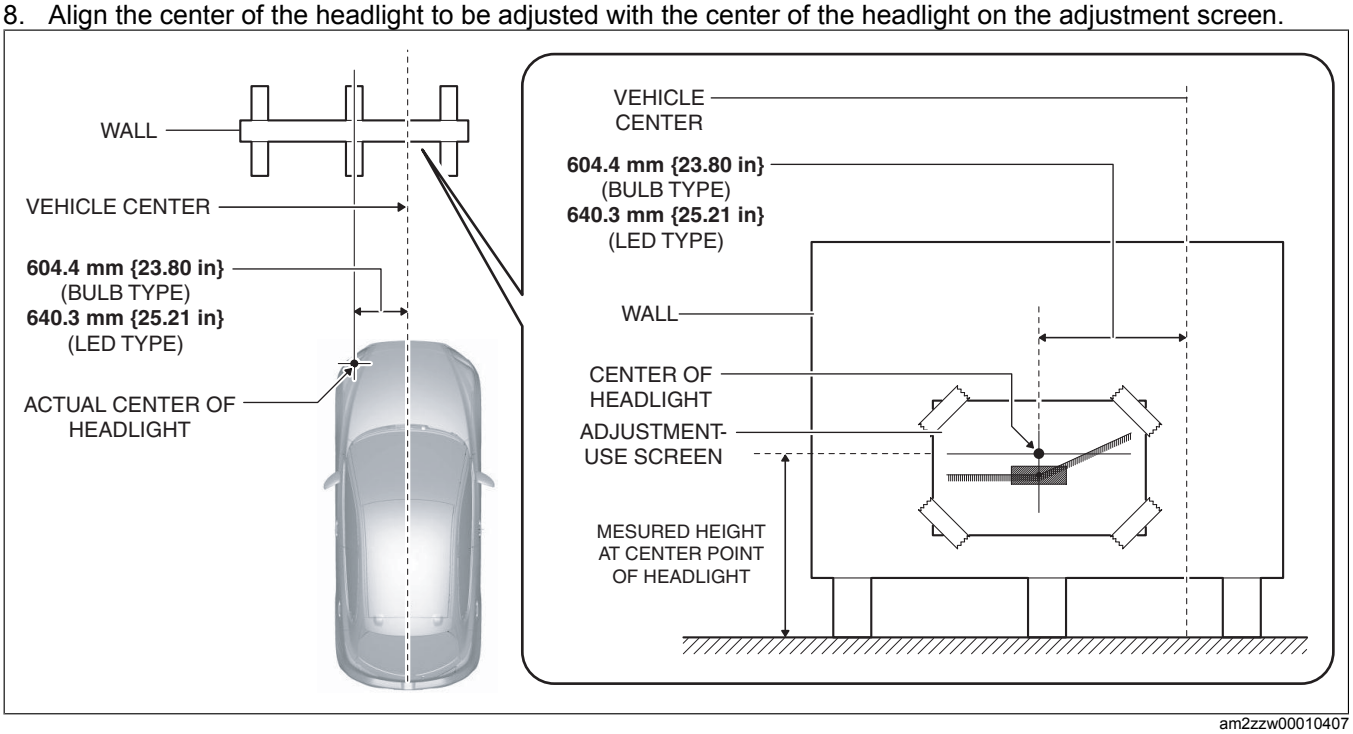

am2zzw00010407

9. Set a partition in front of the headlight which is not being adjusted to block the light.
10. Start the engine and charge the battery.
11. Set the headlight leveling switch to the [0] position. (With headlight manual leveling system)
12. Turn on the headlight low beams.

Note
- For the LED type, if the headlight low beams are turned on, the light as shown in the figure is emitted to the adjustment screen.

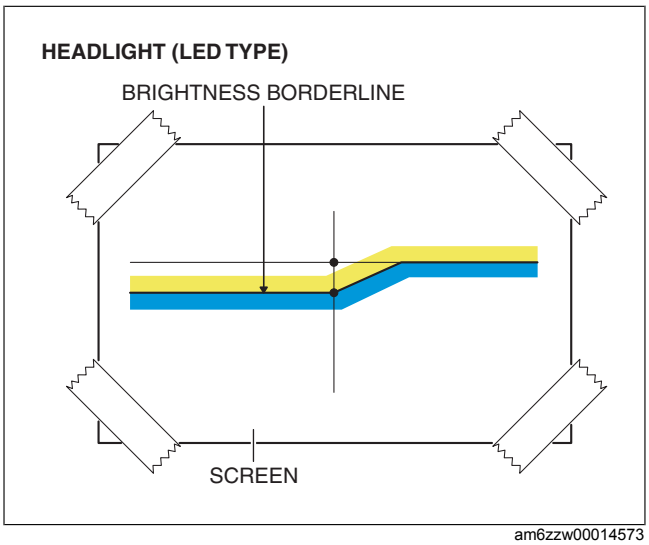


am6zzw00014573

13. Cover the upper part of the headlight with a clean rag so that the brightness border line becomes transparent. (Headlight (LED type))


Note

- If the headlight is covered with a clean rag from the upper part of the headlight in the direction of the arrow shown in the figure, the yellow line disappears and the brightness border line becomes transparent.

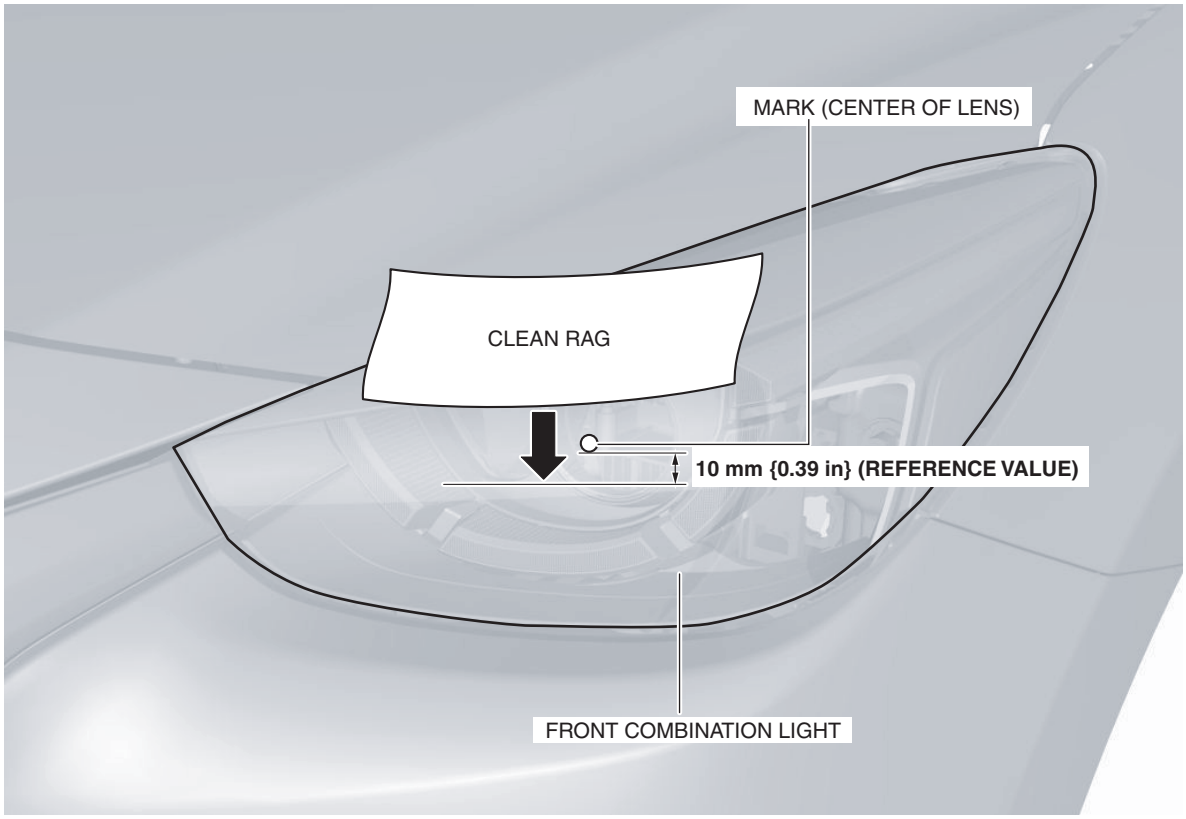


am2uuw00001657

14. Verify that the actual elbow point of the headlight is at the elbow point position indicated by the adjustment-use screen.
    - If the actual elbow point of the headlight is not at the elbow point position indicated by the adjustment-use screen, adjust by turning the aiming adjustment screw.

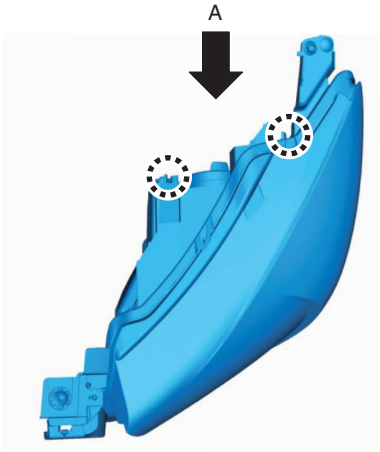

VIEW FROM TOP

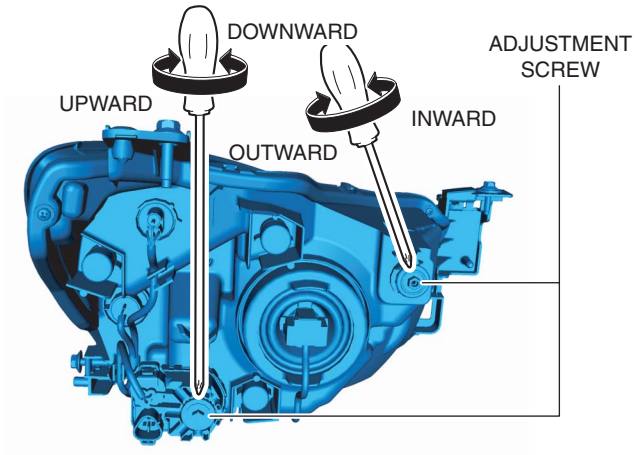

VIEW FROM A

am2zzw00010409