CARGO COMPARTMENT LIGHT INSPECTION

id091800801800


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the cargo compartment light. (See CARGO COMPARTMENT LIGHT REMOVAL/INSTALLATION.)
3. Verify that the continuity between the cargo compartment light terminals is as indicated in the table.

: Bulb

Switch position	Terminal	
	A	B
On	○—(~)—○	
Off		

am2zzw00010520

- If not as indicated in the table, replace the cargo compartment light bulb or the cargo compartment light. (See CARGO COMPARTMENT LIGHT BULB REMOVAL/INSTALLATION.) (See CARGO COMPARTMENT LIGHT REMOVAL/INSTALLATION.)

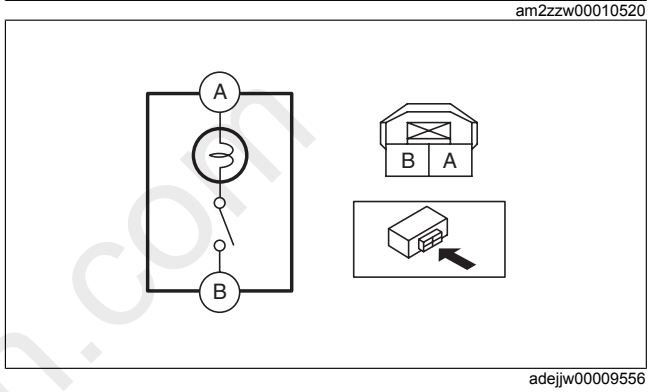

adejjw00009556

cardiagn.com