
FRONT FOG LIGHT REMOVAL/INSTALLATION

id091800802100


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Perform the following procedure.
   Front fog light (LH) or front fog light (RH) (without headlight cleaner system)
   1. Partially peel back the front mudguard. (See MUDGUARD REMOVAL/INSTALLATION.)
   2. Disconnect the connector.

   Front fog light (RH) (with headlight cleaner system)
   1. Remove the front bumper. (See FRONT BUMPER REMOVAL.) (See FRONT BUMPER INSTALLATION.)
3. Remove the screws.

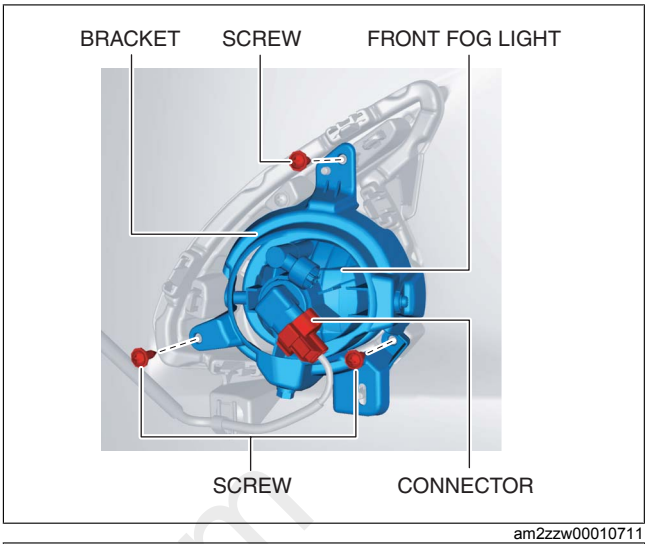


am2zzw00010711

4. Pull the front fog light in the direction shown in the figure and remove the front fog light and the bracket as a single unit from the front bumper.

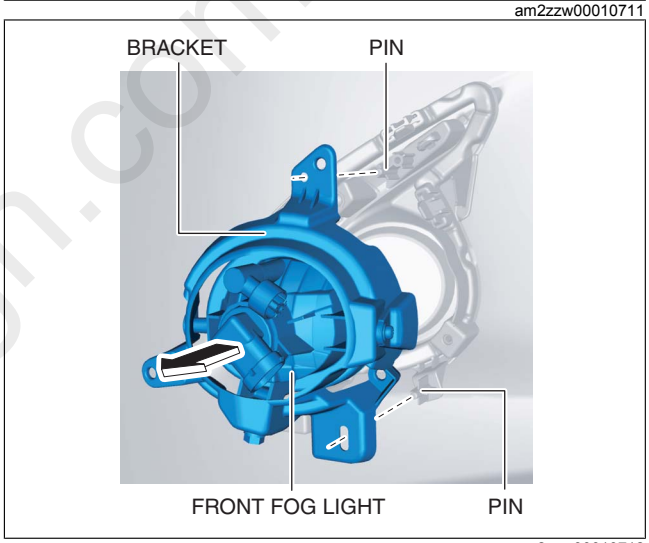

am2zzw00010712


5. Remove the screw.
6. Remove the bolt.

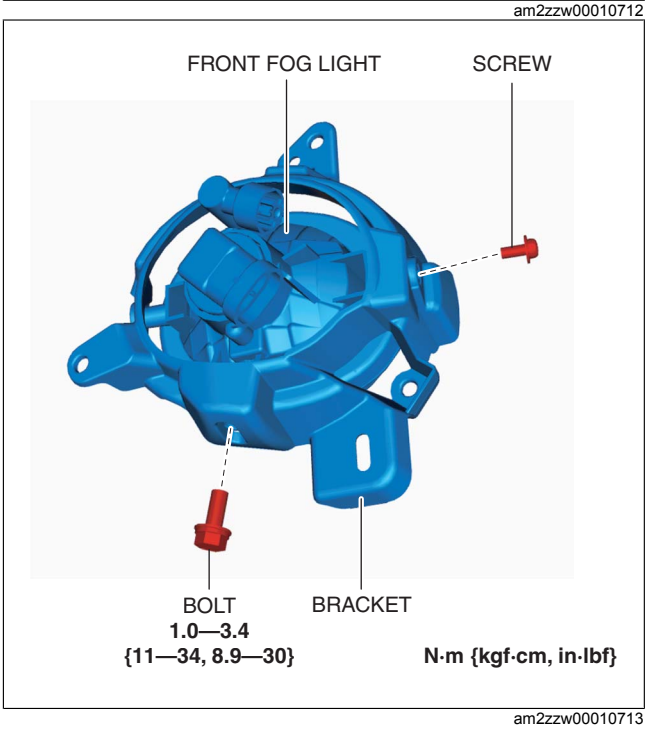

am2zzw00010713

cardiagn.com

7. Remove the front fog light from the bracket.
8. Install in the reverse order of removal.
9. Adjust the front fog light aiming. (See FRONT FOG LIGHT AIMING.)

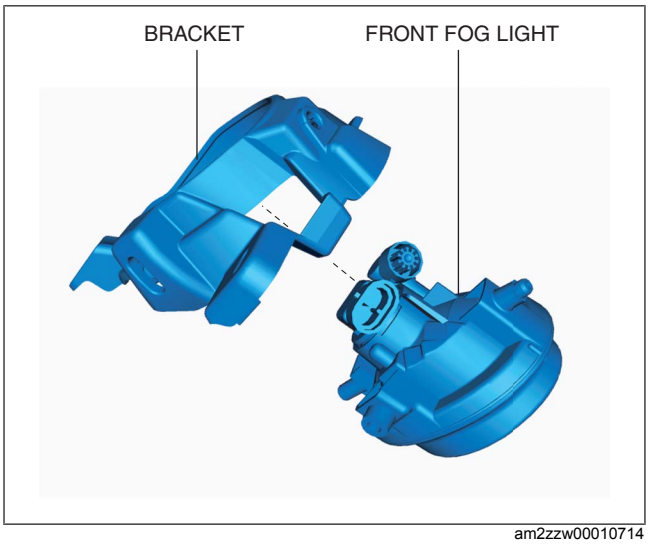

am2zzw00010714

cardiagn.com