LIGHT SWITCH INSPECTION

id091800802900

Light Switch

Note
- When removing the light switch, it is necessary to turn the steering wheel. If the ignition is switched off with the driver's door closed, the steering wheel is locked. Perform Steps 1—3 to prevent the steering wheel from being locked.

1. Switch the ignition ON (engine off or on).
2. Open the driver's door.
3. Switch the ignition off.
4. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
5. Remove the column cover. (See COLUMN COVER REMOVAL/INSTALLATION.)
6. Remove the light switch. (See LIGHT SWITCH REMOVAL/INSTALLATION.)
7. Verify that the continuity between the light switch terminals is as indicated in the table.

Without auto light system

LIGHT SWITCH LEFT SIDE

○—○ : Continuity

Switch position			Terminal					
Light	Dimmer	FLASH-TO-PASS	C	D	E	F	I	K
OFF	—	Off			○	○		
		On	○		○	○		○
TNS	—	Off		○	○			
		On	○	○	○			○
HEAD	LO	Off		○	○			○
		On	○	○	○			○
	HI	—		○	○		○	○


LIGHT SWITCH RIGHT SIDE

○—○ : Continuity


Switch position			Terminal					
Light	Dimmer	FLASH-TO-PASS	A	C	F	G	H	I
OFF	—	Off			○	○		
		On	○		○	○		○
TNS	—	Off				○	○	
		On	○			○	○	○
HEAD	LO	Off	○			○	○	
		On	○			○	○	○
	HI	—	○	○		○	○	

am2zzw00010568

LIGHT SWITCH LEFT SIDE

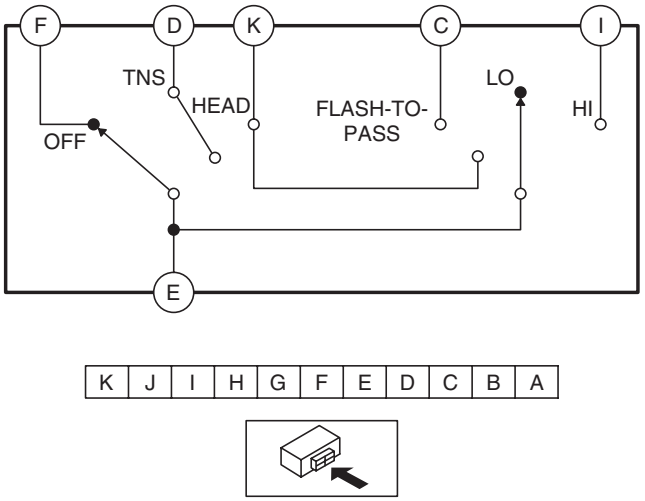

LIGHT SWITCH RIGHT SIDE

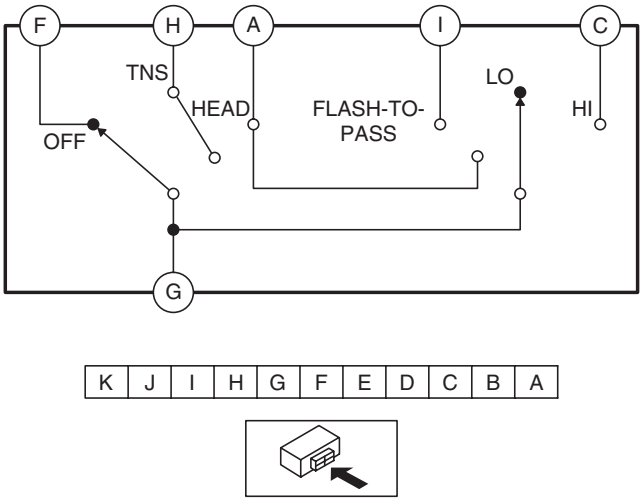

am2zzw00010569

With auto light system

LIGHT SWITCH LEFT SIDE

○—○ : Continuity


Switch position			Terminal					
Light	Dimmer	FLASH-TO-PASS	C	D	E	F	I	K
OFF	—	Off			○	○		
		On	○		○	○		○
AUTO	LO	Off						
		On	○		○			○
TNS	—	Off		○	○			
		On	○	○	○			○
HEAD	LO	Off		○	○			○
		On	○	○	○			○
	HI	—		○	○		○	○

LIGHT SWITCH RIGHT SIDE

○—○ : Continuity

Switch position			Terminal					
Light	Dimmer	FLASH-TO-PASS	A	C	F	G	H	I
OFF	—	Off			○	○		
		On	○		○	○		○
AUTO	LO	Off						
		On	○			○		○
TNS	—	Off				○	○	
		On	○			○	○	○
HEAD	LO	Off	○			○	○	
		On	○			○	○	○
	HI	—	○	○		○	○	

am2zzw00010570

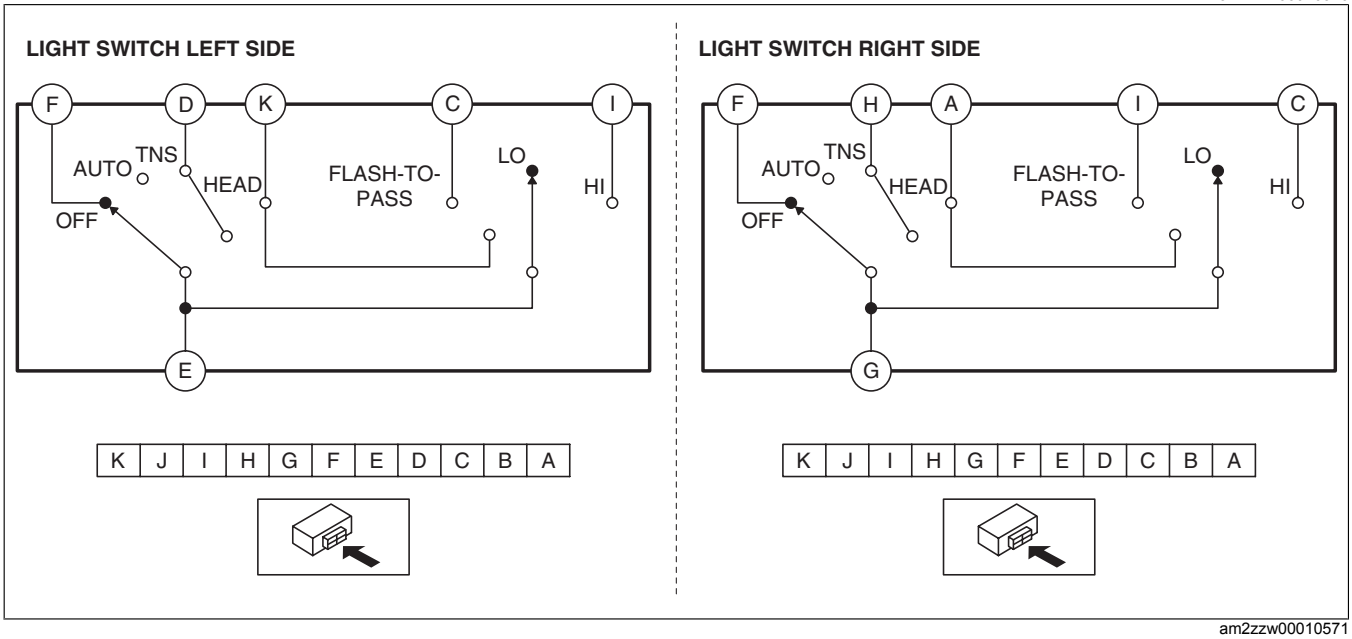

am2zzw00010571

- If not as indicated in the table, replace the light switch. (See LIGHT SWITCH REMOVAL/INSTALLATION.)

Turn Switch

Note
- When removing the light switch, it is necessary to turn the steering wheel. If the ignition is switched off with the driver's door closed, the steering wheel is locked. Perform Steps 1—3 to prevent the steering wheel from being locked.

1. Switch the ignition ON (engine off or on).
2. Open the driver's door.
3. Switch the ignition off.
4. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
5. Remove the column cover. (See COLUMN COVER REMOVAL/INSTALLATION.)
6. Remove the light switch. (See LIGHT SWITCH REMOVAL/INSTALLATION.)
7. Verify that the continuity between the light switch terminals is as indicated in the table.

LIGHT SWITCH LEFT SIDE

○—○ : Continuity

Switch position	Terminal		
	A	B	E
RH		○—○	
OFF			
LH	○		○


LIGHT SWITCH RIGHT SIDE

○—○ : Continuity


Switch position	Terminal		
	G	J	K
RH	○	○	
OFF			
LH	○		○

am2zzw00010572


LIGHT SWITCH LEFT SIDE

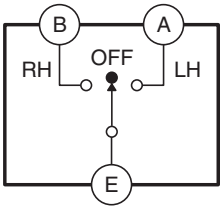






LIGHT SWITCH RIGHT SIDE

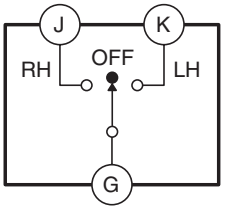





am2zzw00010573

- If not as indicated in the table, replace the light switch. (See LIGHT SWITCH REMOVAL/INSTALLATION.)