HAZARD WARNING SWITCH INSPECTION

id091800803100

Continuity Inspection


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Open the glove compartment.
3. Remove the center panel. (See CENTER PANEL REMOVAL/INSTALLATION.)
4. Remove the switch panel. (See SWITCH PANEL REMOVAL/INSTALLATION.)
5. Verify that the continuity between the hazard warning switch terminals is as indicated in the table.

○—○ : Continuity

Switch position	Terminal	
	C	D
On	○	○
Off		

am2zzw00010582


- If not as indicated in the table, replace the hazard warning switch. (See HAZARD WARNING SWITCH REMOVAL/INSTALLATION.)

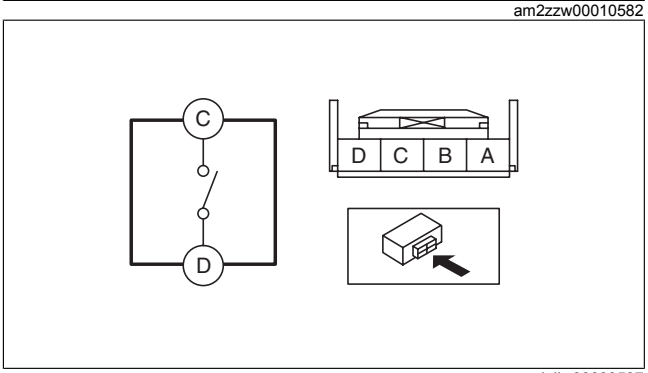

adejjw00009587

LED Illumination Inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Open the glove compartment.
3. Remove the center panel. (See CENTER PANEL REMOVAL/INSTALLATION.)
4. Remove the switch panel. (See SWITCH PANEL REMOVAL/INSTALLATION.)
5. Apply battery voltage to hazard warning switch terminal A, and connect terminal B to ground.

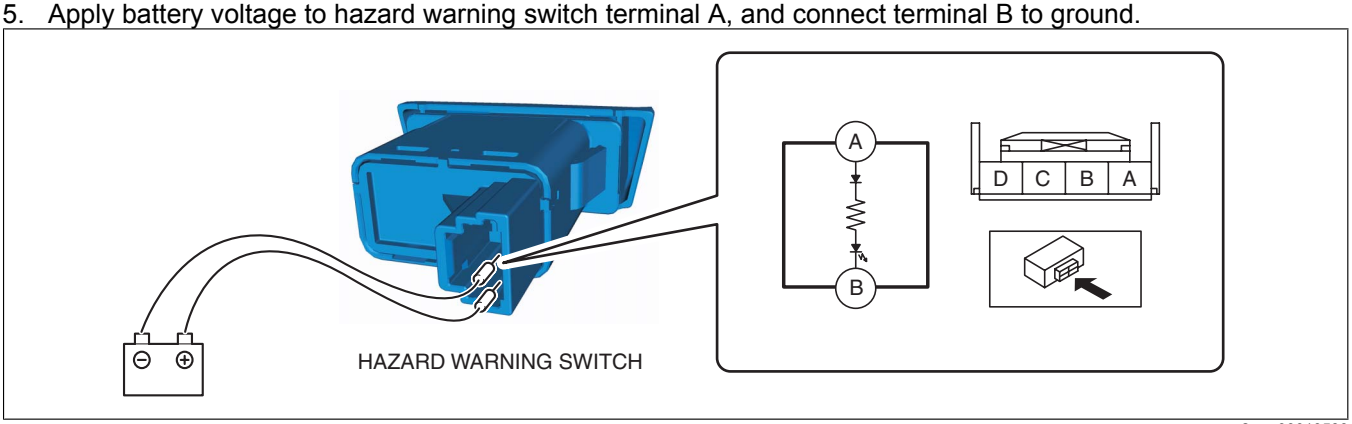

am2zzw00010583

6. Verify that the LED is turned on.
   - If the LED does not turn on, replace the hazard warning switch. (See HAZARD WARNING SWITCH REMOVAL/INSTALLATION.)