HEADLIGHT LEVELING SWITCH INSPECTION

id091800803700


Note
- The headlight leveling switch is integrated with the cluster switch.
- If the headlight leveling switch is to be replaced, replace the cluster switch. (See CLUSTER SWITCH REMOVAL/INSTALLATION.)

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Driver-side front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Driver-side front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (3) Bonnet release lever (See BONNET RELEASE LEVER AND RELEASE CABLE REMOVAL/INSTALLATION.)
   (4) Fuel-filler lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)
   (5) Driver-side lower panel (See DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
   (6) Cluster switch (See CLUSTER SWITCH REMOVAL/INSTALLATION.)
3. Verify that the resistance between the cluster switch terminals is as indicated in the table.

◯—WW—◯ : Resistance

Switch position	Terminal			Resistance (ohms)
	D	E	F	
0	◯—WW—◯			470.25—479.75
-	◯—WW—◯			648.45—661.55
1	◯—WW—◯			826.65—843.35
-	◯—WW—◯			1,004.85—1,025.15
2	◯—WW—◯			1,183.05—1,206.95
-	◯—WW—◯			1,361.25—1,388.75
3	◯—WW—◯			1,539.45—1,570.55
-	◯—WW—◯			1,717.65—1,752.35
4	◯—WW—◯			1,895.85—1,934.15
-	◯—WW—◯			2,074.05—2,115.95
5	◯—WW—◯			2,252.25—2,297.75
All positions	◯—WW—◯			2,976.93—3,037.07

am2zzw00010586

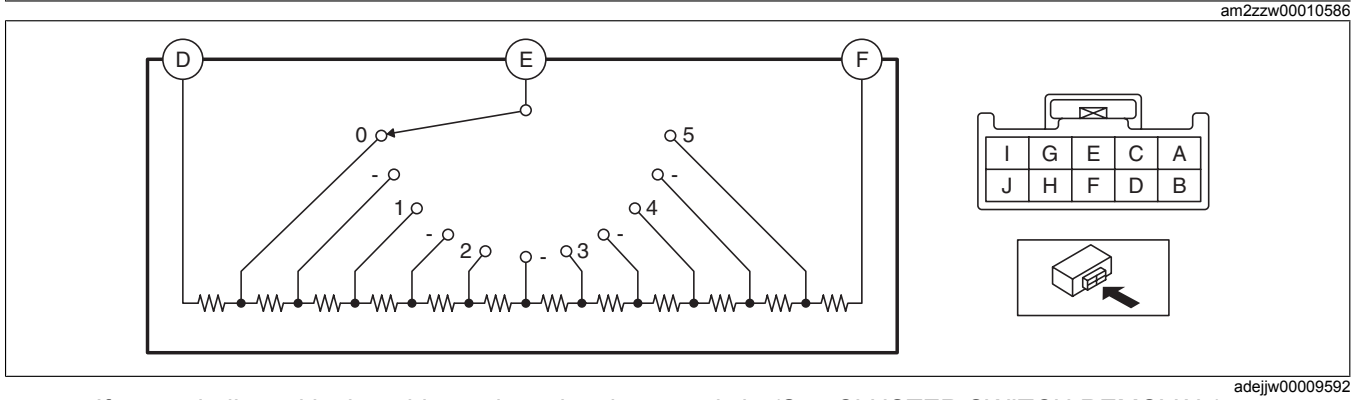

adejjw00009592

- If not as indicated in the table, replace the cluster switch. (See CLUSTER SWITCH REMOVAL/INSTALLATION.)