REAR FOG LIGHT SWITCH INSPECTION

id091800804700

Note

- When removing the light switch, it is necessary to turn the steering wheel. If the ignition is switched off with the driver's door closed, the steering wheel is locked. Perform Steps 1—3 to prevent the steering wheel from being locked.

1. Switch the ignition ON (engine on).
2. Open the driver's door.
3. Switch the ignition off.
4. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
5. Remove the column cover. (See COLUMN COVER REMOVAL/INSTALLATION.)
6. Remove the light switch. (See LIGHT SWITCH REMOVAL/INSTALLATION.)
7. Verify that the continuity between the light switch terminals is as indicated in the table.

With light switch on left side

○—○ : Continuity


Switch position	Terminal	
	E	H
R.FOG	○	○
OFF		

With light switch on right side

○—○ : Continuity

Switch position	Terminal	
	D	G
R.FOG	○	○
OFF		

am3zzw00013873

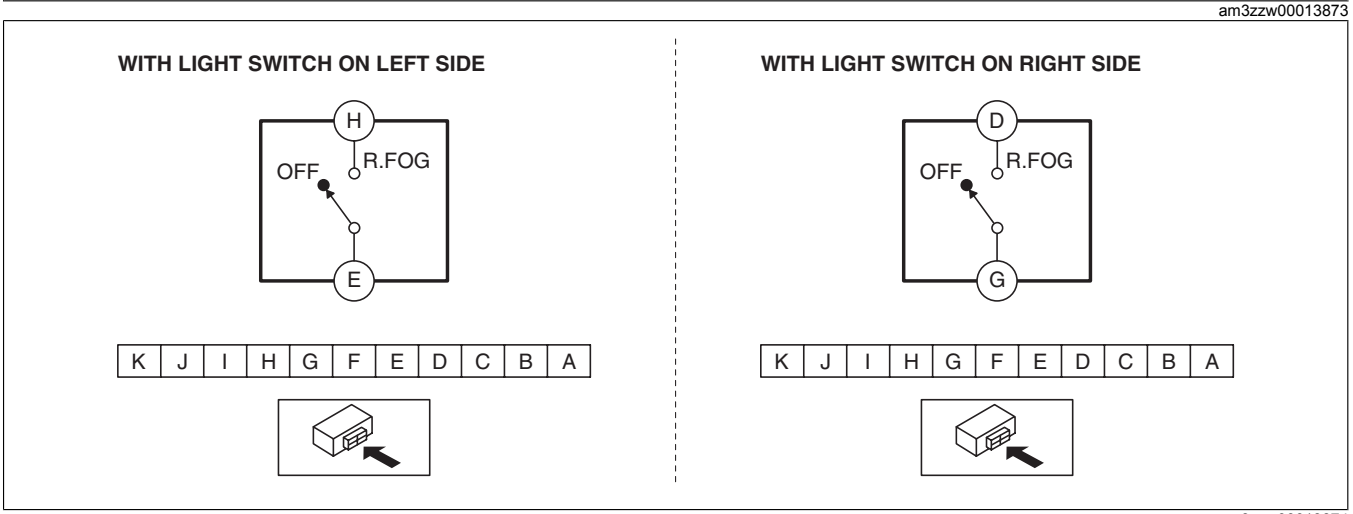

am3zzw00013874

- If not as indicated in the table, replace the light switch. (See LIGHT SWITCH REMOVAL/INSTALLATION.)