
FRONT TURN LIGHT BULB REMOVAL/INSTALLATION

id091800805000

1. Turn the steering wheel in the direction opposite to the side on which the bulb is to be removed.
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Partially peel back front mudguard. (See MUDGUARD REMOVAL/INSTALLATION.)
4. Turn the socket counterclockwise and remove it in the direction of arrow (1) shown in the figure.

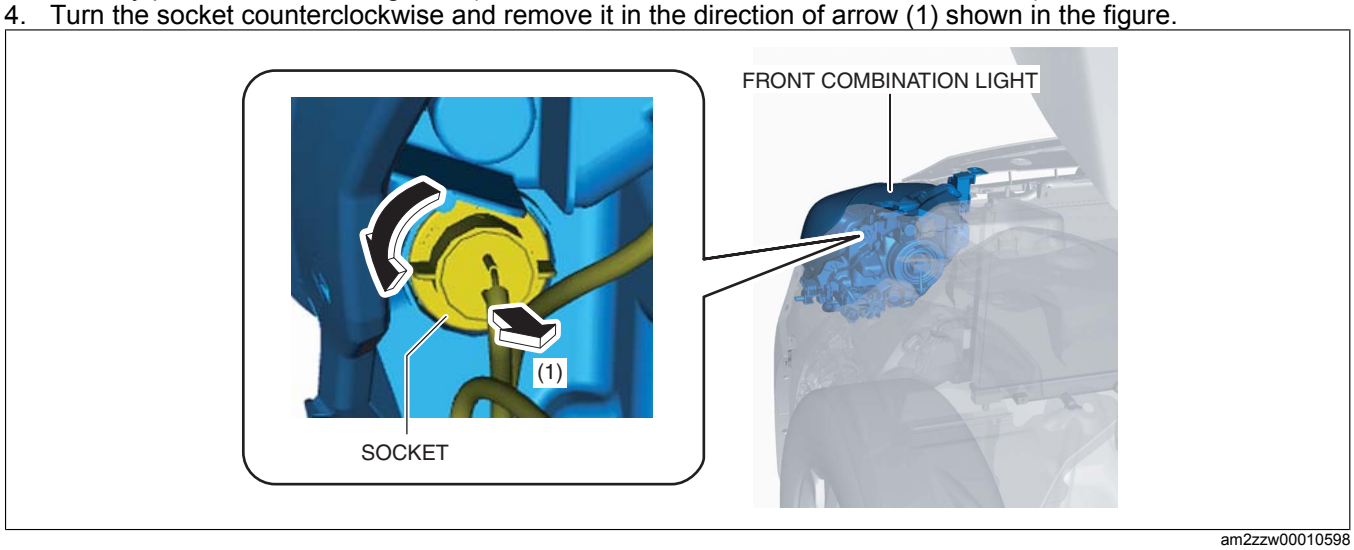


am2zzw00010598

Caution

- **If there is oil or dirt on the surface of the light bulb, excessive heat will build up and the life of the light bulb will be shortened. If the light bulb glass area is touched, wipe off any dirt using a soft cloth dampened with detergent diluted in water (approx. 5 %).**

5. Remove the front turn light bulb.
6. Install in the reverse order of removal.

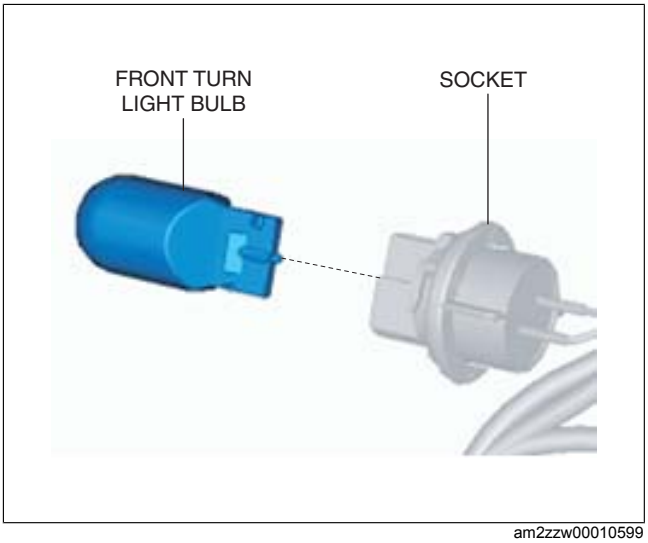

am2zzw00010599