FRONT MAP LIGHT INSPECTION

id091800808600

Single light type

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   4SD
   1. A-pillar trim (See A-PILLAR TRIM REMOVAL/INSTALLATION.)
   2. Sunvisor (See SUNVISOR REMOVAL/INSTALLATION.)
   3. Assist handle (See ASSIST HANDLE REMOVAL/INSTALLATION.)
   4. Coat hook (See HEADLINER REMOVAL/INSTALLATION.)
   5. Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   6. Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
   7. B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
   8. Adjust anchor cover (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
   9. Upper anchor installation bolt on the seat belt (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
   10. B-pillar upper trim (See B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.)
   11. C-pillar trim (See C-PILLAR TRIM REMOVAL/INSTALLATION.)

   5HB
   1. A-pillar trim (See A-PILLAR TRIM REMOVAL/INSTALLATION.)
   2. Sunvisor (See SUNVISOR REMOVAL/INSTALLATION.)
   3. Assist handle (See ASSIST HANDLE REMOVAL/INSTALLATION.)
   4. Coat hook (See HEADLINER REMOVAL/INSTALLATION.)
   5. Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   6. Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
   7. B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
   8. Adjust anchor cover (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
   9. Upper anchor installation bolt on the seat belt (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
   10. B-pillar upper trim (See B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.)
   11. Rear seat cushion (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
   12. Lower anchor installation bolt on the rear center seat belt (See REAR CENTER SEAT BELT REMOVAL/INSTALLATION.)
   13. Rear seat back (See REAR SEAT BACK REMOVAL/INSTALLATION.)
   14. Rear package tray (See REAR PACKAGE TRAY REMOVAL/INSTALLATION.)
   15. Trunk covering (See TRUNK COVERING REMOVAL/INSTALLATION.)
   16. Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
   17. Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
   18. Trunk side trim (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
   19. C-pillar trim (See C-PILLAR TRIM REMOVAL/INSTALLATION.)
3. Place the headliner on the seats. (See HEADLINER REMOVAL/INSTALLATION.)

   Note
   - The front map light can be removed without having to remove the headliner from the vehicle.

4. Remove the front map light (See FRONT MAP LIGHT REMOVAL/INSTALLATION.)


5. Verify that the continuity between the front map light terminals is as indicated in the table.

: Bulb

Room light switch	Terminal		
	B	C	D
OFF			
ON	○—(∿)—○		
DOOR		○—(∿)—○	

am2zzw00010624

- If not as indicated in the table, replace the front map light bulb or front map light. (See FRONT MAP LIGHT BULB REMOVAL/INSTALLATION.) (See FRONT MAP LIGHT REMOVAL/INSTALLATION.)

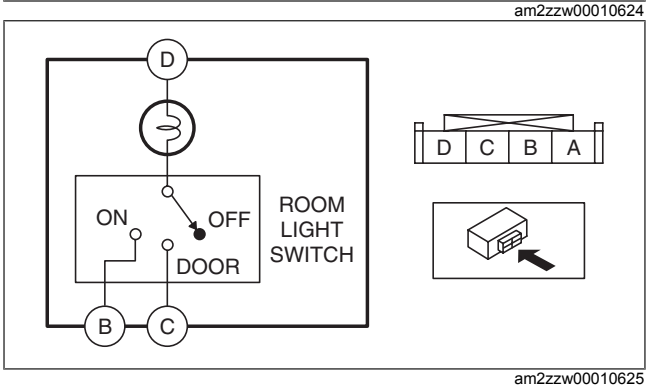

am2zzw00010625


Dual Light Type
Front map light switch

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the front map light. (See FRONT MAP LIGHT REMOVAL/INSTALLATION.)
3. Verify that the continuity between the front map light terminals is as indicated in the table.

: Bulb

Front map light switch		Terminal		
LH	RH	A	F	G
OFF	ON		○—(∿)—○	○—(∿)—○
ON	OFF	○—(∿)—○		○—(∿)—○
OFF	OFF			○—(∿)—○
ON	ON	○—(∿)—○		

am2zzw00010626

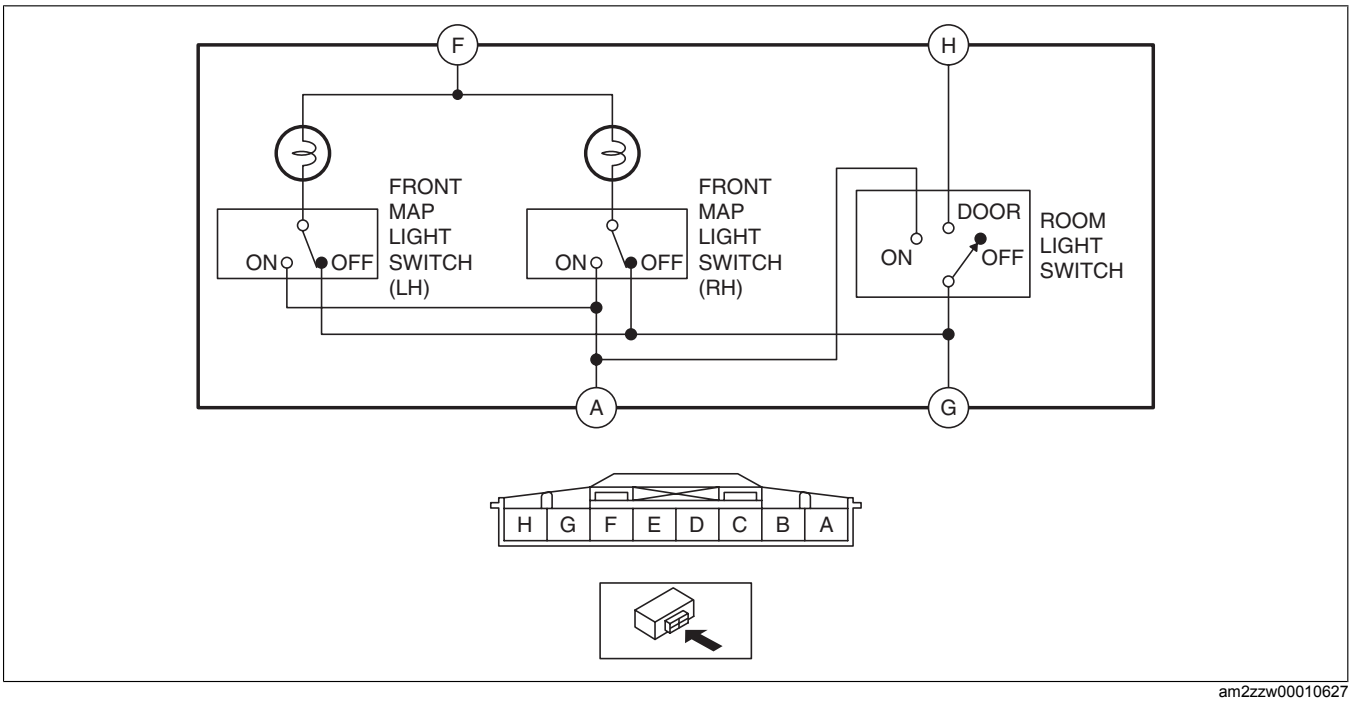

am2zzw00010627

- If not as indicated in the table, replace the front map light bulb or the front map light. (See FRONT MAP LIGHT BULB REMOVAL/INSTALLATION.) (See FRONT MAP LIGHT REMOVAL/INSTALLATION.)


Room light switch

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the front map light. (See FRONT MAP LIGHT REMOVAL/INSTALLATION.)
3. Verify that the continuity between the front map light terminals is as indicated in the table.

○——○ : Continuity

Room light switch	Terminal		
	A	G	H
OFF			
ON	○	○	
DOOR		○	○

am2zzw00010628

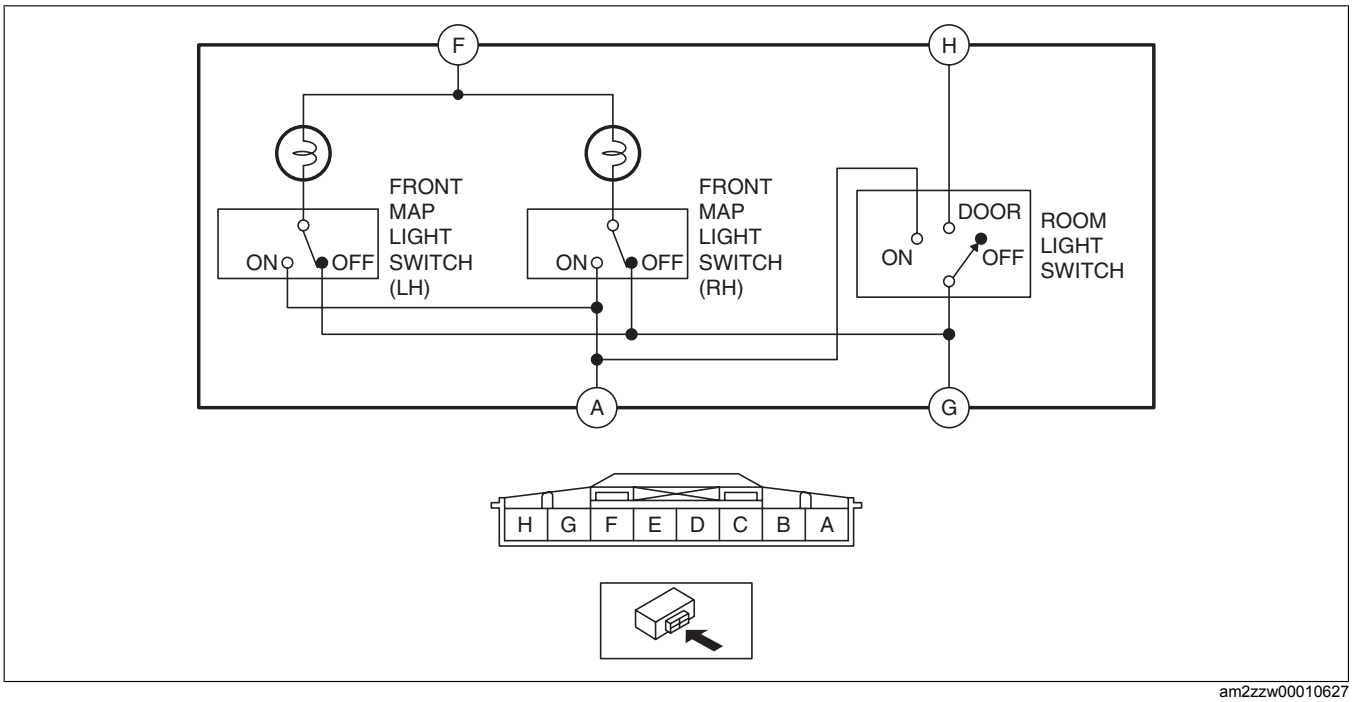

am2zzw00010627

- If not as indicated in the table, replace the front map light. (See FRONT MAP LIGHT REMOVAL/ INSTALLATION.)