
HEADLIGHT LEVELING ACTUATOR INSPECTION

id091800809700

Note
- The headlight leveling actuator is integrated with the front combination light.
- Perform the headlight auto leveling system actuator inspection using the headlight leveling actuator operation check mode. (See HEADLIGHT LEVELING ACTUATOR OPERATION CHECK MODE [HEADLIGHT AUTO LEVELING SYSTEM].)
- To replace the headlight leveling actuator, replace the front combination light. (See FRONT COMBINATION LIGHT REMOVAL/INSTALLATION.)

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the front bumper. (See FRONT BUMPER REMOVAL.) (See FRONT BUMPER INSTALLATION.)
3. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
4. Verify that the voltages of each of the terminals are as indicated in the terminal voltage table.
   - If the voltage is not as indicated in the table, inspect the parts under Inspection item(s).
     — If the system does not work normally even though the parts under Inspection item(s) or related wiring harnesses do not have any malfunction, replace the front combination light. (See FRONT COMBINATION LIGHT REMOVAL/INSTALLATION.)

Terminal Voltage Table (Reference)

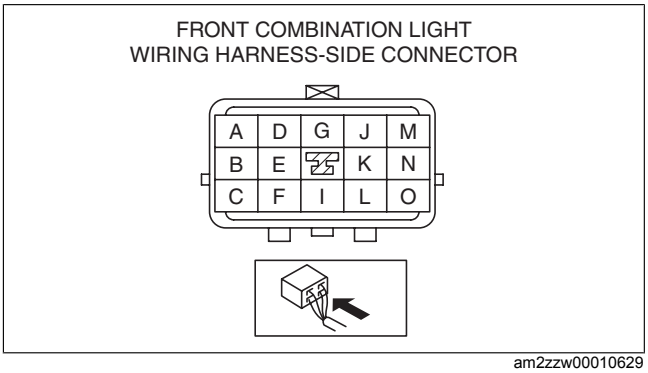

am2zzw00010629

Terminal	Signal name	Connected to	Measurement condition		Voltage (V)	Inspection item(s)
F	Headlight leveling actuator signal	Headlight leveling switch	Headlight LO turned on	Headlight leveling switch position 0	Approx. 10.1	• Headlight leveling switch • Related wiring harness
				Headlight leveling switch position -	Approx. 9.4	
				Headlight leveling switch position 1	Approx. 8.7	
				Headlight leveling switch position -	Approx. 7.9	
				Headlight leveling switch position 2	Approx. 7.2	
				Headlight leveling switch position -	Approx. 6.5	
				Headlight leveling switch position 3	Approx. 5.8	
				Headlight leveling switch position -	Approx. 5.1	
				Headlight leveling switch position 4	Approx. 4.4	
				Headlight leveling switch position -	Approx. 3.6	
				Headlight leveling switch position 5	Approx. 2.9	
I	Headlight leveling actuator power supply	• Headlight leveling switch • IG1 relay	Headlight LO turned on		B+	• Headlight leveling switch • IG1 relay • Related wiring harness
			Headlight LO turned off		1.0 or less	
L	Ground	• Headlight leveling switch • Body ground	Under any condition		1.0 or less	• Headlight leveling switch • Related wiring harness