
BACK-UP LIGHT BULB REMOVAL/INSTALLATION

id091800810000

4SD

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Partially peel back the trunk lid trim. (See TRUNK LID TRIM REMOVAL/INSTALLATION.)
3. Disconnect the connector.

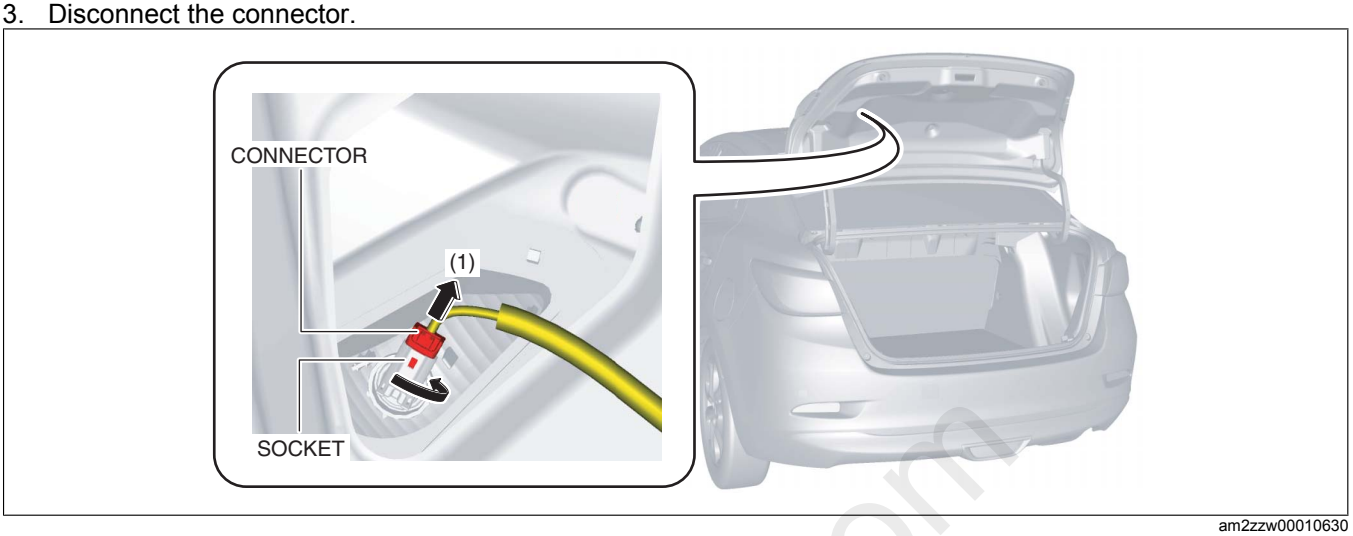


am2zzw00010630

4. Turn the socket counterclockwise and remove it in the direction of arrow (1) shown in the figure.

Caution

- **If there is oil or dirt on the surface of the light bulb, excessive heat will build up and the life of the light bulb will be shortened. If the light bulb glass area is touched, wipe off any dirt using a soft cloth dampened with detergent diluted in water (approx. 5 %).**

5. Remove the back-up light bulb.
6. Install in the reverse order of removal.

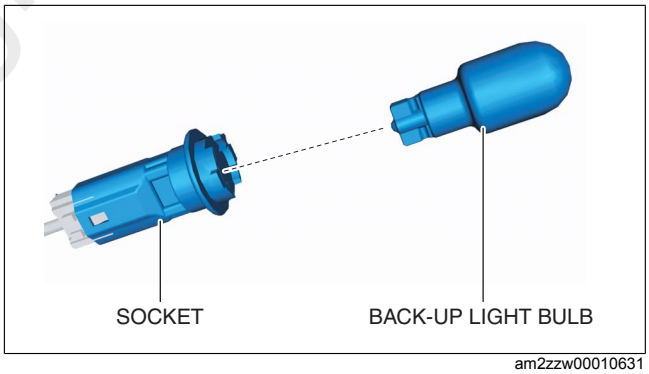


am2zzw00010631

5HB

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Partially peel back the liftgate lower trim (See LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.)
3. Turn the socket counterclockwise and remove it in the direction of arrow (1) shown in the figure.

cardiagn.com

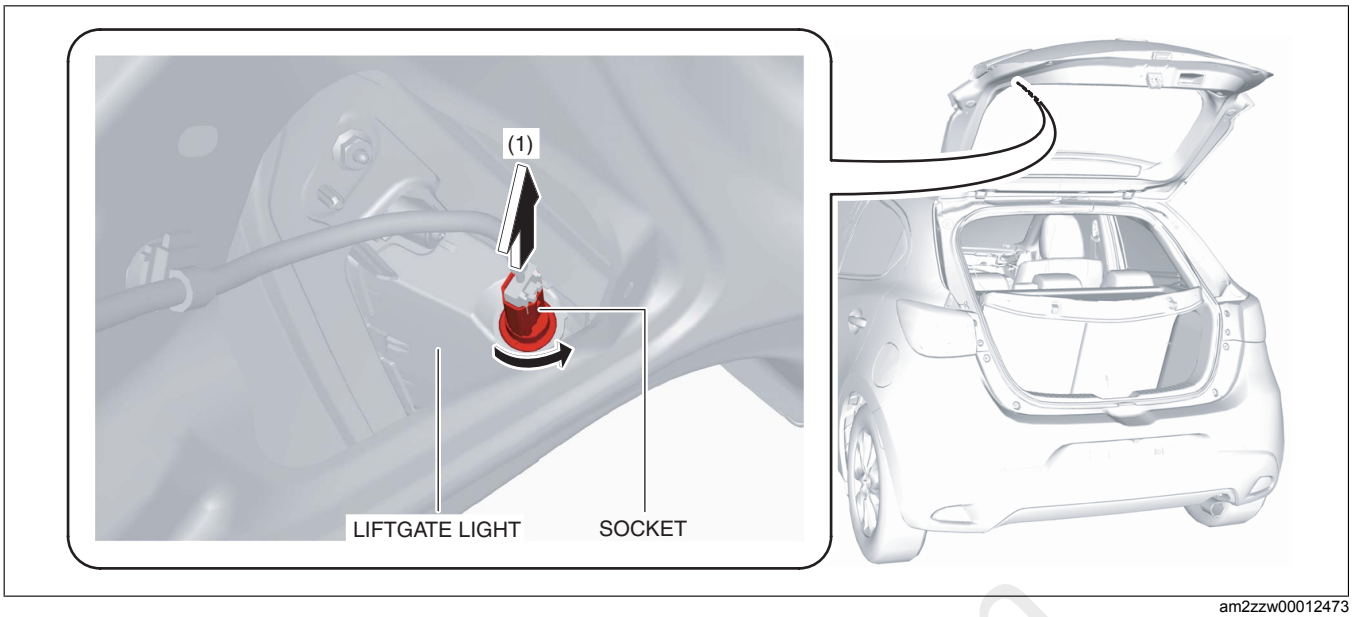


am2zzw00012473

Caution

- **If there is oil or dirt on the surface of the light bulb, excessive heat will build up and the life of the light bulb will be shortened. If the light bulb glass area is touched, wipe off any dirt using a soft cloth dampened with detergent diluted in water (approx. 5 %).**

4. Remove the back-up light bulb.
5. Install in the reverse order of removal.

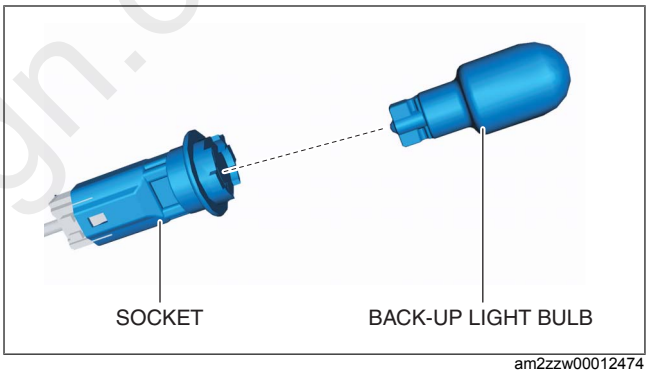

am2zzw00012474

cardiagn.com