
STEERING ANGLE SENSOR INSPECTION

id091800813400


Note
- If the steering angle sensor is removed from the clock spring, the steering angle sensor absolute angle could change, therefore, do not remove the steering angle sensor from the clock spring.
- If the steering angle sensor is replaced, replace it together with the clock spring. (See CLOCK SPRING REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See CLOCK SPRING REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)

1. Remove the column cover. (See COLUMN COVER REMOVAL/INSTALLATION.)
2. Connect the plus (+) end of a tester to steering angle sensor terminal A and the minus (-) end of the tester to terminal B (ground).
3. Switch the ignition ON (engine off or on).
4. Turn the steering wheel to the right and left.

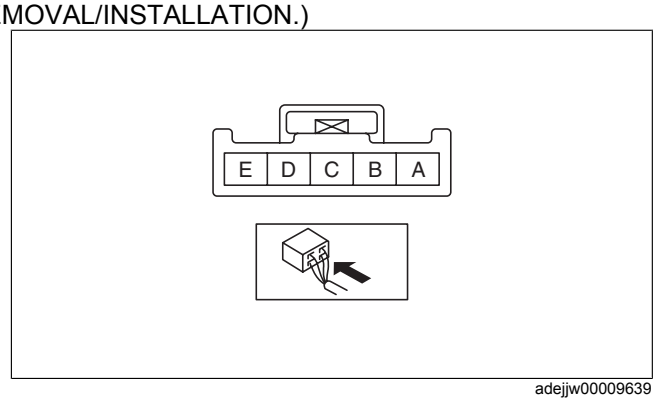

adejjw00009639


5. Verify that the voltage between steering angle sensor terminals A and B (ground) is as indicated in the table.

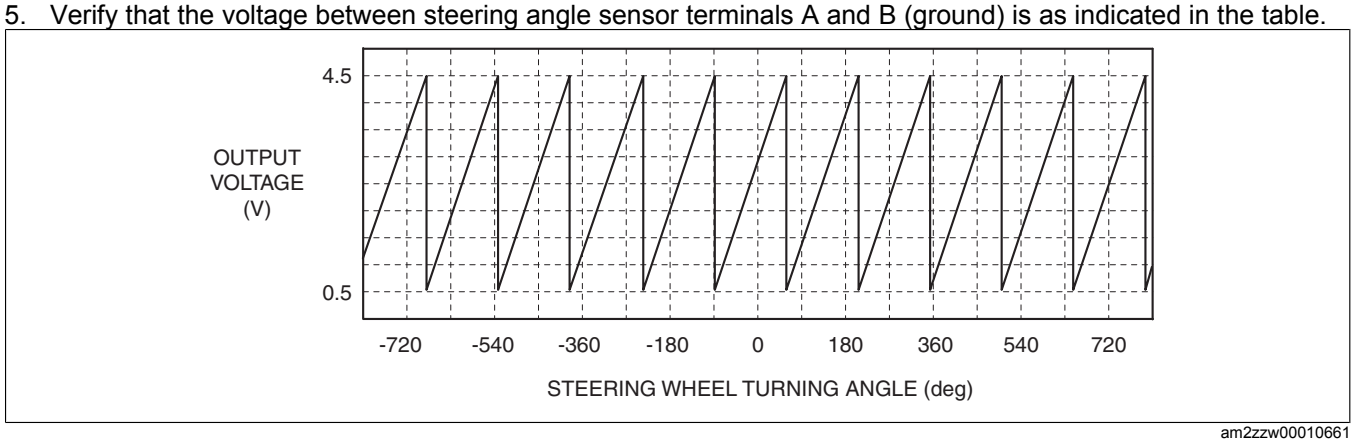

am2zzw00010661

- If the voltage can be verified as indicated in the table, go to the next step.
- If not as indicated in the table, replace the clock spring. (See CLOCK SPRING REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See CLOCK SPRING REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)

6. Switch the ignition off.
7. Connect the plus (+) end of a tester to steering angle sensor terminal C and the minus (-) end of the tester to terminal B (ground).
8. Switch the ignition ON (engine off or on).
9. Turn the steering wheel to the right and left.
10. Verify that the voltage between steering angle sensor terminals C and B (ground) is as indicated in the table.

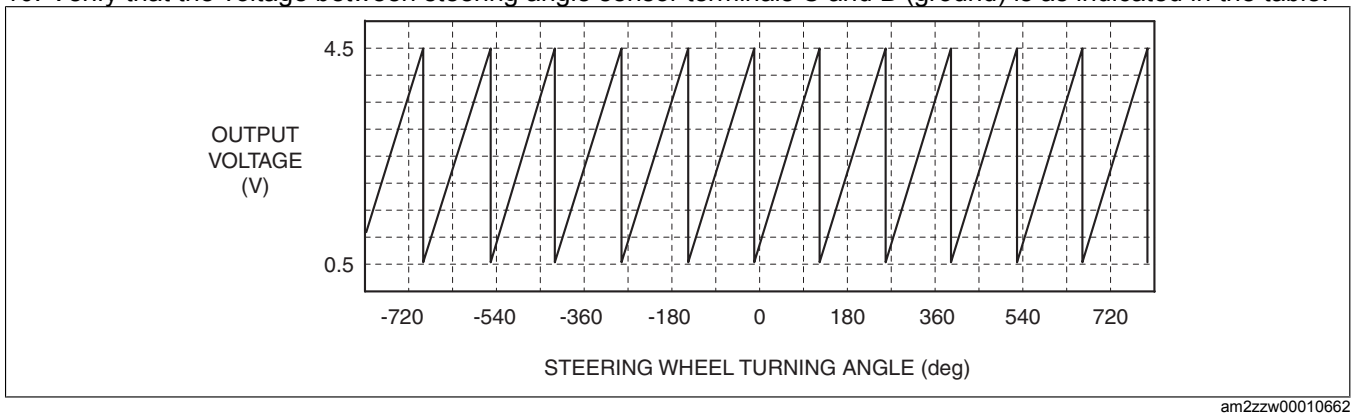

am2zzw00010662

- If not as indicated in the table, replace the clock spring. (See CLOCK SPRING REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See CLOCK SPRING REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)