
REAR TURN LIGHT BULB REMOVAL/INSTALLATION

id091800813800


4SD

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the service hole cover.

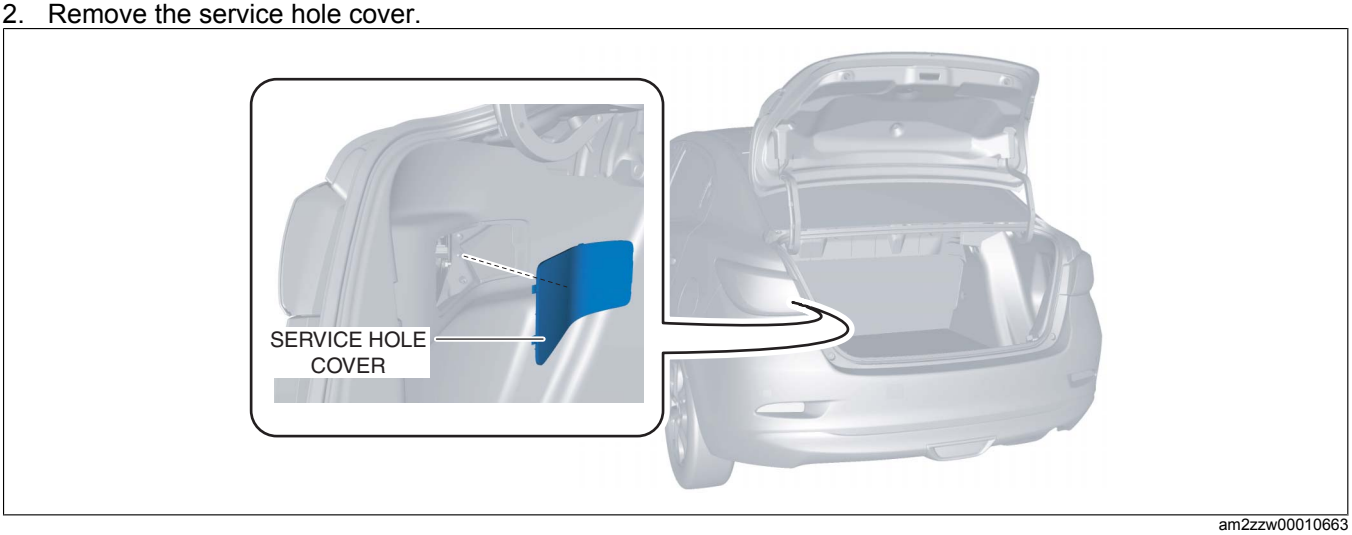

am2zzw00010663

3. Turn the socket counterclockwise and remove it in the direction of arrow (1) shown in the figure.

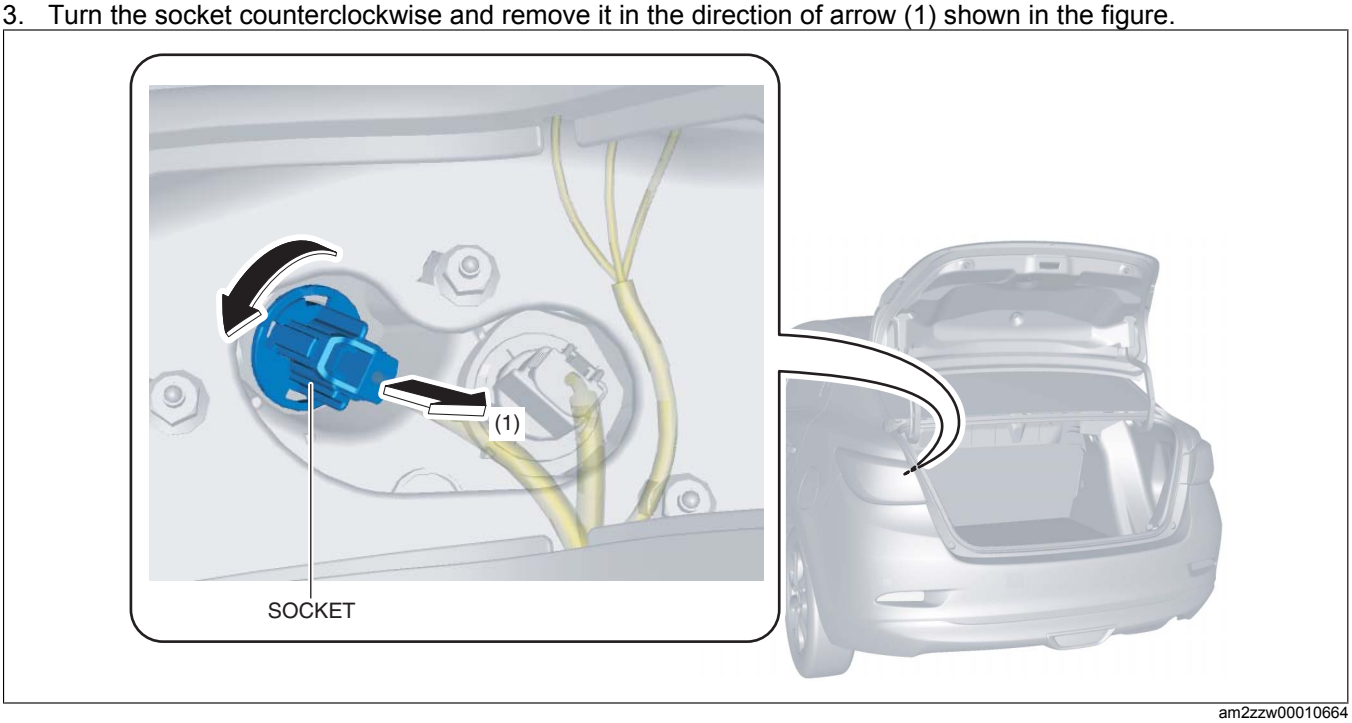


am2zzw00010664

Caution

- **If there is oil or dirt on the surface of the light bulb, excessive heat will build up and the life of the light bulb will be shortened. If the light bulb glass area is touched, wipe off any dirt using a soft cloth dampened with detergent diluted in water (approx. 5 %).**


4. Remove the rear turn light bulb.
5. Install in the reverse order of removal.

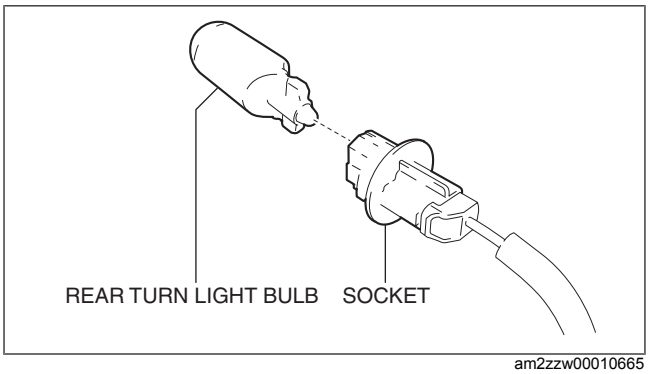

am2zzw00010665

5HB

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Pull the rear combination light from the body. (See REAR COMBINATION LIGHT REMOVAL/INSTALLATION.)
3. Turn the socket counterclockwise and remove it in the direction of arrow (1) shown in the figure.

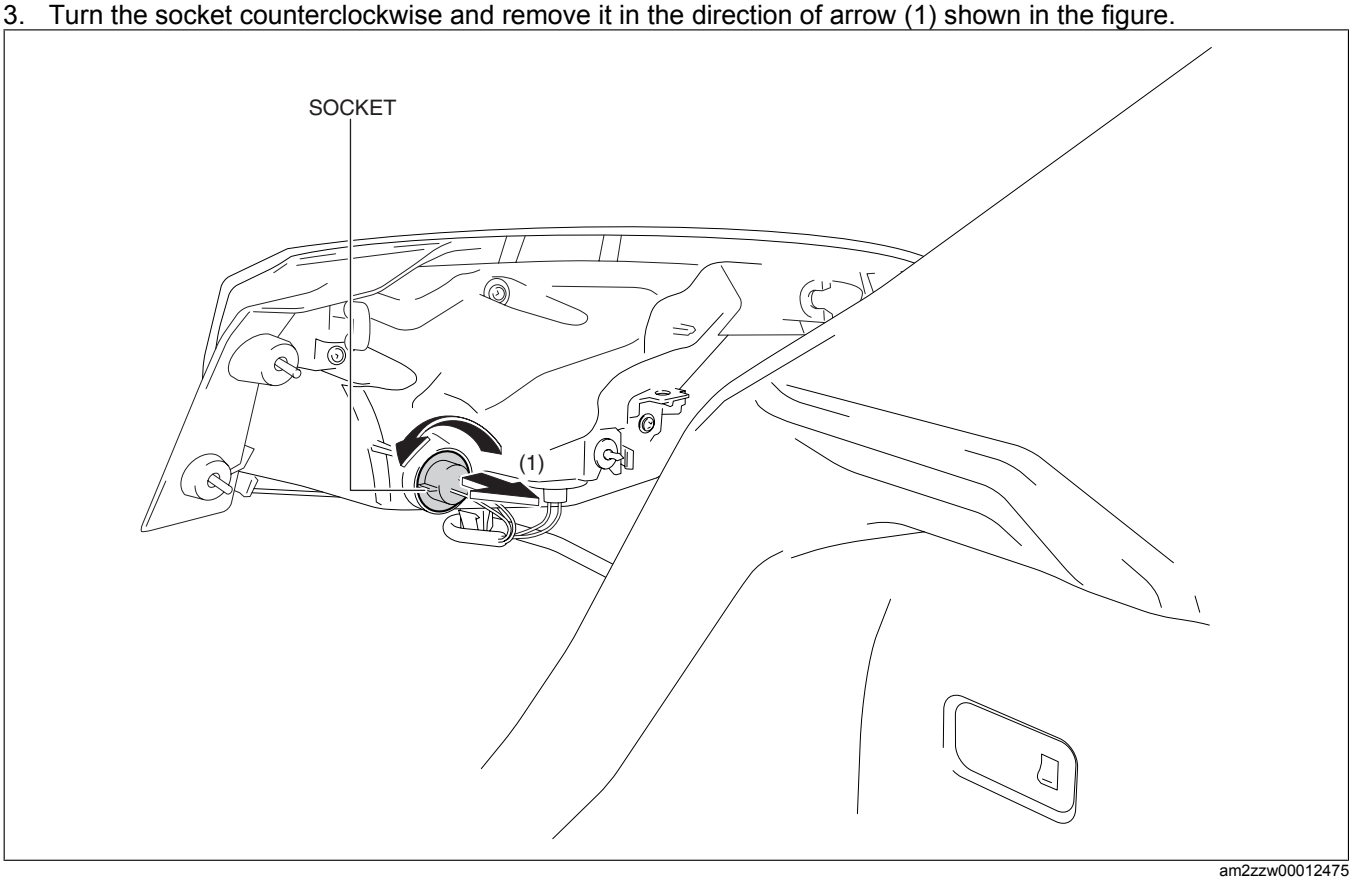


am2zzw00012475

Caution

- **If there is oil or dirt on the surface of the light bulb, excessive heat will build up and the life of the light bulb will be shortened. If the light bulb glass area is touched, wipe off any dirt using a soft cloth dampened with detergent diluted in water (approx. 5 %).**

4. Remove the rear turn light bulb.
5. Install in the reverse order of removal.

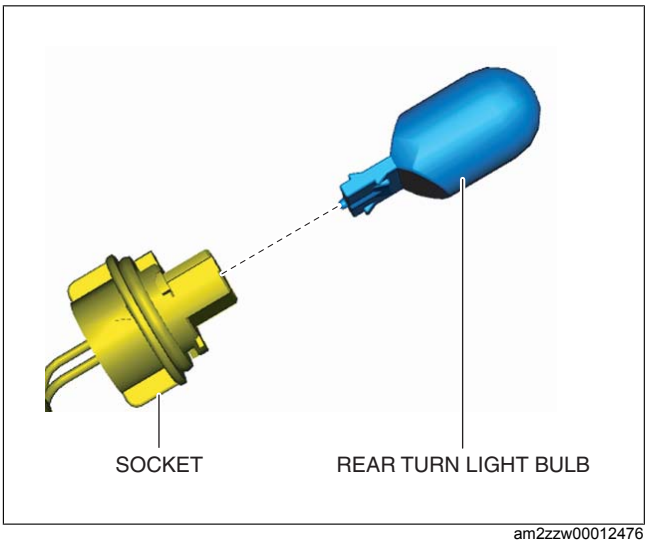

am2zzw00012476