
FRONT COMBINATION LIGHT DISASSEMBLY/ASSEMBLY

id091800816000


1. Disassemble in the order shown in the figure.

Front combination light (bulb type)

WITHOUT HEADLIGHT MANUAL LEVELING SYSTEM

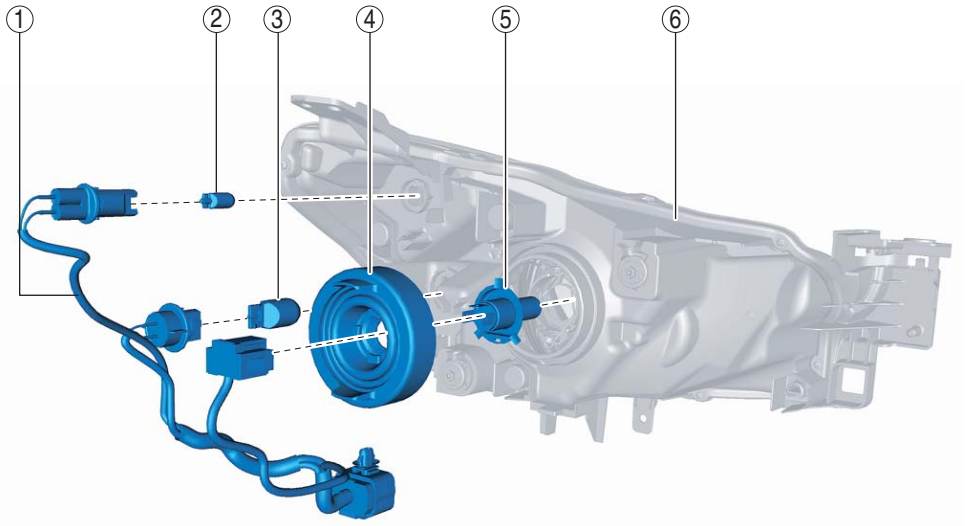


WITH HEADLIGHT MANUAL LEVELING SYSTEM

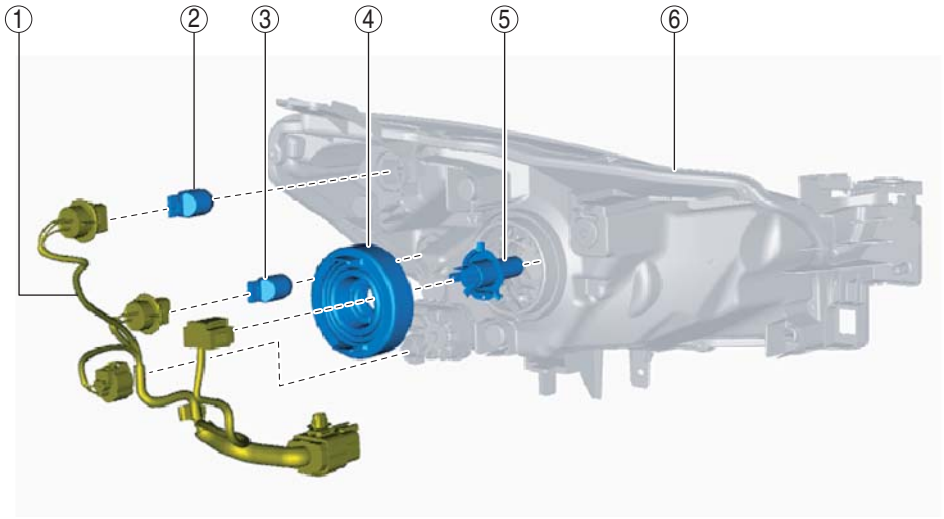

am2zzw00010668

1	Short cord (See Short Cord Removal Note.)
2	Parking light bulb (See PARKING LIGHT BULB REMOVAL/ INSTALLATION.)
3	Front turn light bulb (See FRONT TURN LIGHT BULB REMOVAL/ INSTALLATION.)
4	Cover (See Cover Installation Note.)
5	Headlight HI/LO bulb (See HEADLIGHT BULB REMOVAL/ INSTALLATION.)
6	Front combination light

Front combination light (LED type)

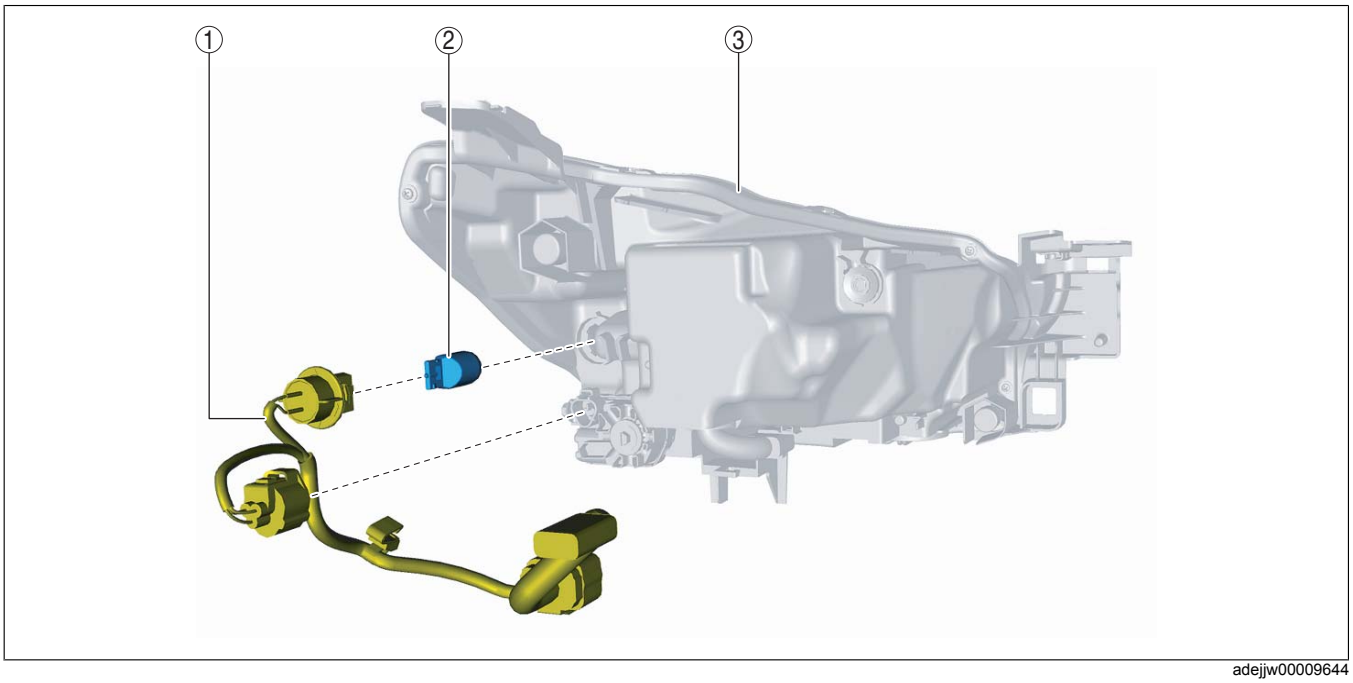


adejjw00009644

1	Short cord (See Short Cord Removal Note.)
2	Front turn light bulb (See FRONT TURN LIGHT BULB REMOVAL/ INSTALLATION.)
3	Front combination light

2. Assemble in the reverse order of disassembly.

Short Cord Removal Note

1. While pressing the clip tabs in the direction of arrows (1) shown in the figure, press the clip in the direction of arrow (2) to detach the clip tabs from the front combination light.

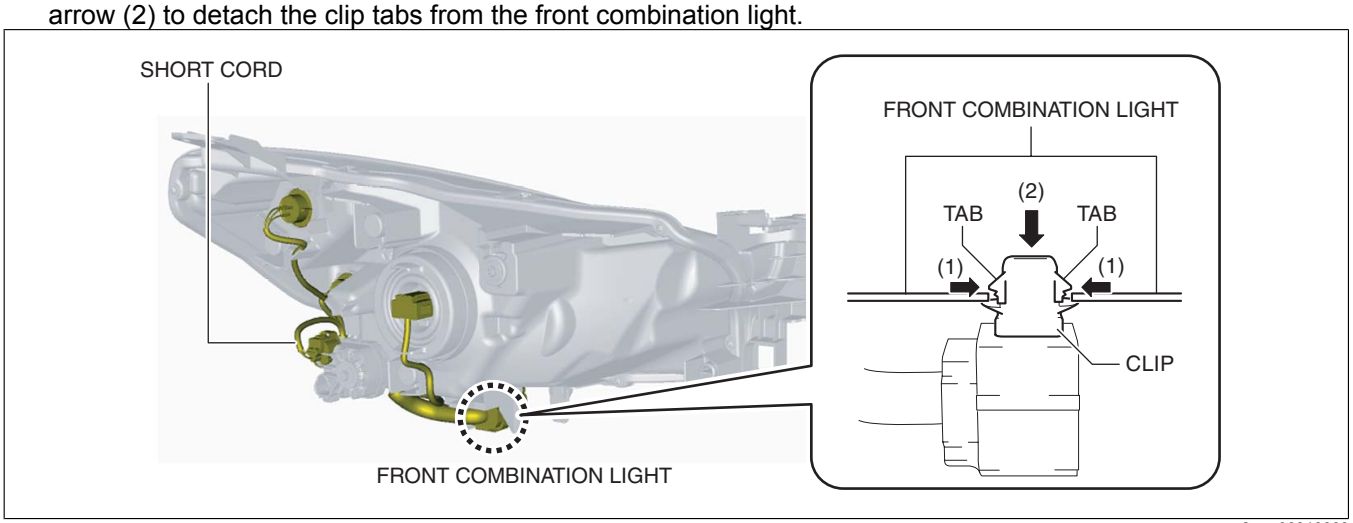

am2zzw00010669


2. Pull the clip out of the front combination light and remove the short cord.

Cover Installation Note

Caution

- **If there is a gap between the housing and the cover, water may penetrate through the gap, causing an electrical shock, short circuit, fogging or condensation inside the front combination light. Verify that there is no gap between the cover and the housing.**

1. Install the cover to the housing so that there is no gap between the housing and the cover.

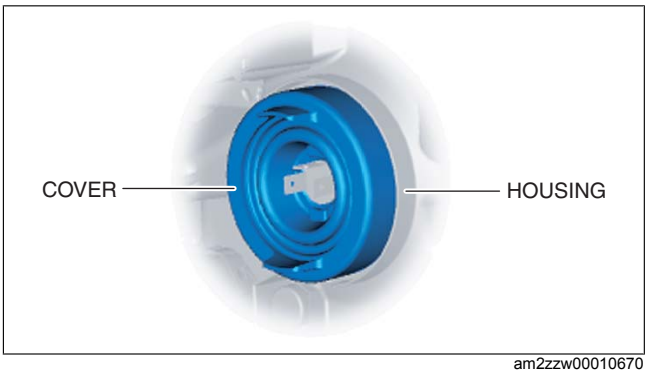

am2zzw00010670