
REAR FOG LIGHT BULB REMOVAL/INSTALLATION

id091800851300

4SD

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION)
2. Turn the socket counterclockwise and remove it in the direction of arrow (1) shown in the figure.

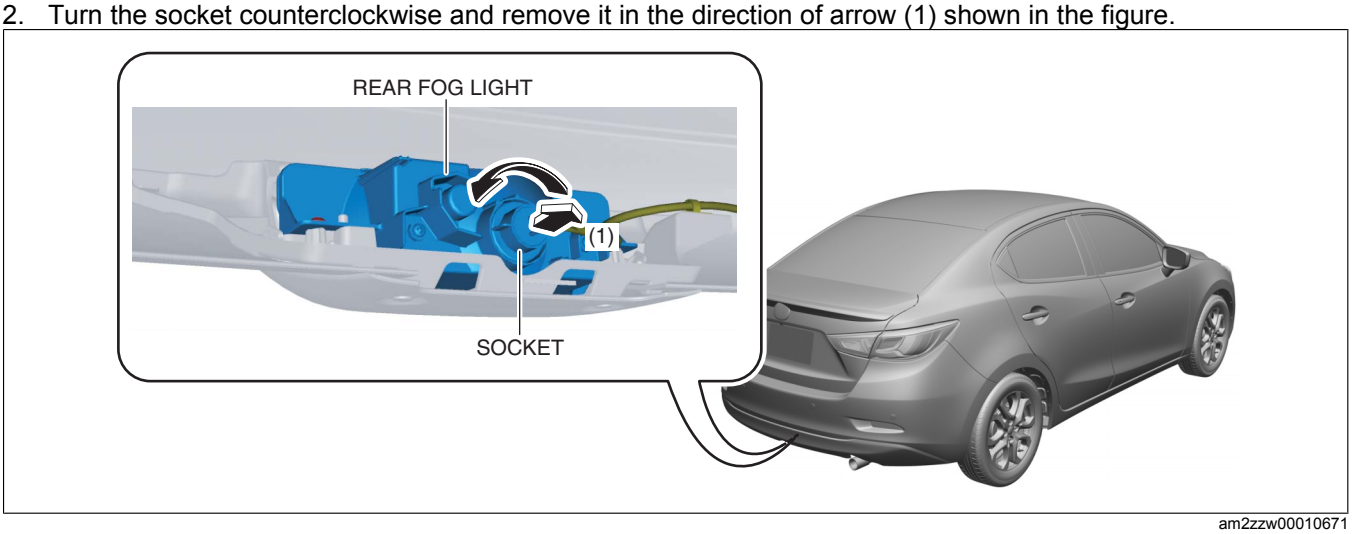


am2zzw00010671

Caution

- **If there is oil or dirt on the surface of the light bulb, excessive heat will build up and the life of the light bulb will be shortened. If the light bulb glass area is touched, wipe off any dirt using a soft cloth dampened with detergent diluted in water (approx. 5 %).**


3. Remove the rear fog light bulb.
4. Install in the reverse order of removal.

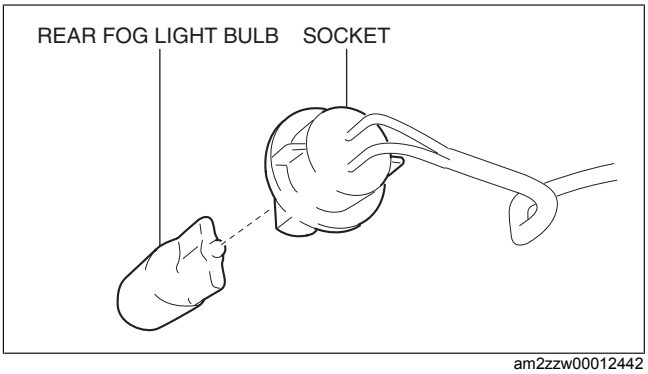

am2zzw00012442

5HB

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION)
2. Partially peel back the rear splash shield. (See SPLASH SHIELD REMOVAL/INSTALLATION.)
3. Turn the socket counterclockwise and remove it in the direction of arrow (1) shown in the figure.

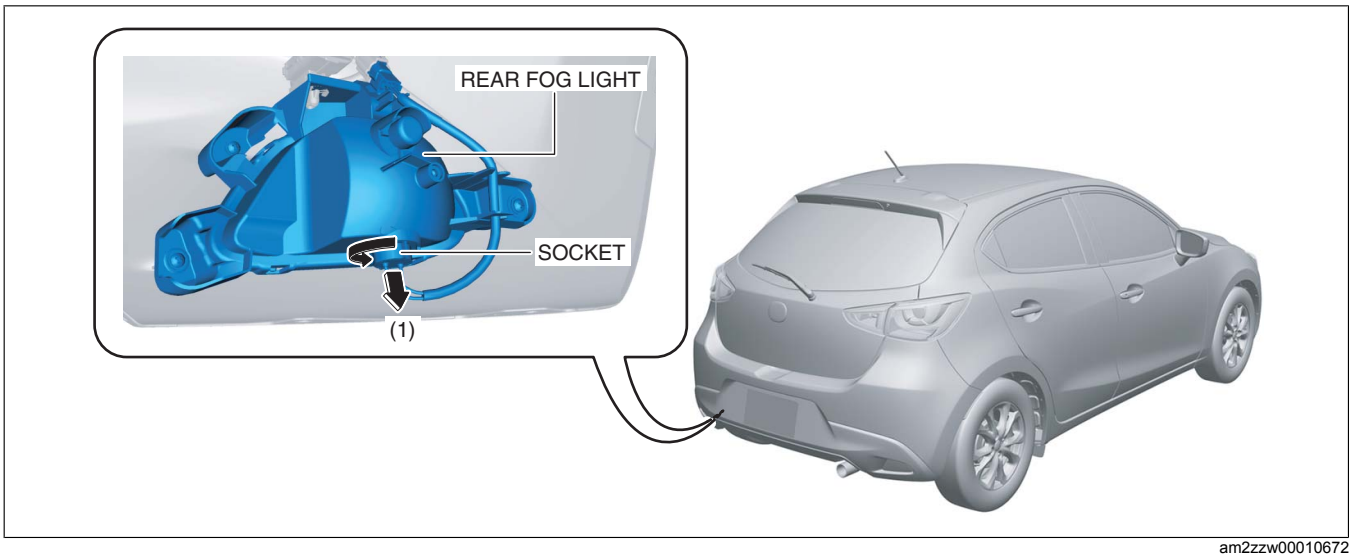


am2zzw00010672

Caution

- **If there is oil or dirt on the surface of the light bulb, excessive heat will build up and the life of the light bulb will be shortened. If the light bulb glass area is touched, wipe off any dirt using a soft cloth dampened with detergent diluted in water (approx. 5 %).**

4. Remove the rear fog light bulb.
5. Install in the reverse order of removal.

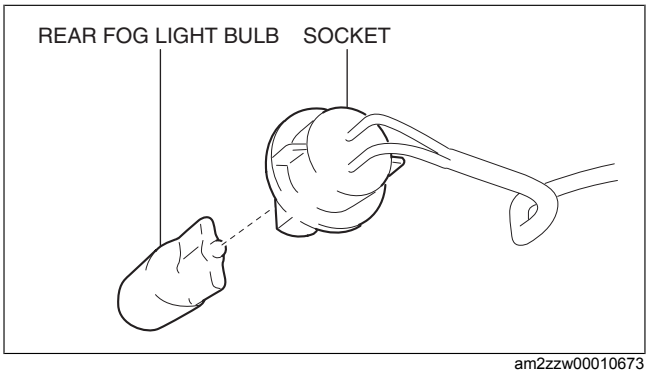

am2zzw00010673