
LICENSE PLATE LIGHT BULB REMOVAL/INSTALLATION

id091800857800

4SD

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the trunk lid trim. (See TRUNK LID TRIM REMOVAL/INSTALLATION.)
3. Turn the socket counterclockwise and remove it in the direction of arrow (1) shown in the figure.

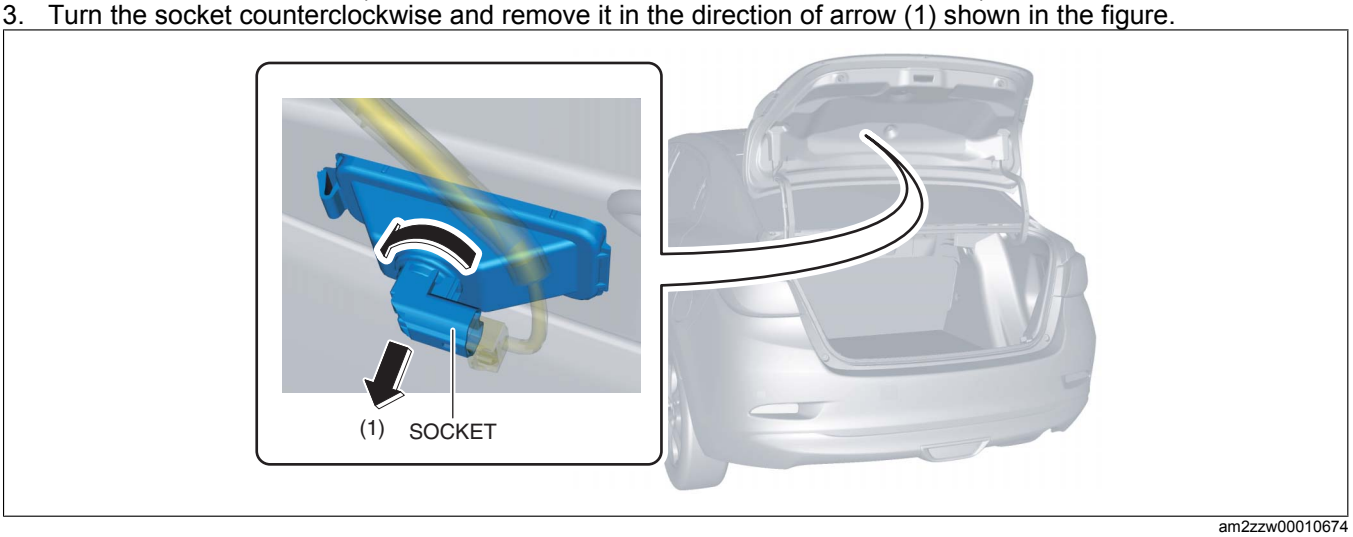


am2zzw00010674

Caution

- **If there is oil or dirt on the surface of the light bulb, excessive heat will build up and the life of the light bulb will be shortened. If the light bulb glass area is touched, wipe off any dirt using a soft cloth dampened with detergent diluted in water (approx. 5 %).**

4. Remove the license plate light bulb.
5. Install in the reverse order of removal.

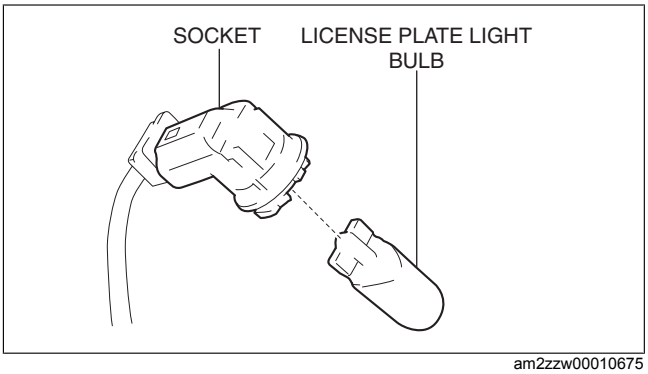


am2zzw00010675

5HB

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the license plate light from the rear bumper. (See LICENSE PLATE LIGHT REMOVAL/ INSTALLATION.)
3. Turn the socket counterclockwise and remove it in the direction of arrow (1) shown in the figure.


Caution

- **If there is oil or dirt on the surface of the light bulb, excessive heat will build up and the life of the light bulb will be shortened. If the light bulb glass area is touched, wipe off any dirt using a soft cloth dampened with detergent diluted in water (approx. 5 %).**

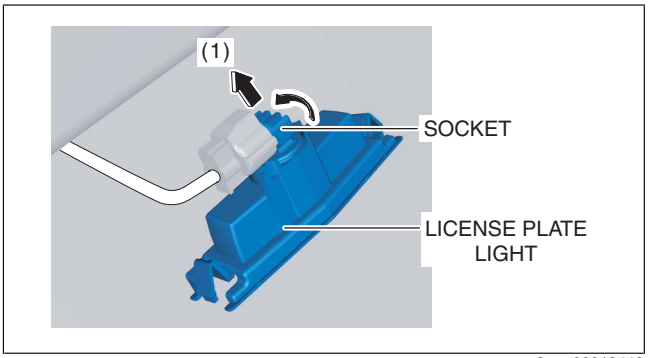

am2zzw00012446

4. Remove the license plate light bulb.
5. Install in the reverse order of removal.

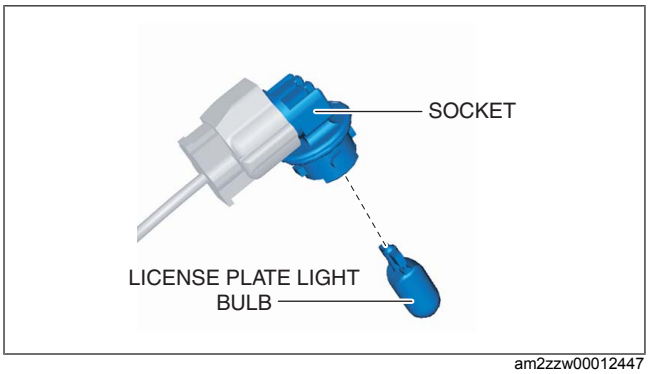

am2zzw00012447