WINDSHIELD WIPER MOTOR AND LINK REMOVAL/INSTALLATION


id091900001200

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the windshield wiper arm and blade. (See WINDSHIELD WIPER ARM AND BLADE REMOVAL/ INSTALLATION.)
3. Disconnect the joint pipe A of the windshield washer hose. (See WINDSHIELD WASHER HOSE REMOVAL/ INSTALLATION.)
4. Remove the cowl grille. (See COWL GRILLE REMOVAL/INSTALLATION.)

Caution


- **Always apply protective tape to the windshield end. If the windshield wiper motor and link contacts the windshield, it could damage the windshield.**

5. Apply protective tape to the area where the windshield end interferes with the windshield wiper motor and link as shown in the figure.

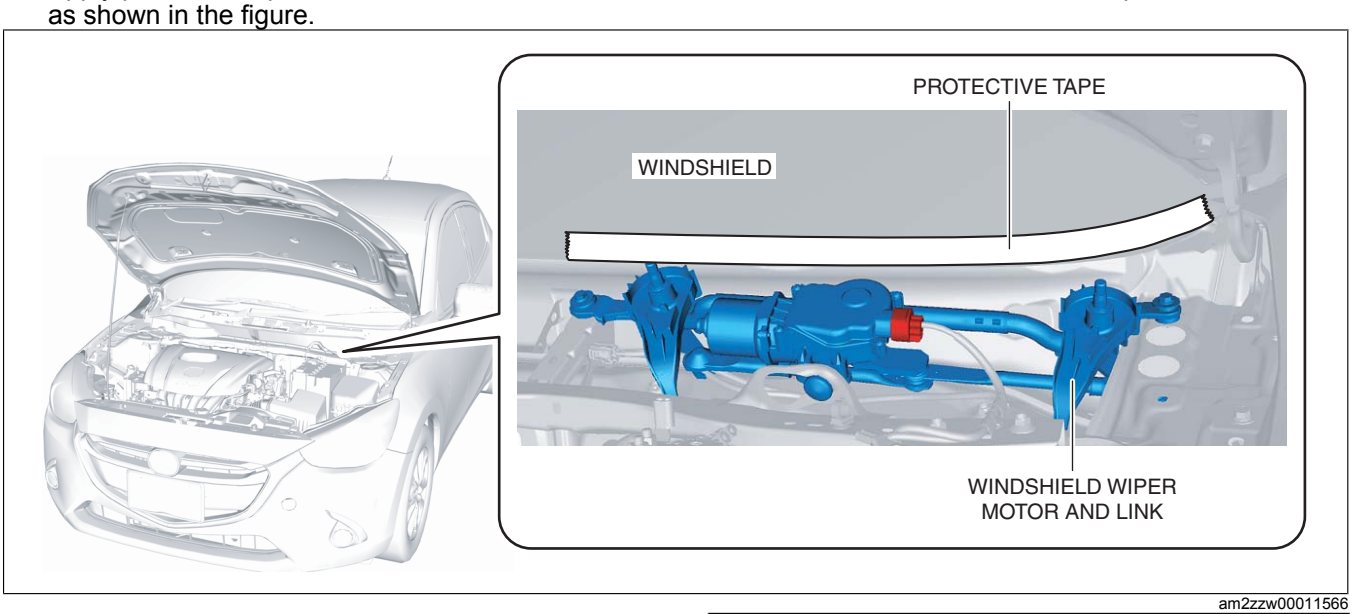

am2zzw00011566

6. Disconnect the connector.
7. Remove the bolts.

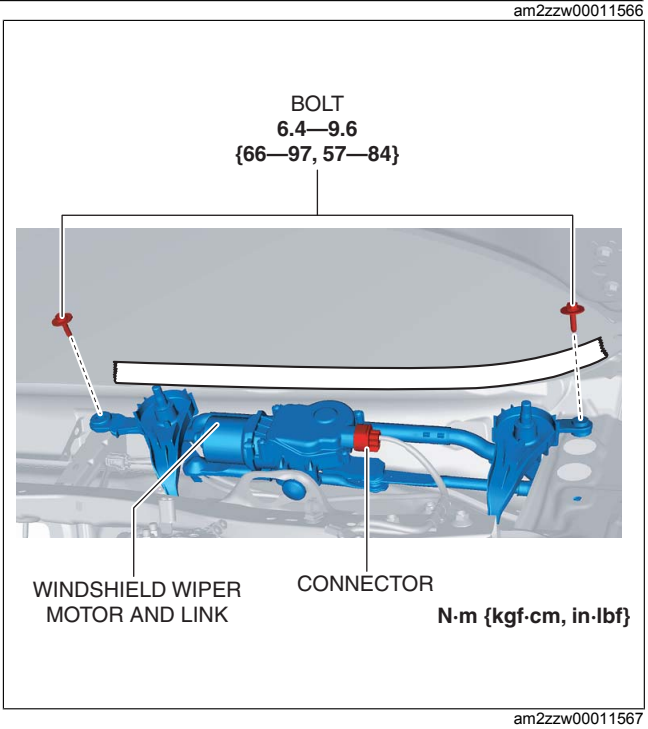


am2zzw00011567

8. Move the windshield wiper motor and link in the direction of the arrow shown in the figure and remove it from the body.
9. Remove the windshield wiper motor and link.


Caution

- **If the vise is tightened with excessive force, it could deform or damage the windshield wiper link. When securing the windshield wiper link in the vise, be careful not to deform or damage the windshield wiper link.**
- **Protect the windshield wiper link by placing a rag in the vise when securing it in the vise. Otherwise, it could damage the area where the vise is secured.**

10. Secure the position of the windshield wiper link shown in the figure in a vise.

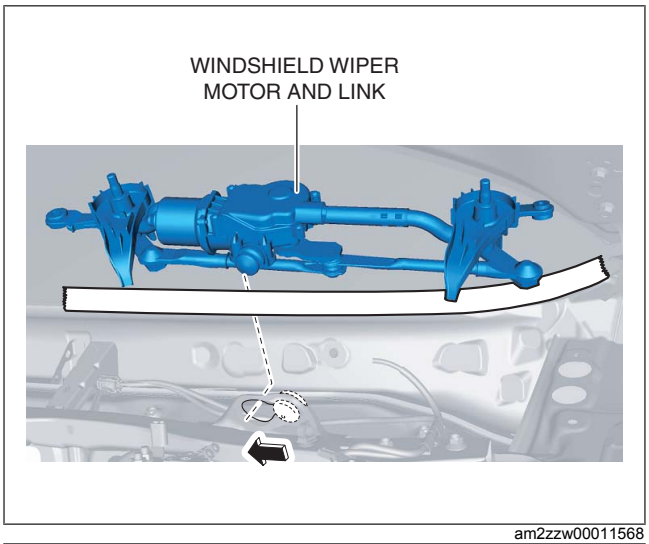


am2zzw00011568

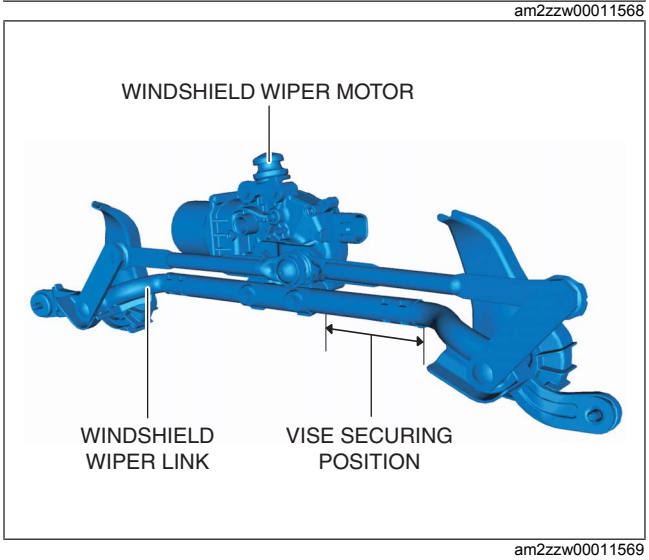

am2zzw00011569


11. Insert a tape-wrapped flathead screwdriver into the gap between windshield wiper links No.1 and 2.

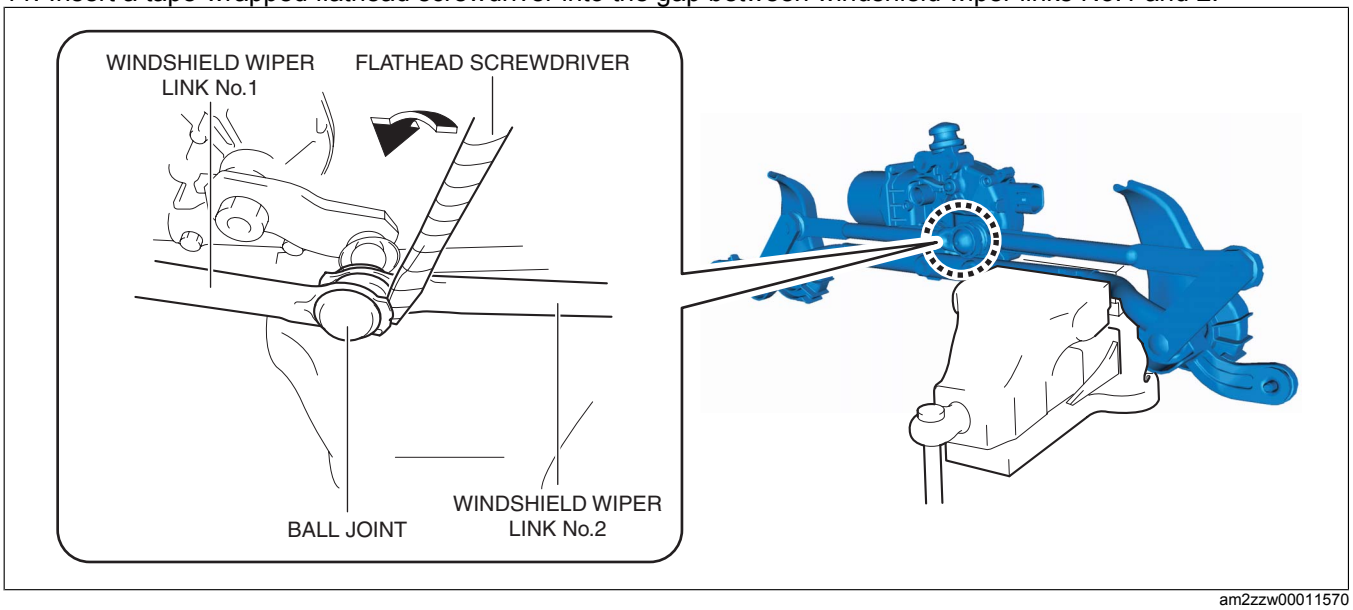

am2zzw00011570


12. Move the flathead screwdriver in the direction of arrow shown in the figure and remove the windshield wiper motor and the ball joint for windshield wiper link No.1. (See Ball Joint Assembly Note.)

13. Remove the rubber seal.
14. Insert a flathead screwdriver into the gap between the windshield wiper motor and windshield wiper link No.2.
15. Move the flathead screwdriver in the direction of arrow shown in the figure and remove the windshield wiper motor and the ball joint for windshield wiper link No.2. (See Ball Joint Assembly Note.)

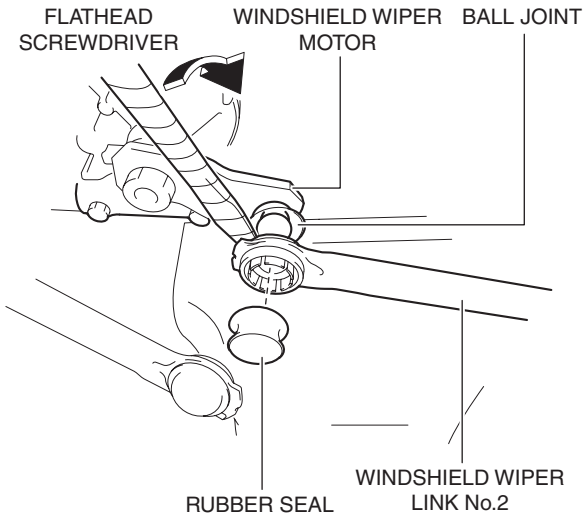

am2zzw00011571


16. Remove the bolts.
17. Remove the windshield wiper motor from the windshield wiper link.
18. Install in the reverse order of removal.

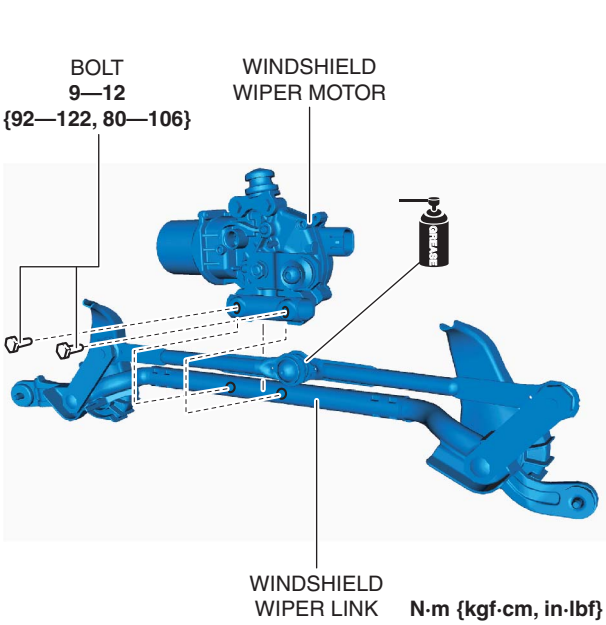

am2zzw00011572

Ball Joint Assembly Note

1. When assembling the ball joint, use a clean rag to protect the links, and squeeze using a pair of protective tape-wrapped pliers.

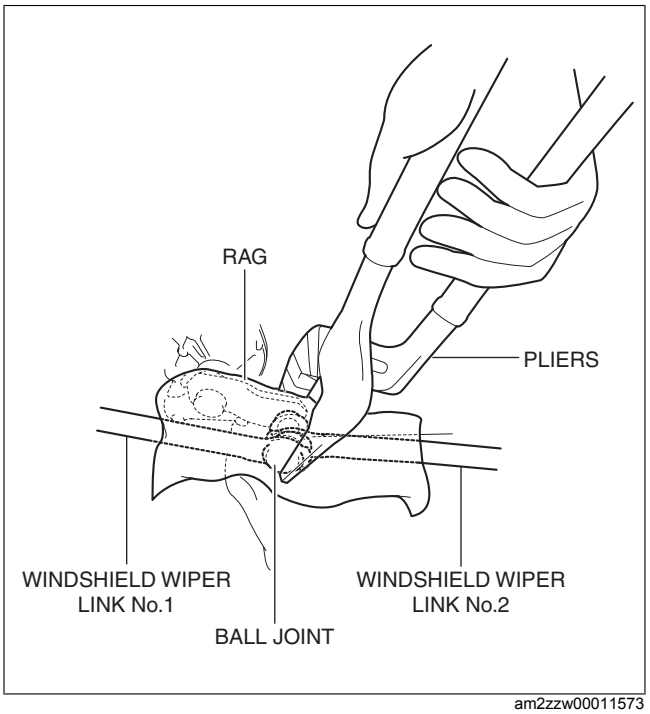

am2zzw00011573