REAR WASHER HOSE REMOVAL/INSTALLATION


id091900801600

Rear Washer Hose A

Note


- If the procedure is performed with washer fluid in the washer tank, the washer fluid may leak out. When performing the procedure, place a container under the washer tank to collect washer fluid, and perform the procedure.

1. Remove the front mudguard (RH). (See MUDGUARD REMOVAL/INSTALLATION.)
2. Disconnect rear washer hose A from the washer motor.

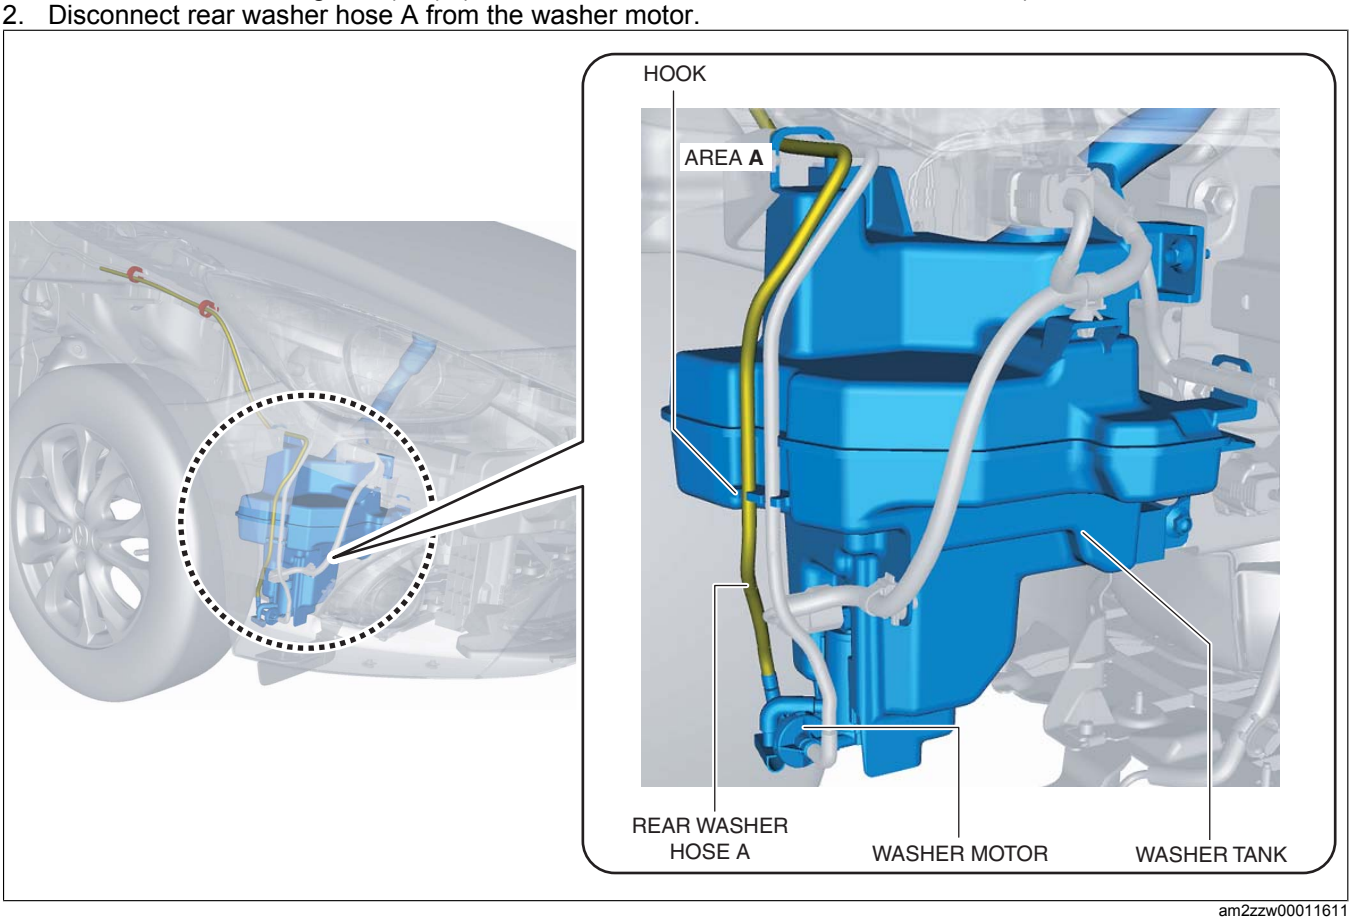

am2zzw00011611

3. Remove rear washer hose A from washer tank hook. (See Rear washer hose A installation note.)
4. Pull out rear washer hose A from area A of the washer tank.
5. Remove rear washer hose A from the clip.

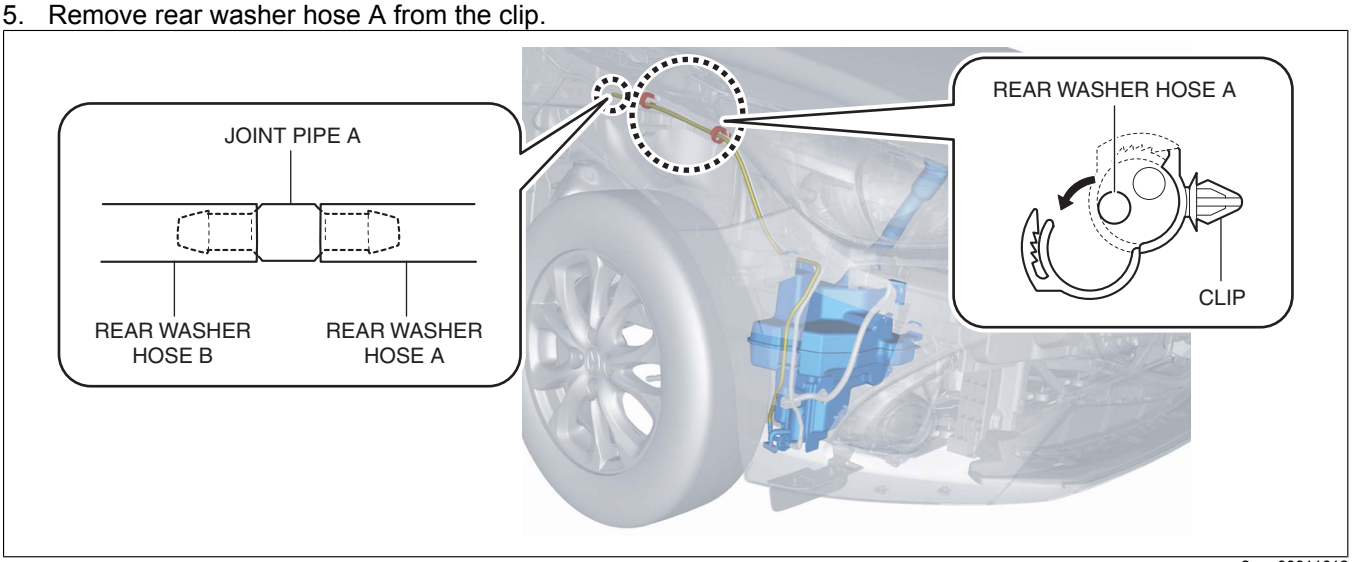


am2zzw00011612

6. Disconnect rear washer hose B from joint pipe A.
7. Remove rear washer hose A.

8. Install in the reverse order of removal.

Rear washer hose A installation note


1. When installing rear washer hose A to the washer tank hook, install it with the upper end of the gray mark aligned to the hook.

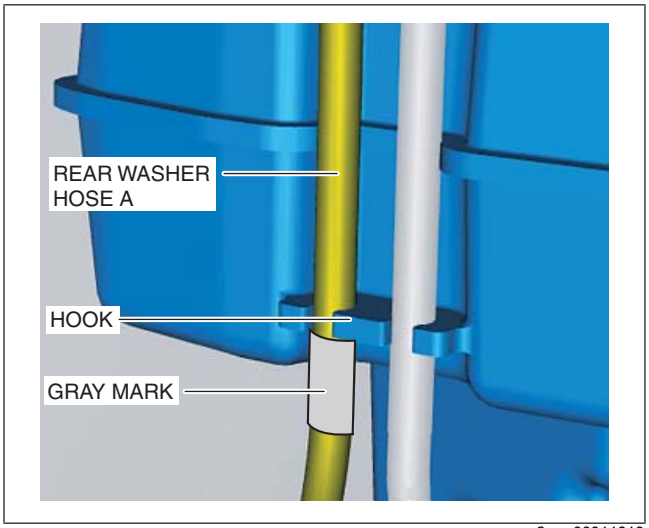

am2zzw00011613

Rear Washer Hose B

1. Remove the front mudguard (RH). (See MUDGUARD REMOVAL/INSTALLATION.)
2. Disconnect rear washer hose B from joint pipe A.

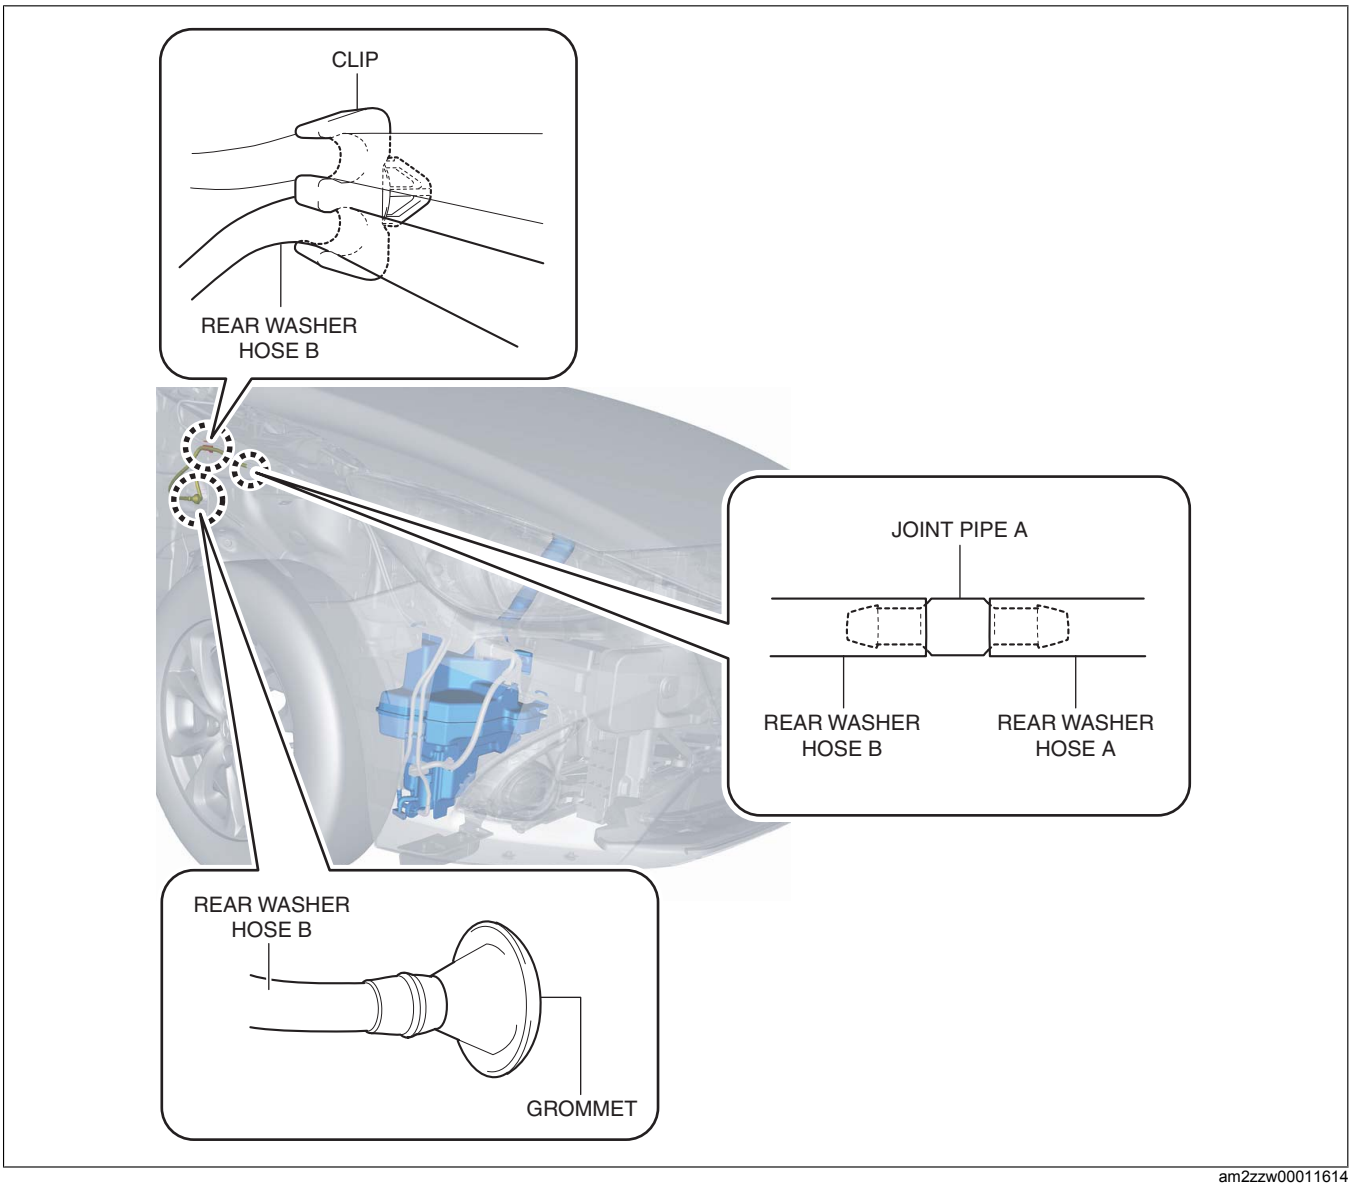

am2zzw00011614

3. Remove rear washer hose B from the clip.
4. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
5. Remove the following parts:

L.H.D.


1. Front scuff plate (RH) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
2. Front side trim (RH) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
3. Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
4. Center panel (See CENTER PANEL REMOVAL/INSTALLATION.)
5. Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
6. Passenger-side lower panel (See PASSENGER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
7. Parking sensor control module (with parking sensor system) (See PARKING SENSOR CONTROL MODULE REMOVAL/INSTALLATION.)
8. Blower unit (See BLOWER UNIT REMOVAL/INSTALLATION.)
9. Tuner and amp unit (with center display) (See TUNER AND AMP UNIT (TAU) REMOVAL/ INSTALLATION.)
10. A-pillar trim (RH) (See A-PILLAR TRIM REMOVAL/INSTALLATION.)

.

R.H.D.

1. Front scuff plate (RH) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
2. Front side trim (RH) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
3. Tuner and amp unit (with center display) (See TUNER AND AMP UNIT (TAU) REMOVAL/ INSTALLATION.)
4. A-pillar trim (RH) (See A-PILLAR TRIM REMOVAL/INSTALLATION.)

6. Remove the grommet from the body.

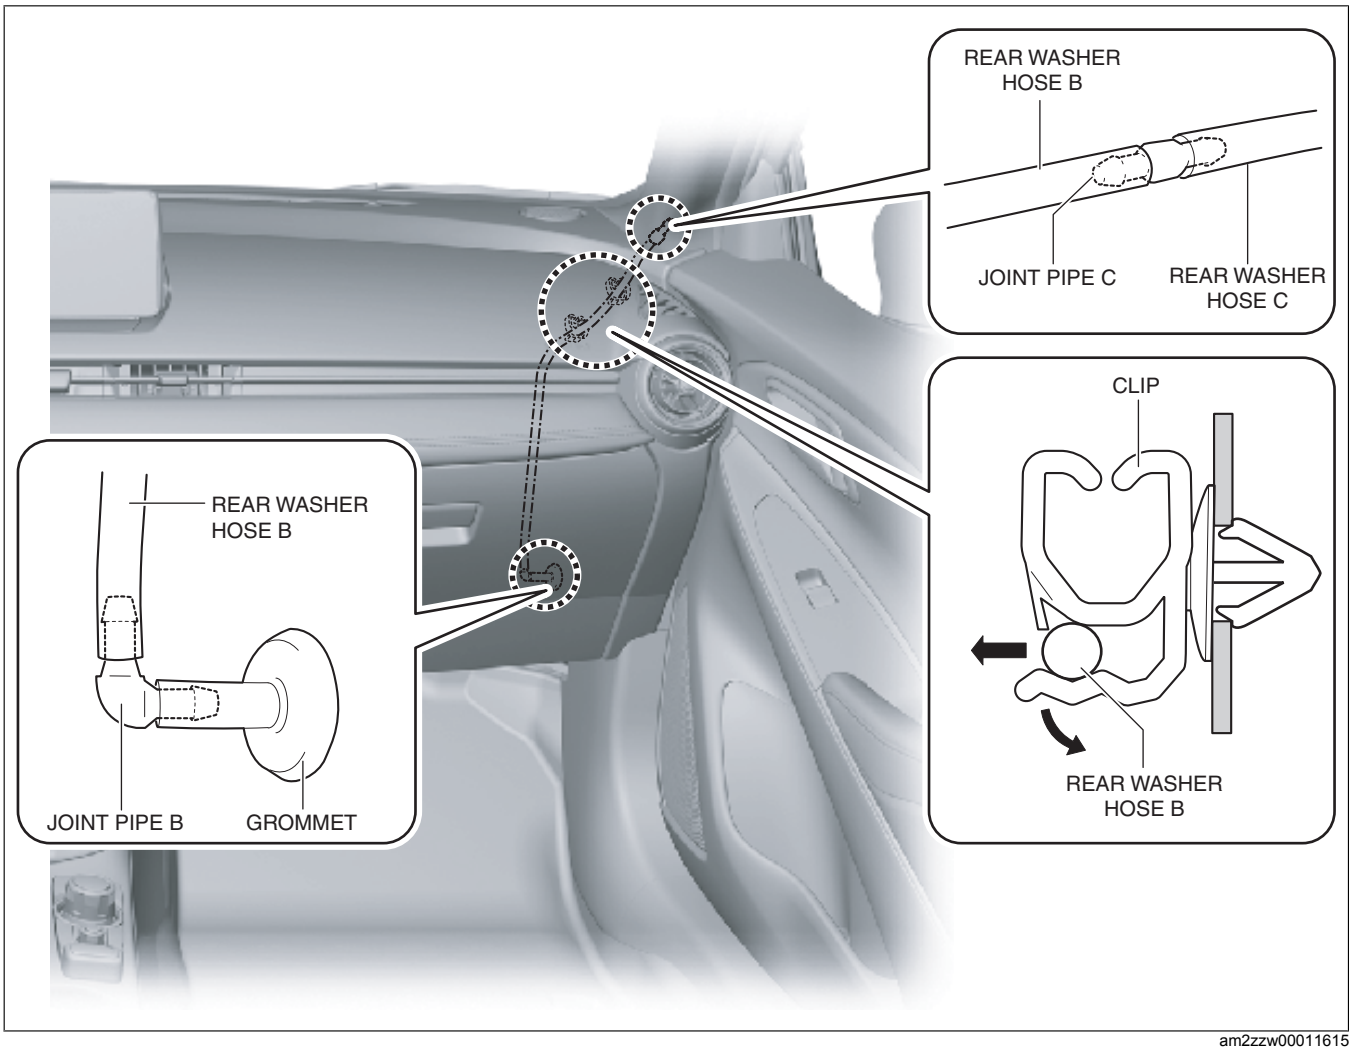

am2zzw00011615

7. Remove rear washer hose B from clips.
8. Disconnect rear washer hose C from joint pipe C.
9. Remove rear washer hose B.
10. Install in the reverse order of removal.

Rear Washer Hose C

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
    1. A-pillar trim (See A-PILLAR TRIM REMOVAL/INSTALLATION.)
    2. Sunvisor (See SUNVISOR REMOVAL/INSTALLATION.)
    3. Front map light (dual light type) (See FRONT MAP LIGHT REMOVAL/INSTALLATION.)
    4. Assist handle (See ASSIST HANDLE REMOVAL/INSTALLATION.)
    5. Coat hook (See HEADLINER REMOVAL/INSTALLATION.)
    6. Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
    7. Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
    8. B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
    9. Adjust anchor cover (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
    10. Upper anchor installation bolt on the seat belt (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
    11. B-pillar upper trim (See B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.)
    12. Rear seat cushion (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
    13. Lower anchor installation bolt on the rear center seat belt (See REAR CENTER SEAT BELT REMOVAL/ INSTALLATION.)
    14. Rear seat back (See REAR SEAT BACK REMOVAL/INSTALLATION.)

15 Rear package tray (See REAR PACKAGE TRAY REMOVAL/INSTALLATION.)

16 Trunk covering (See TRUNK COVERING REMOVAL/INSTALLATION.)

17 Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)


18 Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)

19 Trunk side trim (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)

20 C-pillar trim (See C-PILLAR TRIM REMOVAL/INSTALLATION.)

21 Headliner (See HEADLINER REMOVAL/INSTALLATION.)

3. Remove the tape.

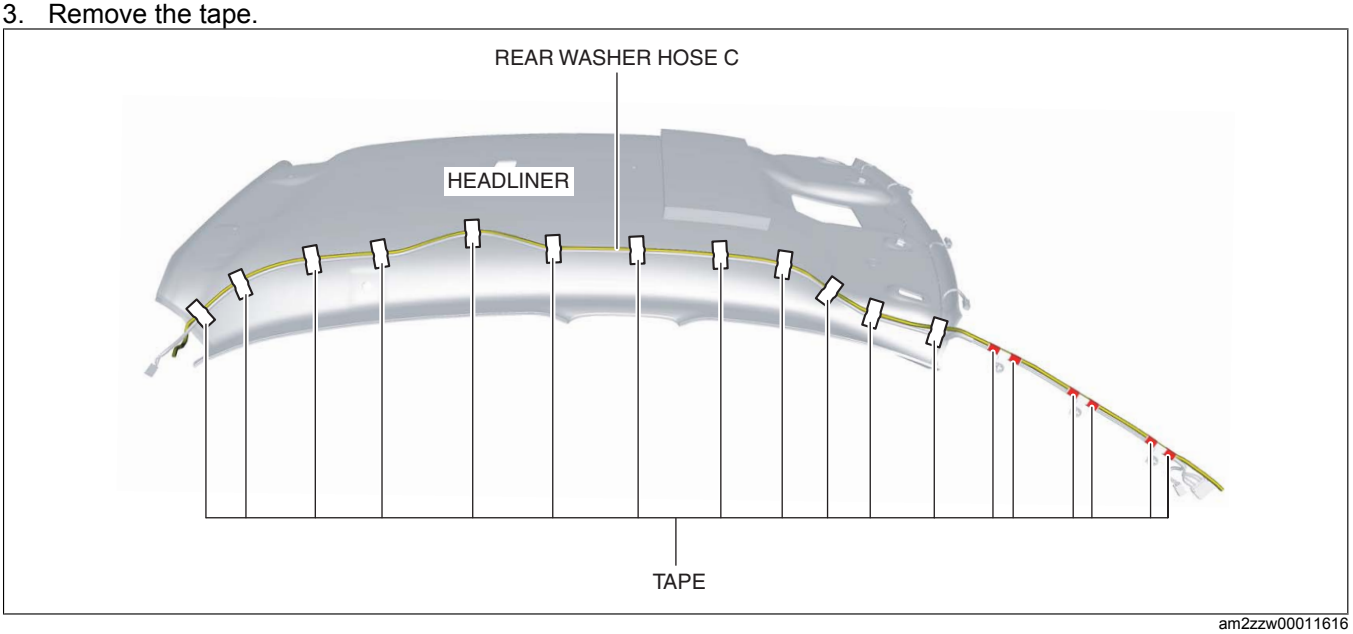


am2zzw00011616

4. Remove rear washer hose C. (See Rear washer hose C installation note.)
5. Install in the reverse order of removal.

Rear washer hose C installation note

1. When installing rear washer hose C to the headliner, install it aligning to the position shown in the figure.

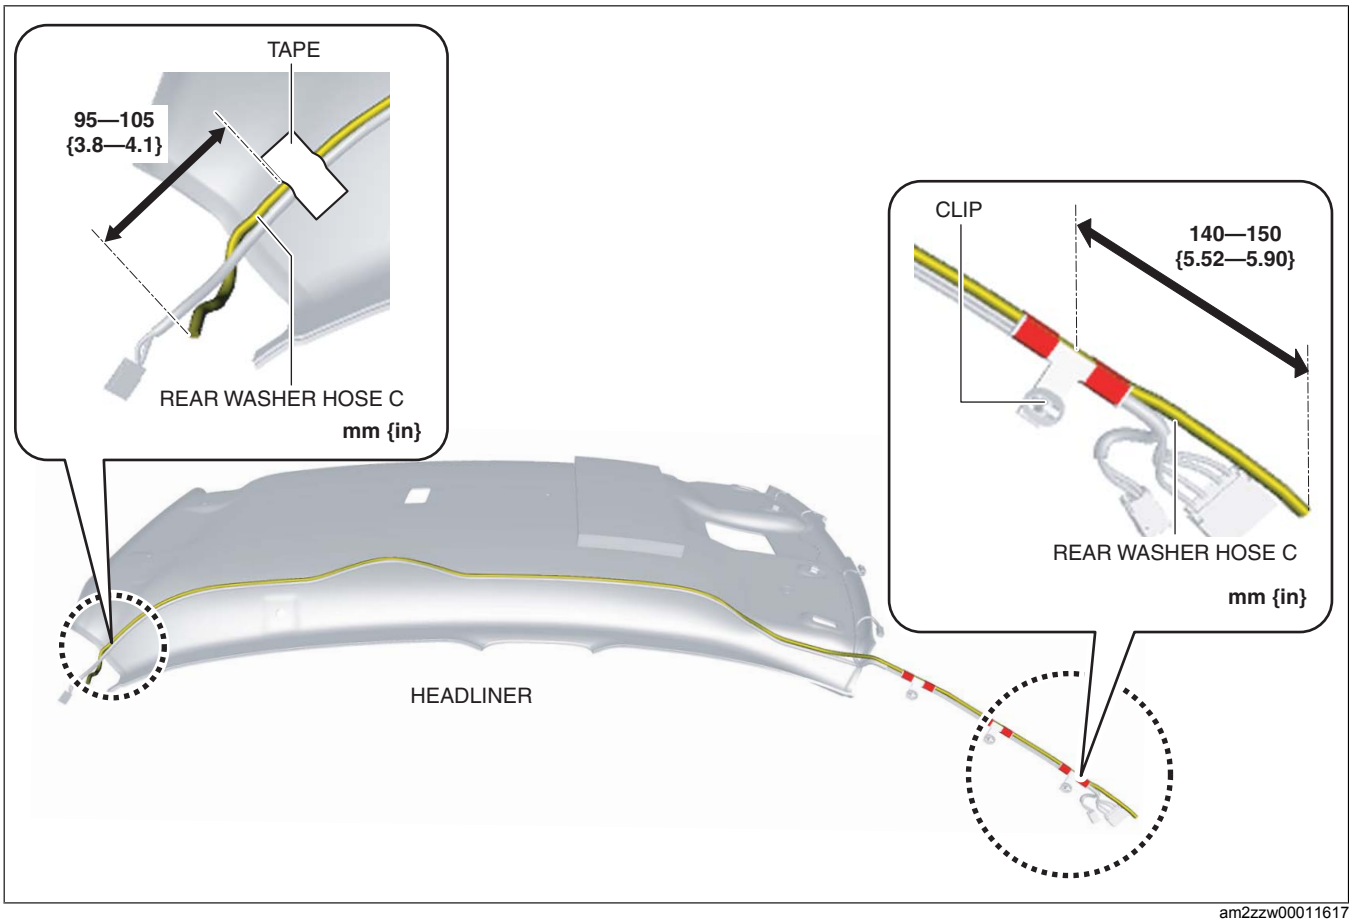

am2zzw00011617

Rear Washer Hose D

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
   (3) B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
   (4) Adjuster anchor cover (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
   (5) Upper anchor installation bolt on the seat belt (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
   (6) B-pillar upper trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
   (7) Rear package tray (See REAR PACKAGE TRAY REMOVAL/INSTALLATION.)
   (8) Coat hook (See HEADLINER REMOVAL/INSTALLATION.)
   (9) Trunk covering (See TRUNK COVERING REMOVAL/INSTALLATION.)
   (10) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
   (11) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
   (12) Liftgate upper trim (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
3. Peel back the trunk side trim and remove the C-pillar trim. (See C-PILLAR TRIM REMOVAL/INSTALLATION.)

Note


- To facilitate the procedure, leave the C-pillar trim in the cabin without pulling the rear seat belt.

4. Remove the fasteners.
5. Peel back the seaming welt of the rear door and the liftgate.

Caution


- **If the headliner is peeled back excessively, the headliner could become creased. Be careful not to peel back the headliner excessively.**

6. Partially peel back the headliner.

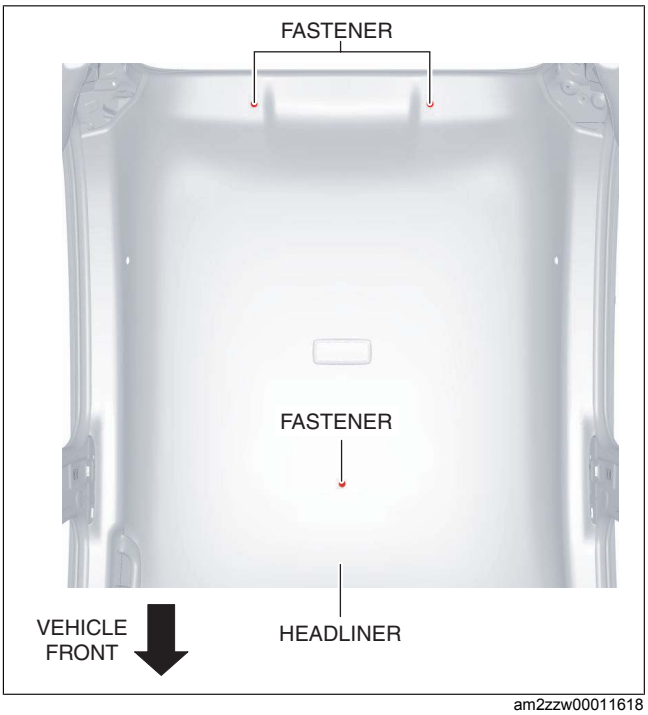

am2zzw00011618


7. Disconnect rear washer hose C from joint pipe D.

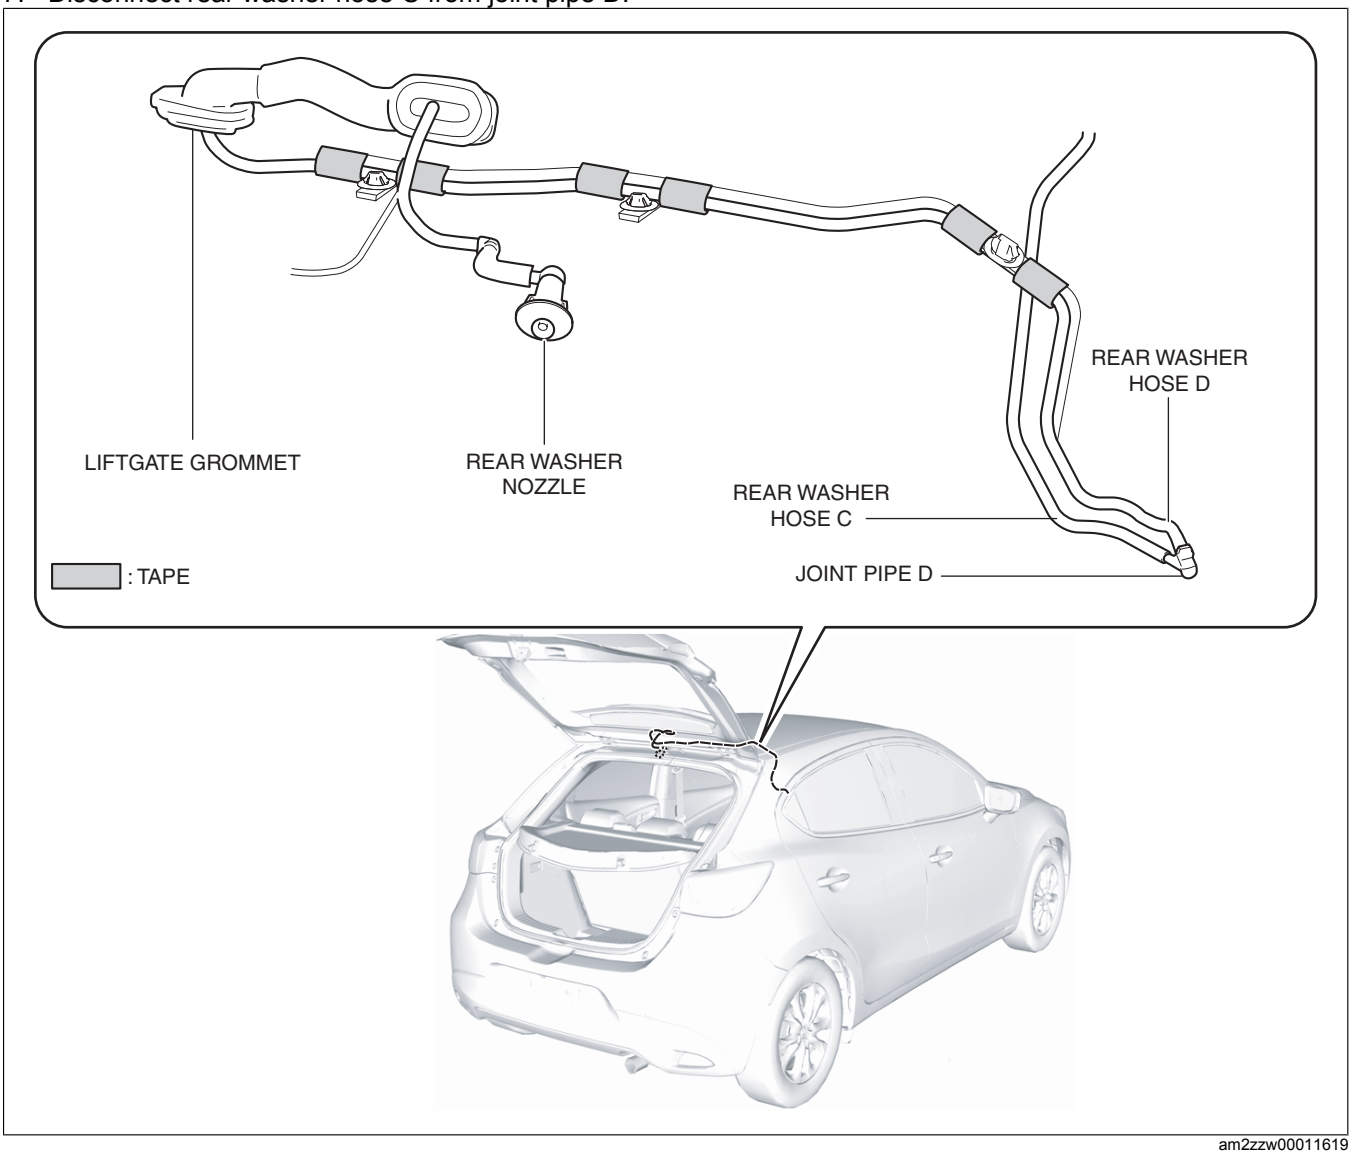

am2zzw00011619


8. Remove the tape.

9. Partially peel the liftgate grommet.

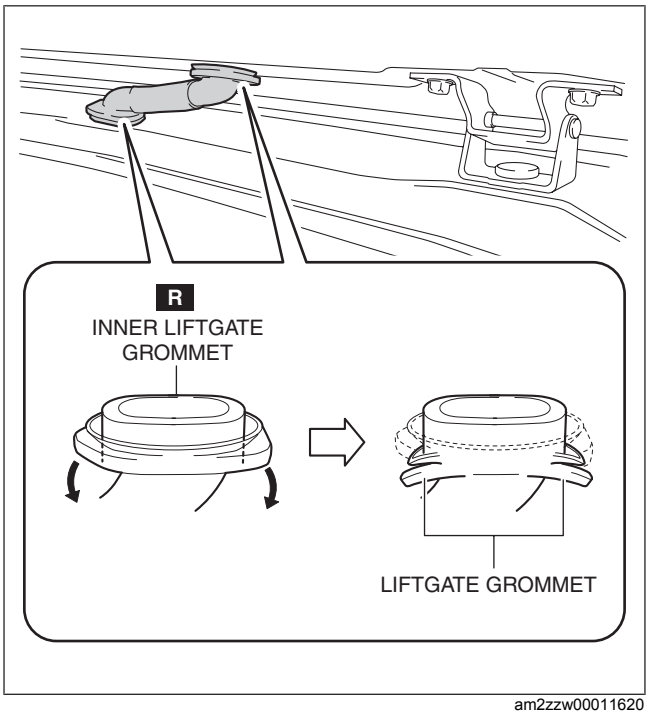

am2zzw00011620


10. While pressing the tabs of the inner liftgate grommet in the direction of arrow (1) shown in the figure, pull the inner liftgate grommet in the direction of arrow (2) and detach the tabs of the inner liftgate grommet from the liftgate.

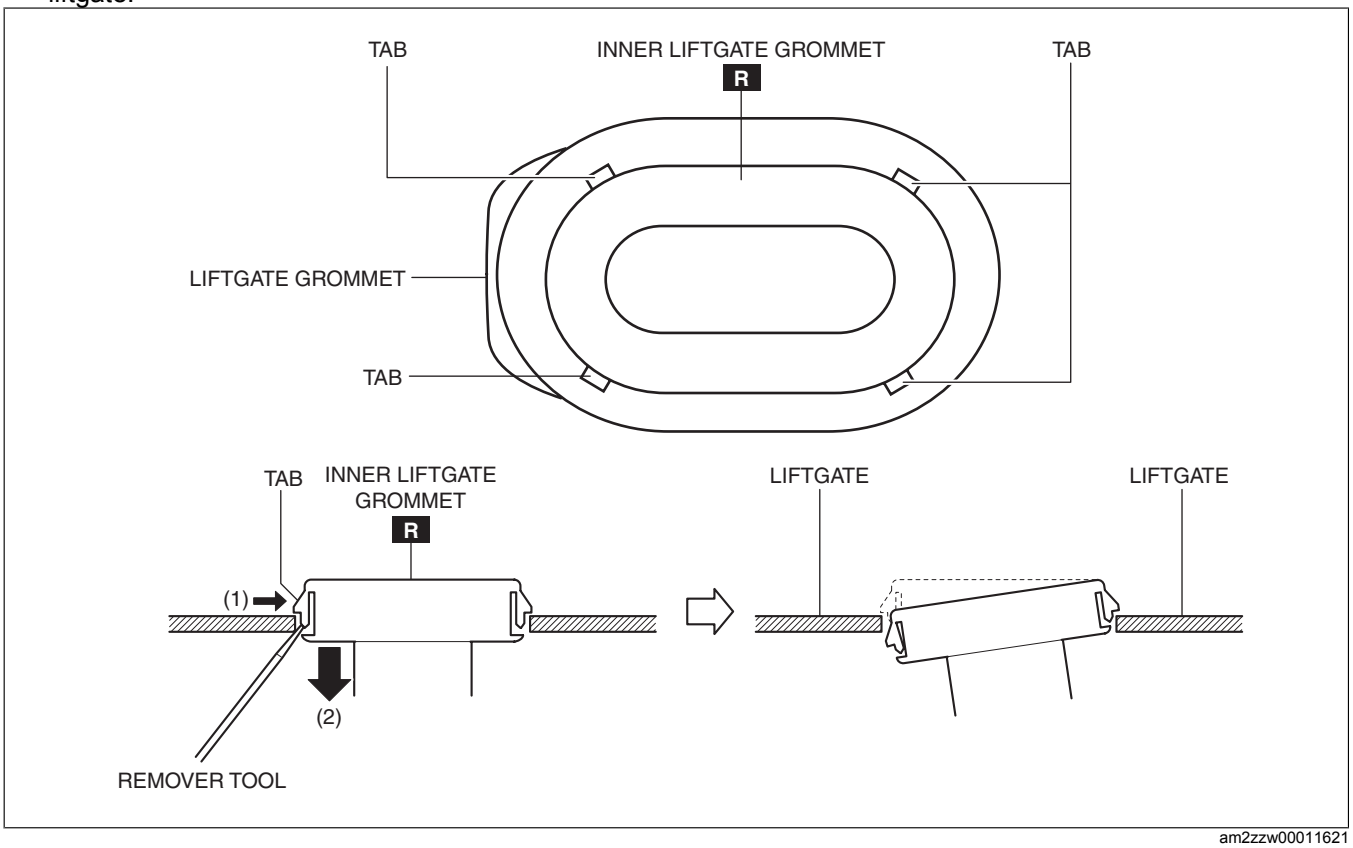

am2zzw00011621


11. Detach all the tabs of the inner liftgate grommet from the liftgate and remove the inner liftgate grommet.

12. Remove the bolt (with DAB antenna amplifier).
13. Remove the fastener (with DAB antenna amplifier).
14. Set the DAB antenna amplifier aside in the direction of the arrow shown in the figure. (with DAB antenna amplifier).

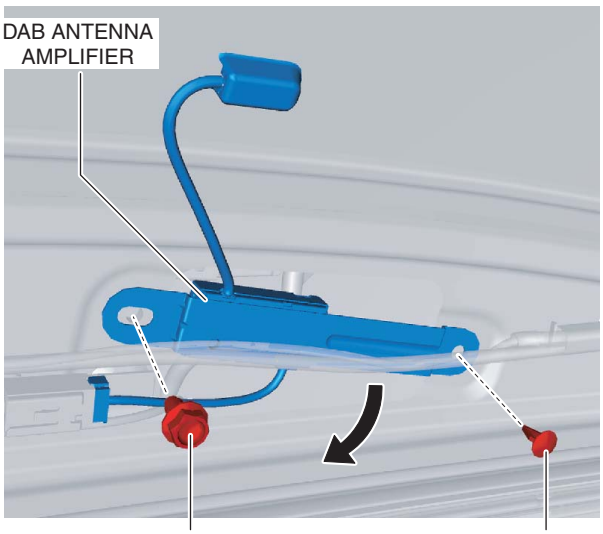

am2zzw00011622

15. Disconnect rear washer hose D from joint pipe E.
16. Remove rear washer hose D.
17. Install in the reverse order of removal.

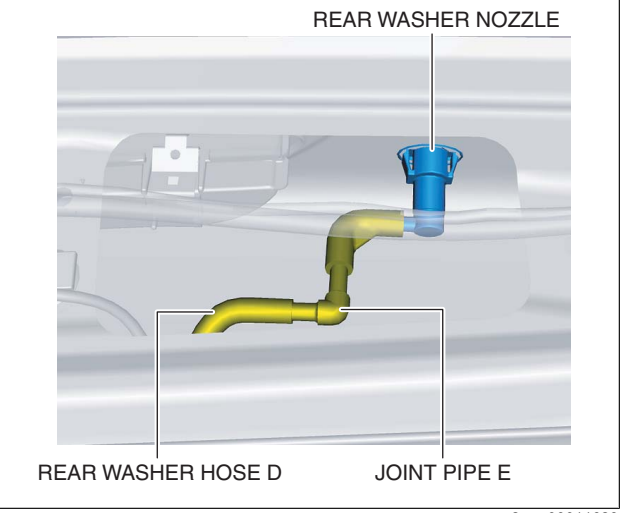

am2zzw00011623