
WASHER FLUID-LEVEL SENSOR INSPECTION

id091900801900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the front bumper. (See FRONT BUMPER REMOVAL.) (See FRONT BUMPER INSTALLATION.)
3. Disconnect the connectors. (See WASHER FLUID-LEVEL SENSOR REMOVAL/INSTALLATION.)

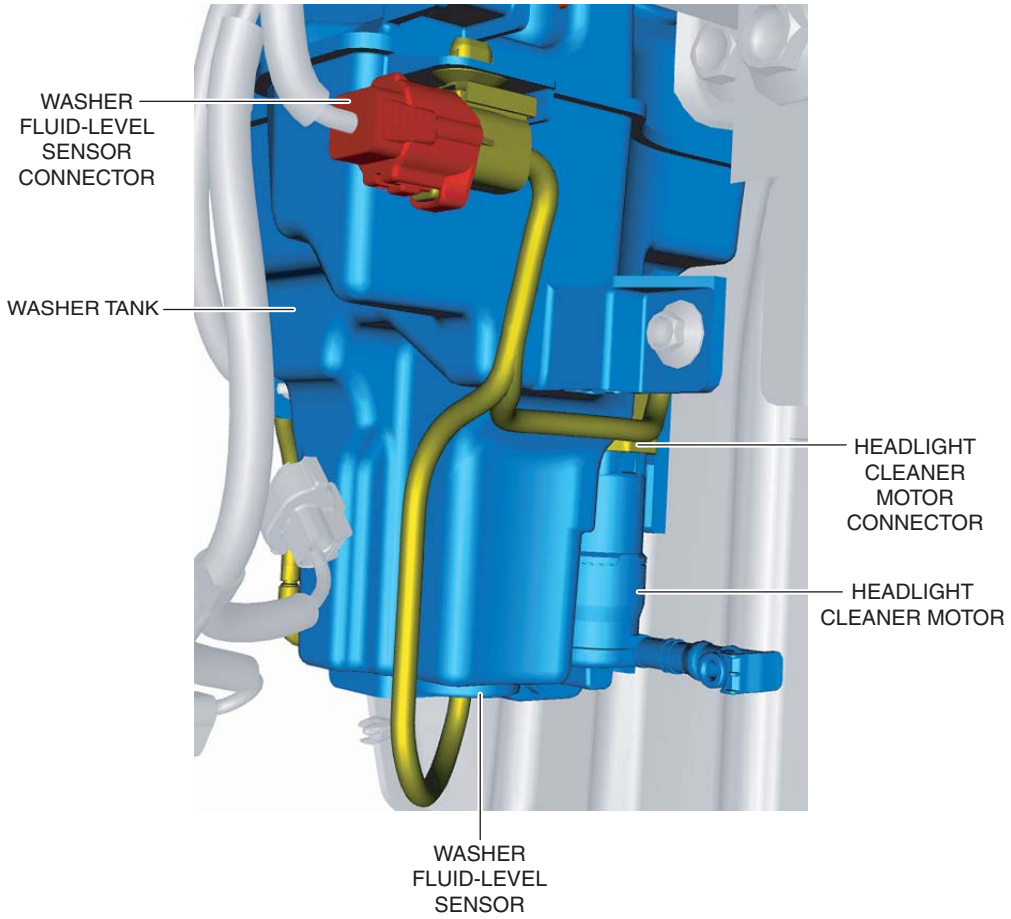


aaxjjw00011927

4. Verify that the continuity between the washer fluid-level sensor terminals is as indicated in the table.

○—○ : Continuity

Washer fluid level	Terminal					
	VEHICLE WIRING HARNESS SIDE CONNECTOR				HEADLIGHT CLEANER MOTOR SIDE CONNECTOR	
	A	B	C	D	A	B
Above low	○				○	
		○				○
Below low	○				○	
		○				○
			○	○		

am2zzw00011636

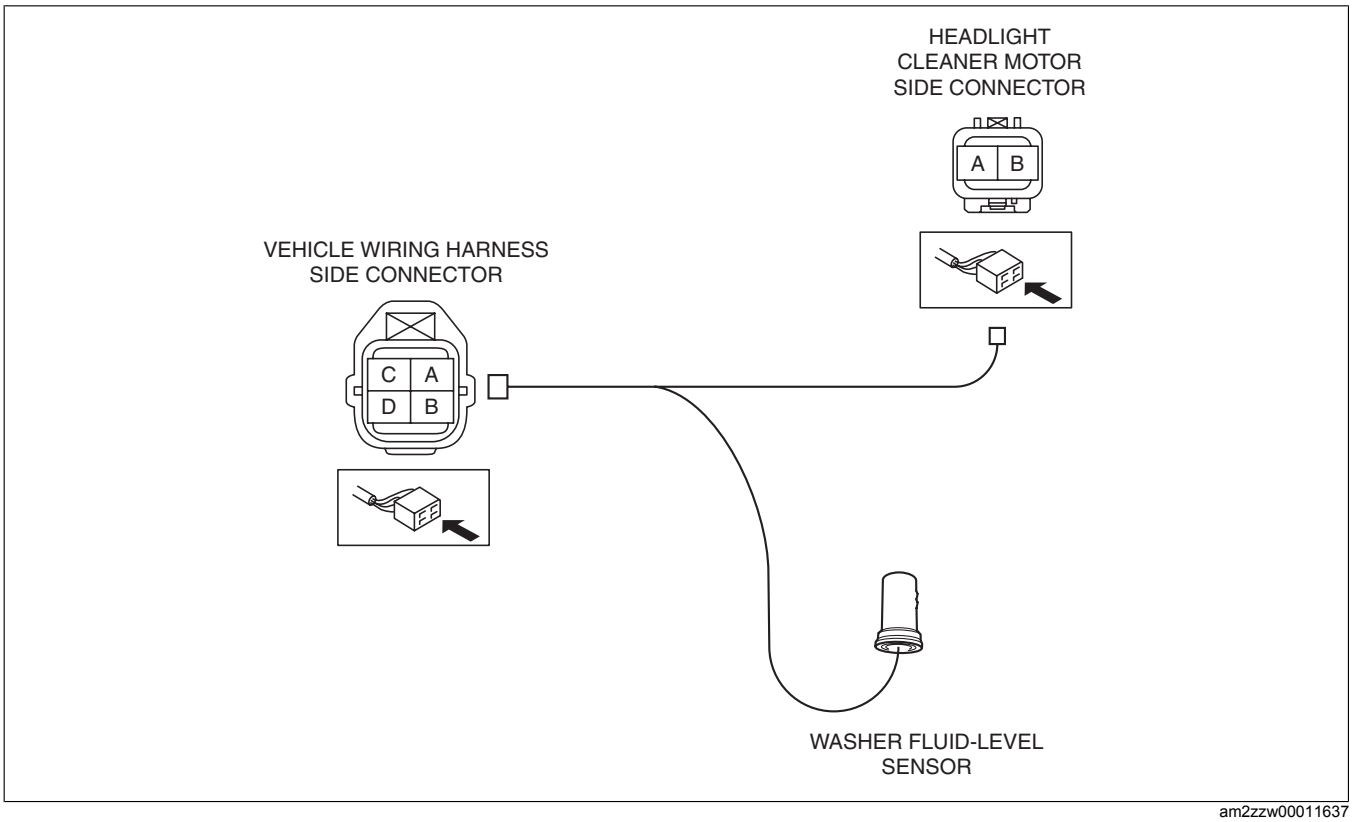

am2zzw00011637

- If not as indicated in the table, replace the washer fluid-level sensor. (See WASHER FLUID-LEVEL SENSOR REMOVAL/INSTALLATION.)