
WINDSHIELD WASHER NOZZLE REMOVAL/INSTALLATION

id091900802000

1. Remove the windshield wiper arm and blade. (See WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION.)
2. Disconnect the joint pipe A of the windshield washer hose. (See WINDSHIELD WASHER HOSE REMOVAL/INSTALLATION.)
3. Remove the cowl grille. (See COWL PANEL REMOVAL/INSTALLATION.)
4. Disconnect the windshield washer hose from the windshield washer nozzle.

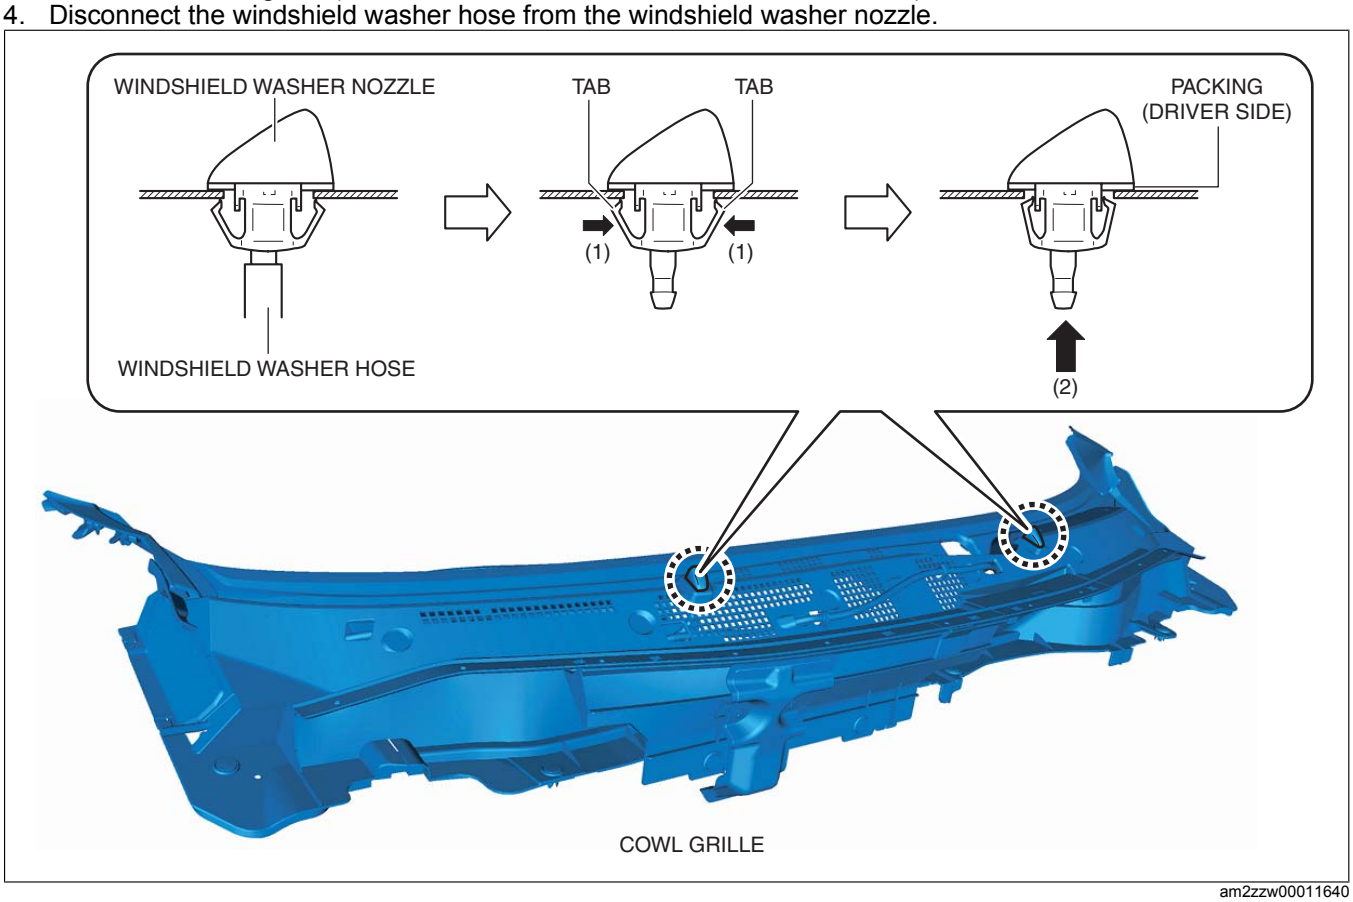

am2zzw00011640

5. Press out the windshield washer nozzle in the direction of arrow (2) shown in the figure while pressing the windshield washer nozzle tabs in the direction of arrows (1) shown in the figure.
6. Remove the windshield washer nozzle.
7. Install in the reverse order of removal.
8. Adjust the windshield washer nozzle. (See WINDSHIELD WASHER NOZZLE ADJUSTMENT.)