WIPER AND WASHER SWITCH INSPECTION

id091900802800

Windshield Wiper Switch

Note

- When removing the wiper and washer switch, it is necessary to turn the steering wheel. If the ignition is switched off with the driver's door closed, the steering wheel is locked. Perform Steps 1—3 to prevent the steering wheel from being locked.

1. Switch the ignition ON (engine off or on).
2. Open the driver's door.
3. Switch the ignition off.
4. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
5. Remove the column cover. (See COLUMN COVER REMOVAL/INSTALLATION.)
6. Remove the wiper and washer switch. (See WIPER AND WASHER SWITCH REMOVAL/INSTALLATION.)
7. Verify that the continuity between the wiper and washer switch terminals is as indicated in the table.

With wiper and washer switch on left side

○—○ : Continuity

Switch position		Terminal					
		A	B	C	E	I	J
Windshield wiper switch	MIST				○		○
	OFF						
	INT/AUTO				○	○	
	LO				○		○
	HI				○	○	○
Auto VOL	-2 (Low)	○	○	○	○		
	-1	○		○	○		
	0	○			○		
	+1	○	○		○		
	+2 (Fast)		○		○		


With wiper and washer switch on right side

○—○ : Continuity


Switch position		Terminal					
		B	C	G	I	J	K
Windshield wiper switch	MIST	○		○			
	OFF						
	INT/AUTO		○	○			
	LO	○		○			
	HI	○	○	○			
Auto VOL	-2 (Low)			○	○	○	○
	-1			○	○		○
	0			○			○
	+1			○		○	○
	+2 (Fast)			○		○	

am2zzw00011651

WITH WIPER AND WASHER SWITCH ON LEFT SIDE

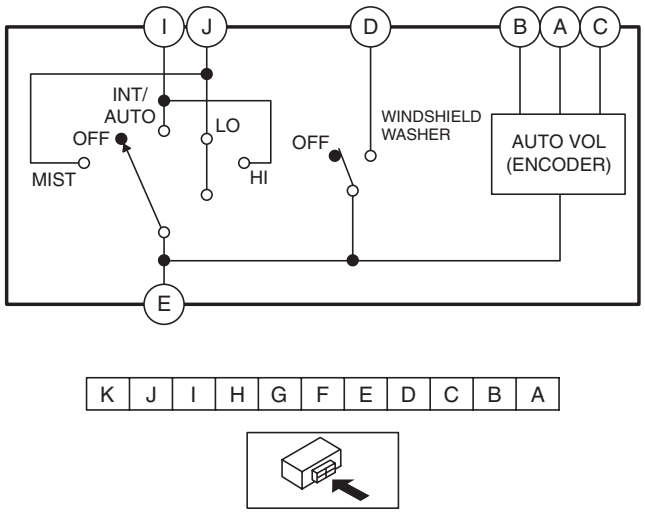

WITH WIPER AND WASHER SWITCH ON RIGHT SIDE

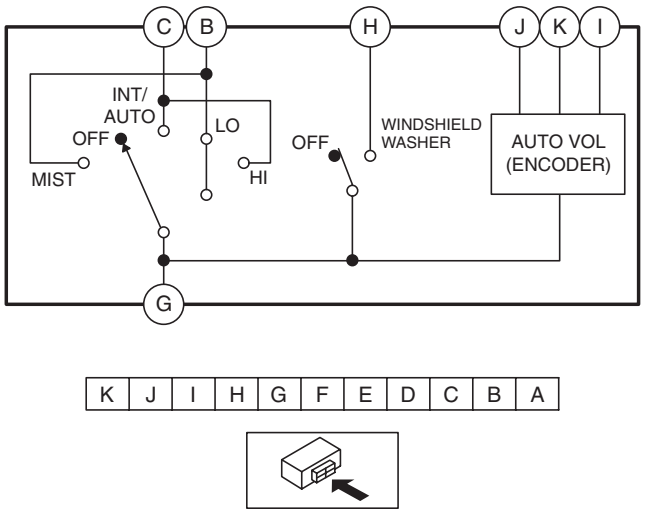

am2zzw00011652

- If the continuity is not as indicated in the table, replace the wiper and washer switch. (See WIPER AND WASHER SWITCH REMOVAL/INSTALLATION.)

Windshield Washer Switch

Note
- When removing the wiper and washer switch, it is necessary to turn the steering wheel. If the ignition is switched off with the driver's door closed, the steering wheel is locked. Perform Steps 1—3 to prevent the steering wheel from being locked.

1. Switch the ignition ON (engine off or on).
2. Open the driver's door.
3. Switch the ignition off.
4. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
5. Remove the column cover. (See COLUMN COVER REMOVAL/INSTALLATION.)
6. Remove the wiper and washer switch. (See WIPER AND WASHER SWITCH REMOVAL/INSTALLATION.)
7. Verify that the continuity between the wiper and washer switch terminals is as indicated in the table.

With wiper and washer switch on left side

○—○ : Continuity

Switch position	Terminal	
	D	E
WINDSHIELD WASHER	○	○
OFF		


With wiper and washer switch on right side

○—○ : Continuity


Switch position	Terminal	
	G	H
WINDSHIELD WASHER	○	○
OFF		

am2zzw00011653

WITH WIPER AND WASHER SWITCH ON LEFT SIDE

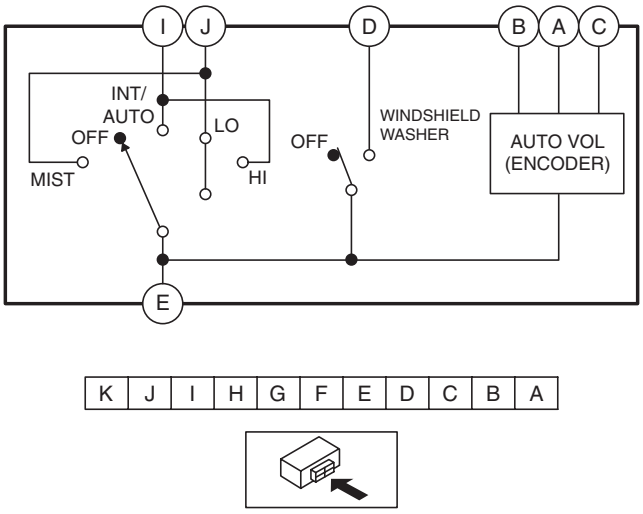

WITH WIPER AND WASHER SWITCH ON RIGHT SIDE

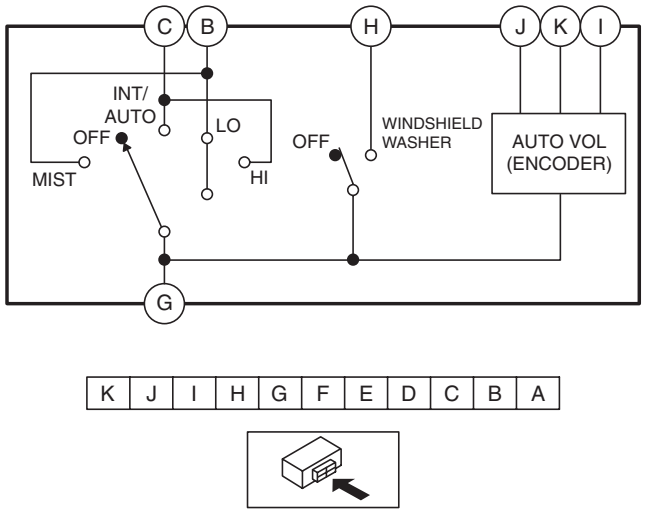

am2zzw00011652

- If the continuity is not as indicated in the table, replace the wiper and washer switch. (See WIPER AND WASHER SWITCH REMOVAL/INSTALLATION.)

Rear Wiper and Washer Switch

Note
- When removing the wiper and washer switch, it is necessary to turn the steering wheel. If the ignition is switched off with the driver's door closed, the steering wheel is locked. Perform Steps 1—3 to prevent the steering wheel from being locked.

1. Switch the ignition ON (engine off or on).
2. Open the driver's door.
3. Switch the ignition off.
4. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
5. Remove the column cover. (See COLUMN COVER REMOVAL/INSTALLATION.)

6. Remove the wiper and washer switch. (See WIPER AND WASHER SWITCH REMOVAL/INSTALLATION.)
7. Verify that the continuity between the wiper and washer switch terminals is as indicated in the table.

With wiper and washer switch on left side

○—○ : Continuity

Switch position		Terminal			
		E	F	G	H
Rear wiper switch	OFF				
	R.INT	○			○
	ON	○		○	
REAR WASHER 1		○	○		
REAR WASHER 2		○	○	○	


With wiper and washer switch on right side

○—○ : Continuity


Switch position		Terminal			
		D	E	F	G
Rear wiper switch	OFF				
	R.INT	○			○
	ON		○		○
REAR WASHER 1				○	○
REAR WASHER 2			○	○	○

am2zzw00011654

WITH WIPER AND WASHER SWITCH ON LEFT SIDE

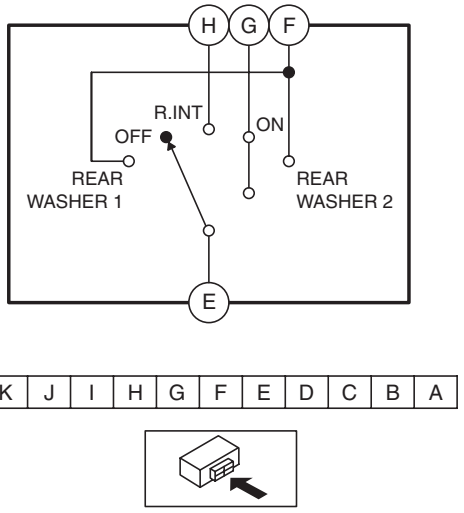

WITH WIPER AND WASHER SWITCH ON RIGHT SIDE

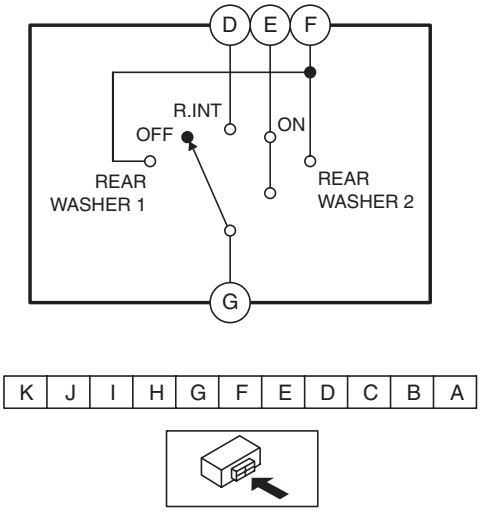

am2zzw00011655

- If the continuity is not as indicated in the table, replace the wiper and washer switch. (See WIPER AND WASHER SWITCH REMOVAL/INSTALLATION.)