
HEADLIGHT CLEANER ACTUATOR REMOVAL/INSTALLATION


id091900803000

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION)
2. Remove the front bumper. (See FRONT BUMPER REMOVAL) (See FRONT BUMPER INSTALLATION.)
3. Remove the headlight cleaner cover. (See HEADLIGHT CLEANER COVER REMOVAL/INSTALLATION.)
4. While pressing the hook of the joint pipe in the direction of arrow (1) shown in the figure, pull the joint pipe in the direction of arrow (2) to disconnect the joint pipe from the headlight cleaner actuator.

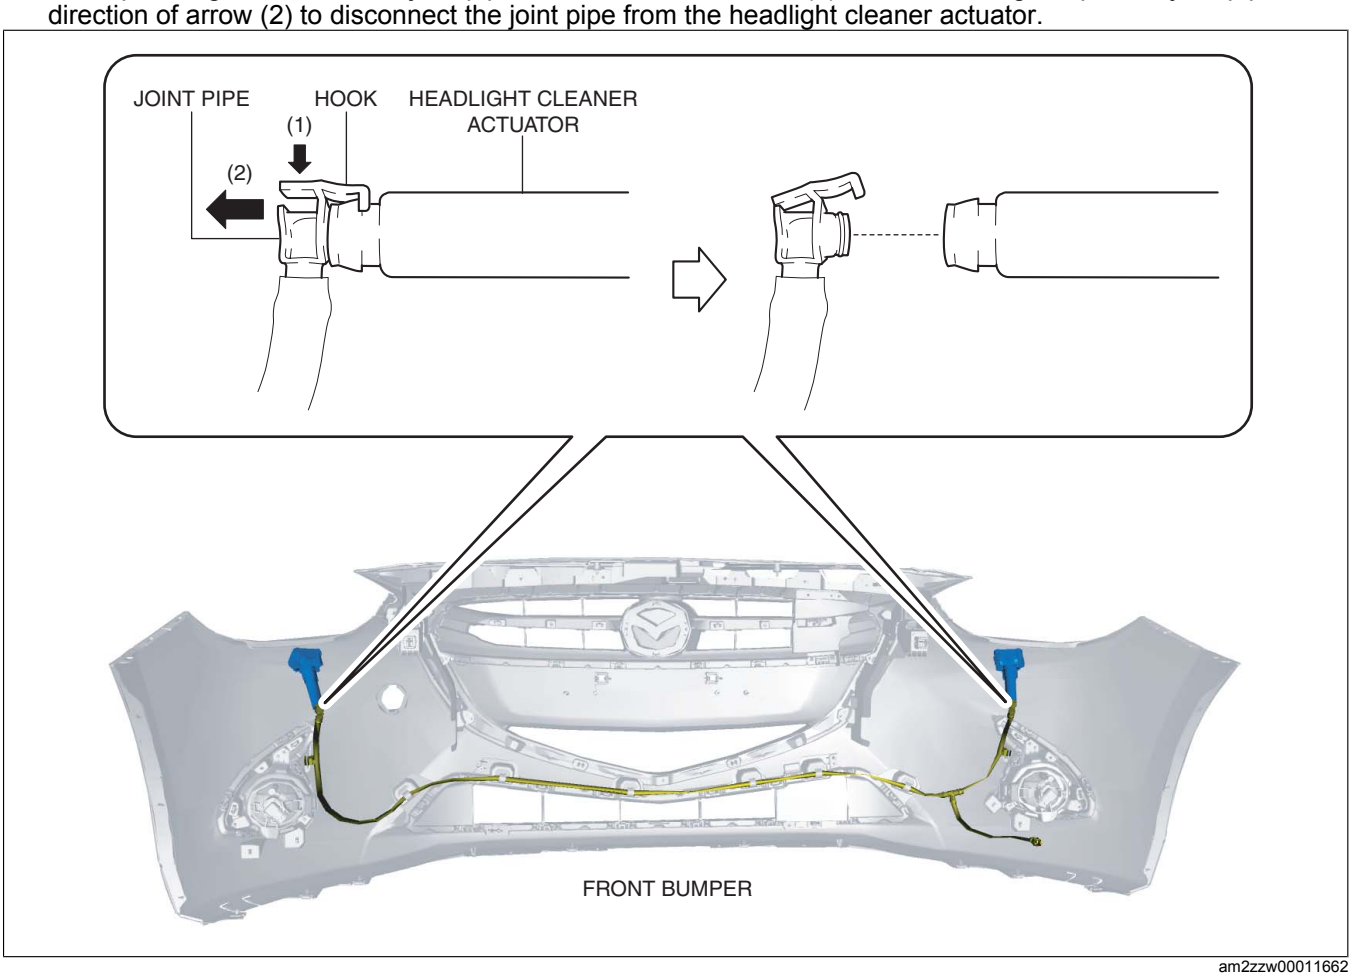

am2zzw00011662


5. Remove the bracket in the direction of arrow (1) shown in the figure.

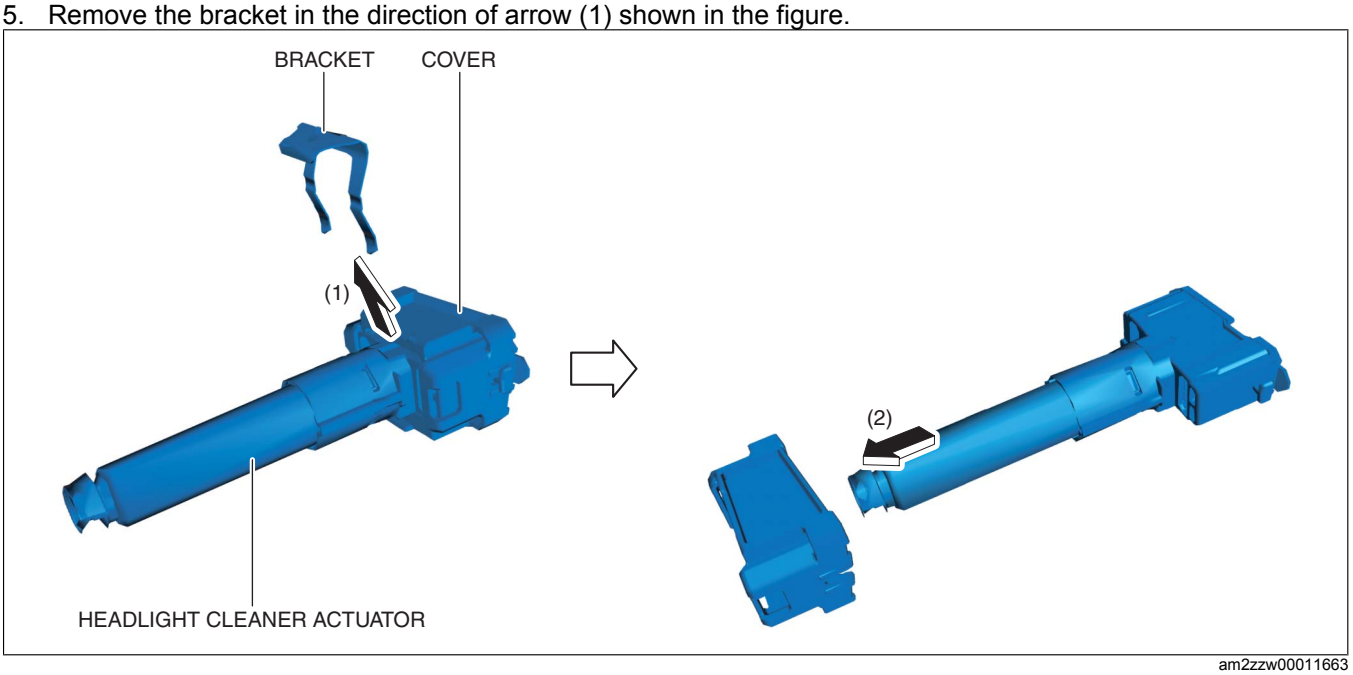

am2zzw00011663

6. Remove the cover in the direction of arrow (2) shown in the figure.

7. While pressing the tab of the headlight cleaner actuator in the direction of arrow (1) shown in the figure, move the headlight cleaner actuator in the direction of arrow (2) shown in the figure to detach the tab of the headlight cleaner actuator from the front bumper.

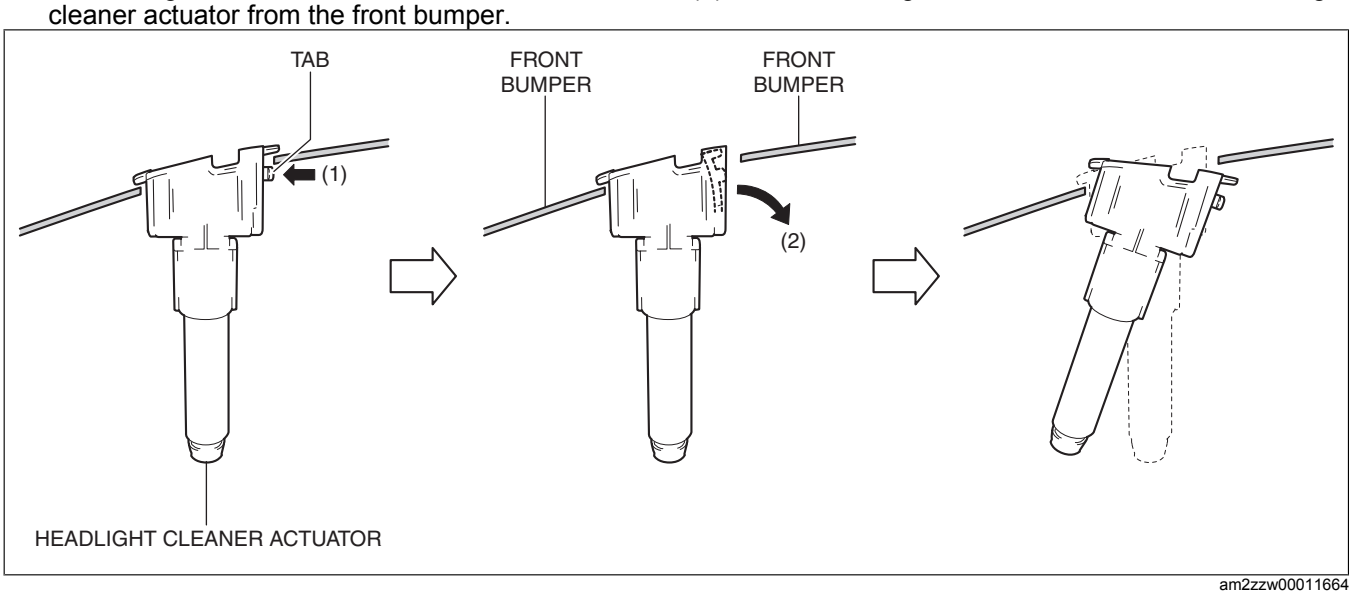

am2zzw00011664

8. Remove the headlight cleaner actuator.
9. Install in the reverse order of removal.