
HEADLIGHT CLEANER HOSE REMOVAL/INSTALLATION

id091900803100

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION)
2. Remove the front bumper. (See FRONT BUMPER REMOVAL) (See FRONT BUMPER INSTALLATION.)
3. Remove clips from the front bumper.

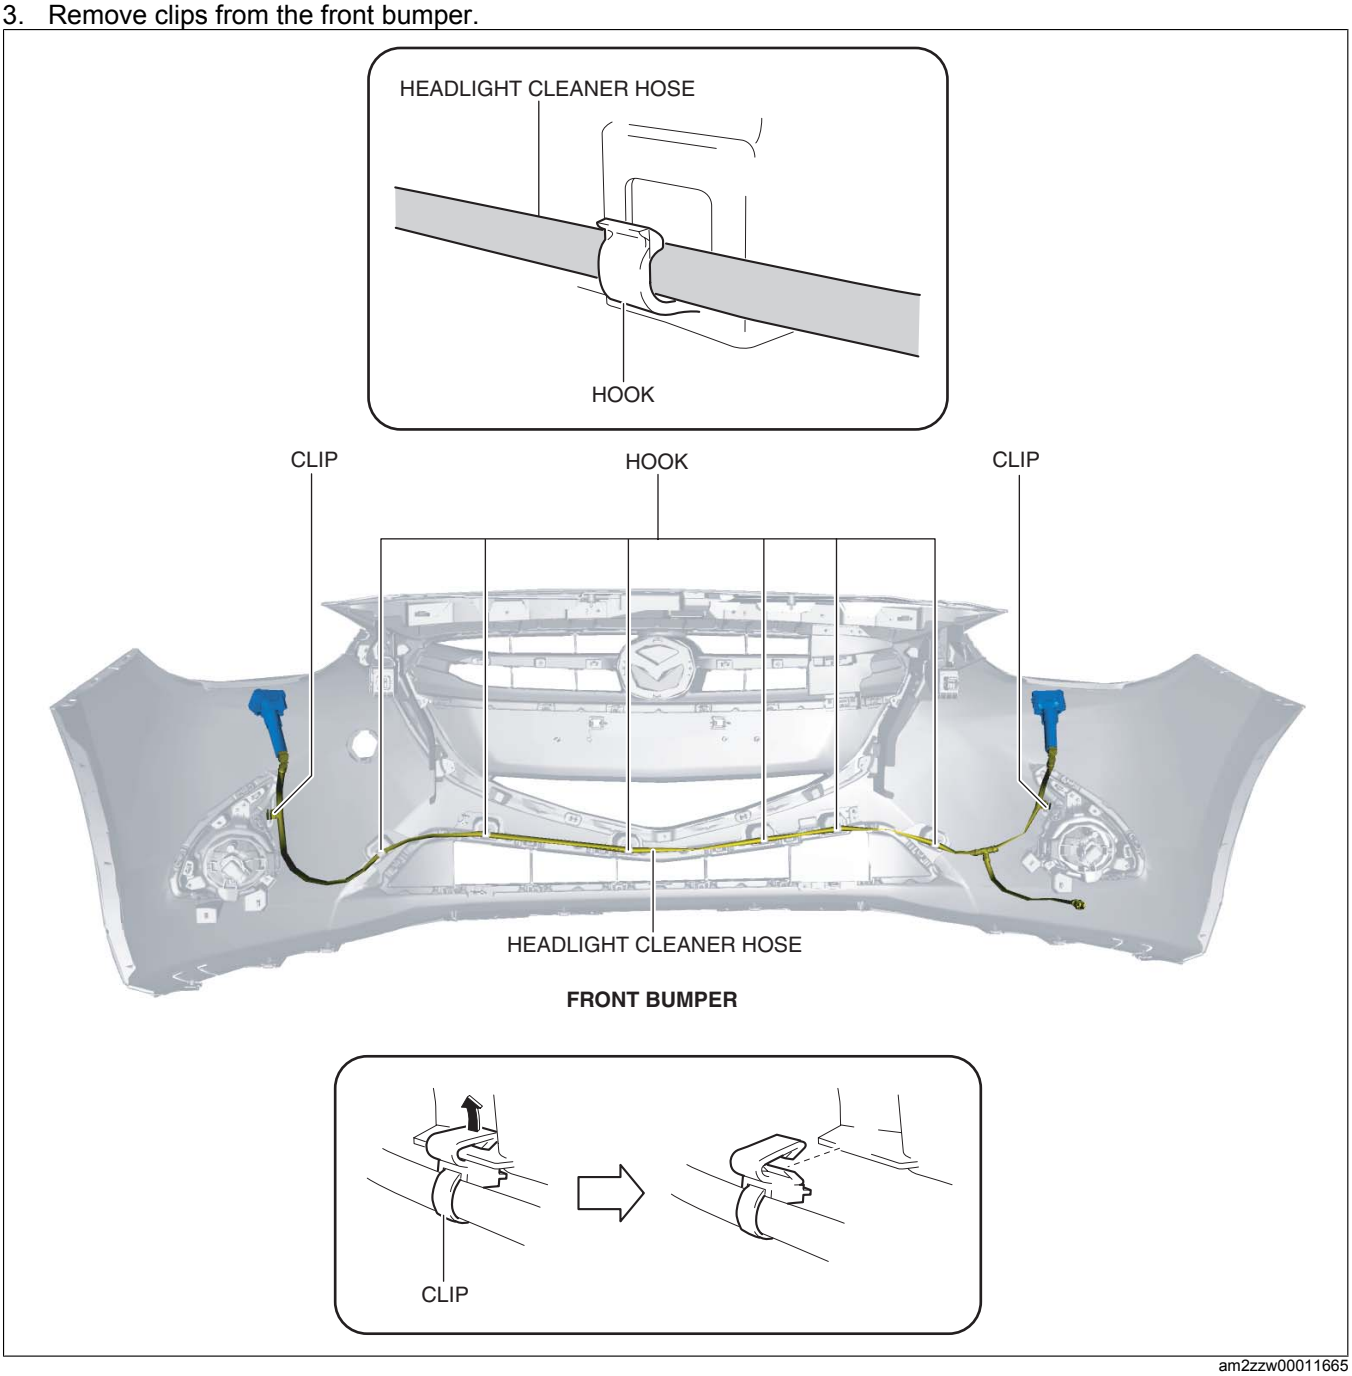

am2zzw00011665

4. Remove the headlight cleaner hose from the hooks.
5. Disconnect the joint pipes from the headlight cleaner actuator. (See HEADLIGHT CLEANER ACTUATOR REMOVAL/INSTALLATION.)
6. Remove the headlight cleaner hose.
7. Install in the reverse order of removal.