
HEADLIGHT CLEANER MOTOR INSPECTION

id091900803200

Note

- If the procedure is performed with washer fluid in the washer tank, the washer fluid may leak out. When performing the procedure, place a container under the washer tank to collect washer fluid, and perform the procedure.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the front bumper. (See FRONT BUMPER REMOVAL.) (See FRONT BUMPER INSTALLATION.)
3. Disconnect the connector.

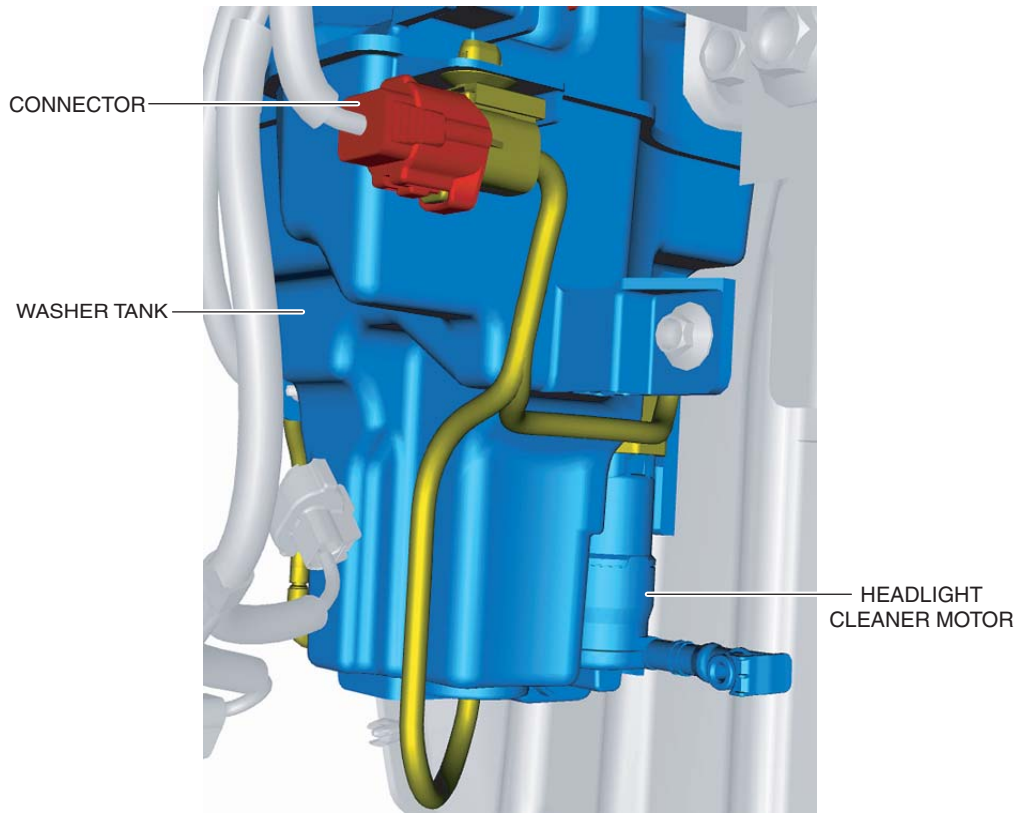


am2zzw00011666

Warning


- **Water sprayed on the battery and ground could cause electrocution. When performing the headlight cleaner motor inspection, prepare a container to collect washer fluid and be careful not to spray washer fluid.**

4. Apply battery positive voltage to headlight cleaner motor connector terminal A, and connect terminal B to ground.

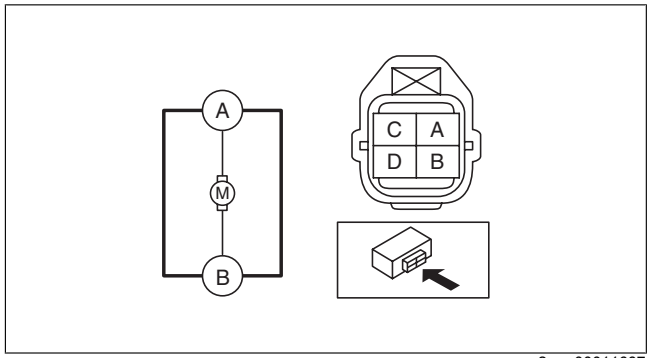

am2zzw00011667

5. Verify that washer fluid sprays from the headlight cleaner motor.
   - If washer fluid does not spray from the headlight cleaner motor, inspect the washer fluid-level sensor. (See WASHER FLUID-LEVEL SENSOR INSPECTION.)
     — If the washer fluid-level sensor is normal, replace the headlight cleaner motor. (See HEADLIGHT CLEANER MOTOR REMOVAL/INSTALLATION.)

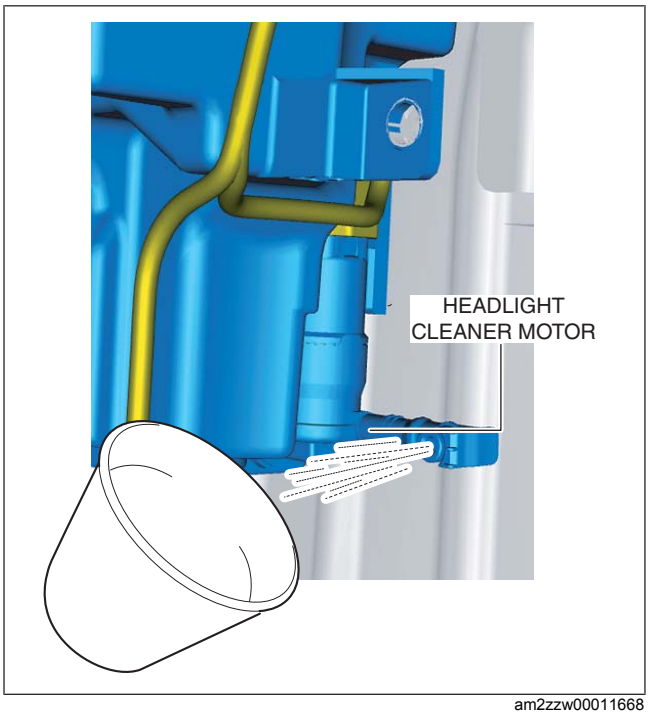

am2zzw00011668