
WASHER MOTOR REMOVAL/INSTALLATION

id091900805000

Note


- If the procedure is performed with washer fluid in the washer tank, the washer fluid may leak out. When performing the procedure, place a container under the washer tank to collect washer fluid, and perform the procedure.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the front bumper. (See FRONT BUMPER REMOVAL.) (See FRONT BUMPER INSTALLATION.)
3. Disconnect the connector.

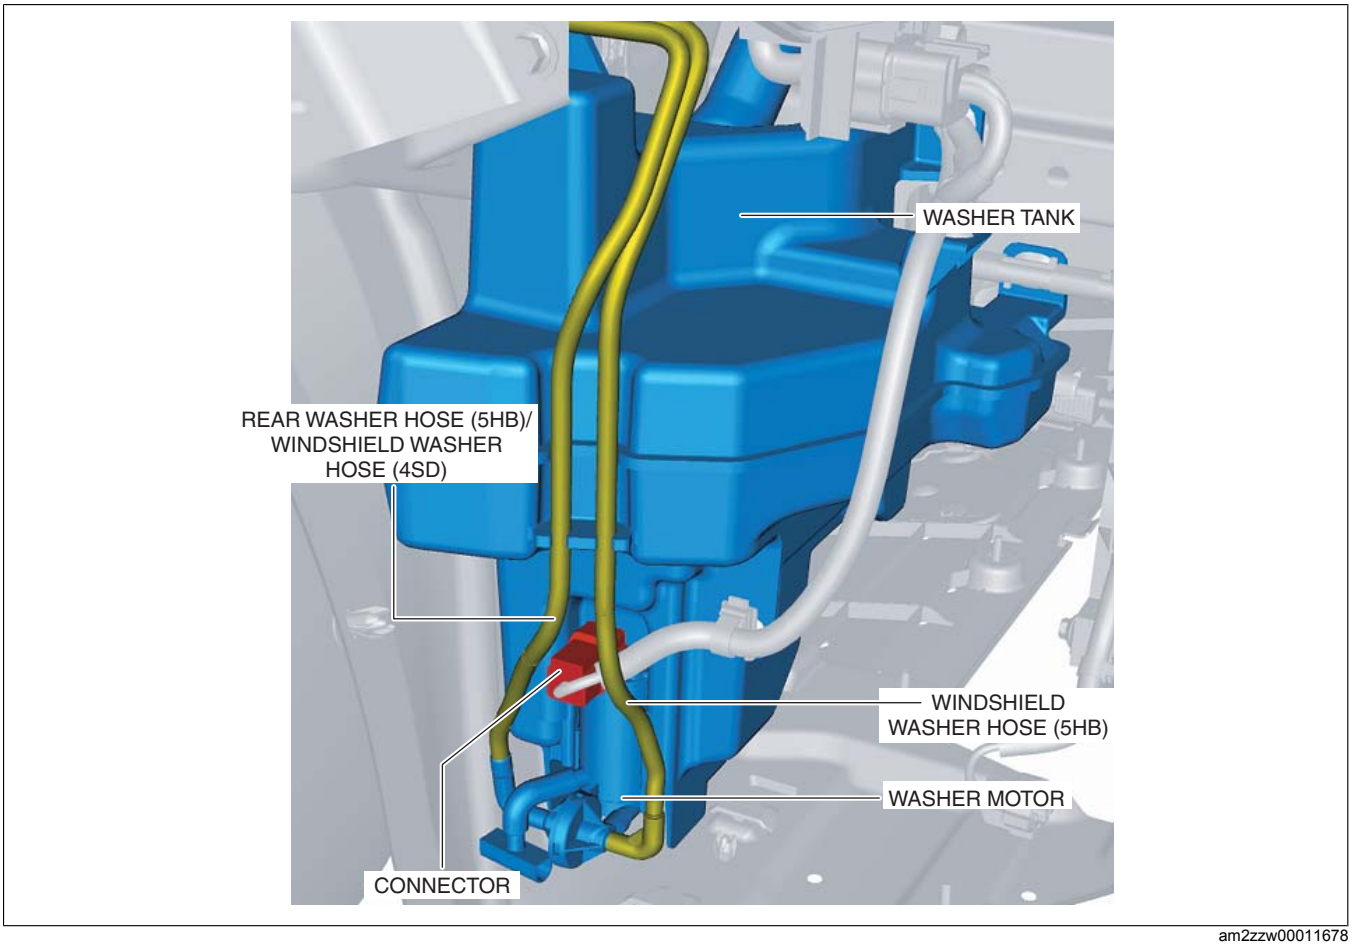

am2zzw00011678

4. Disconnect the washer hose from the washer motor.
5. Remove the washer motor.
6. Remove the grommet.
7. Install in the reverse order of removal.

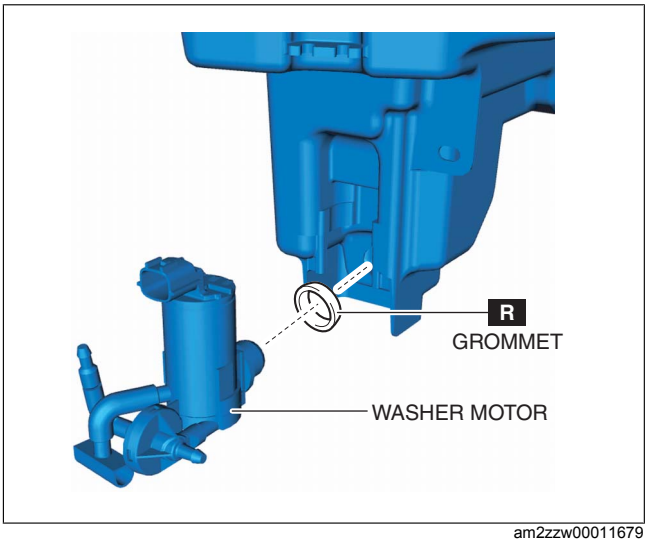

am2zzw00011679