
TUNER AND AMP UNIT (TAU) REMOVAL/INSTALLATION

id092000031200


L.H.D.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Front scuff plate (RH) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Front side trim (RH) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (3) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
   (4) Center panel (See CENTER PANEL REMOVAL/INSTALLATION.)
   (5) Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
   (6) Passenger-side lower panel (See PASSENGER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
   (7) Parking sensor control module (with parking sensor system) (See PARKING SENSOR CONTROL MODULE REMOVAL/INSTALLATION.)
   (8) Blower unit (See BLOWER UNIT REMOVAL/INSTALLATION.)
3. Disconnect the connectors.

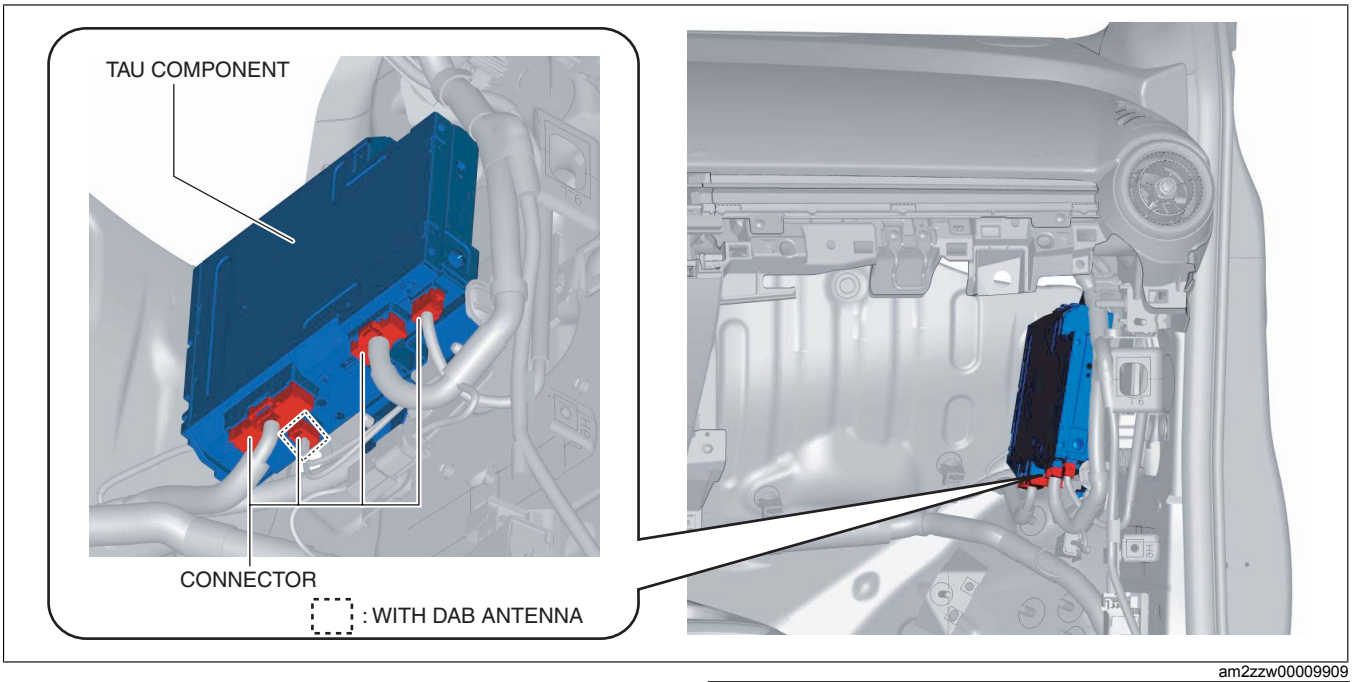


am2zzw00009909

4. Remove the nuts.
5. Remove the tuner and amp unit (TAU) component.

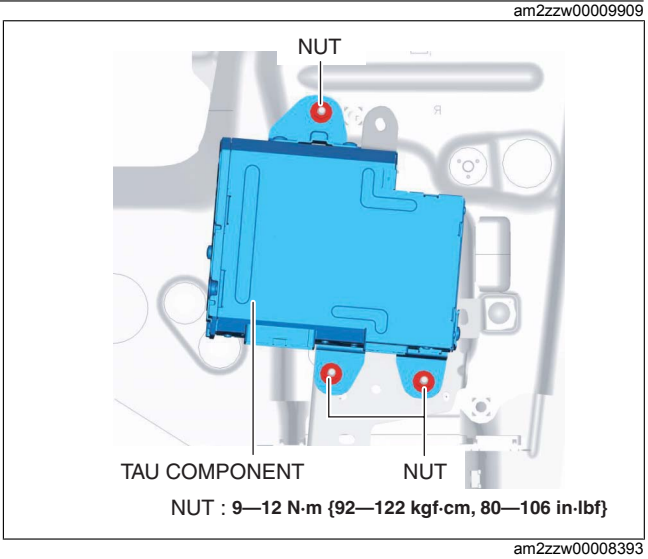

am2zzw00008393


6. Remove the screws.
7. Remove the brackets A and B.
8. Install in the reverse order of removal.

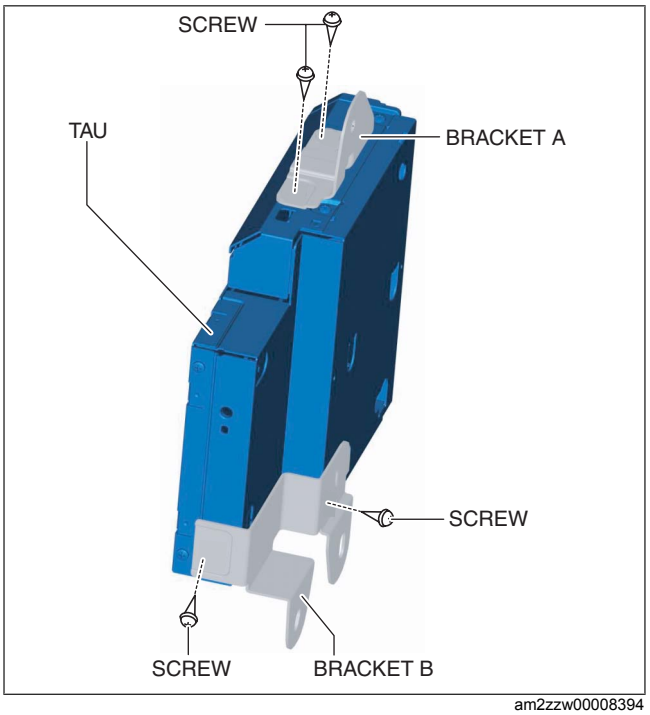

am2zzw00008394


R.H.D.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Disconnect the connectors.

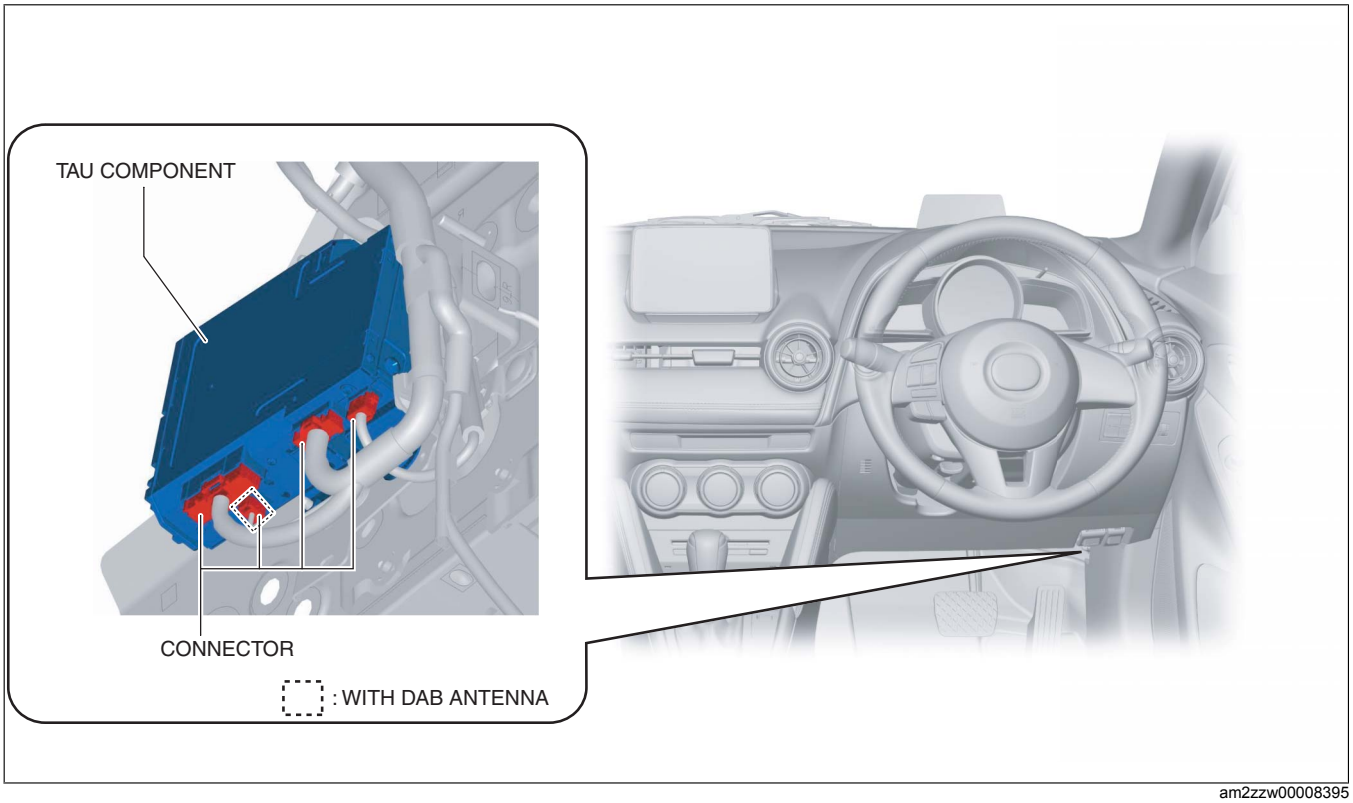


am2zzw00008395

3. Remove the nuts.
4. Remove the tuner and amp unit (TAU) component.

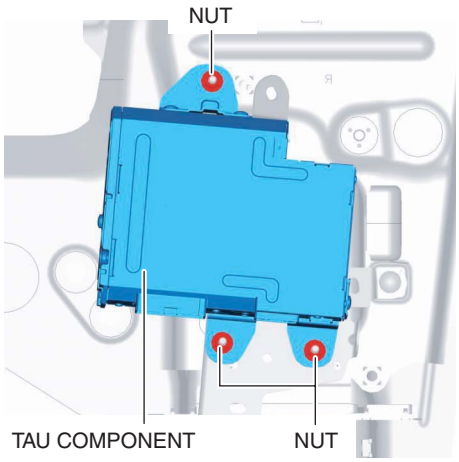

am2zzw00008393

5. Remove the screws.
6. Remove the brackets A and B.
7. Install in the reverse order of removal.

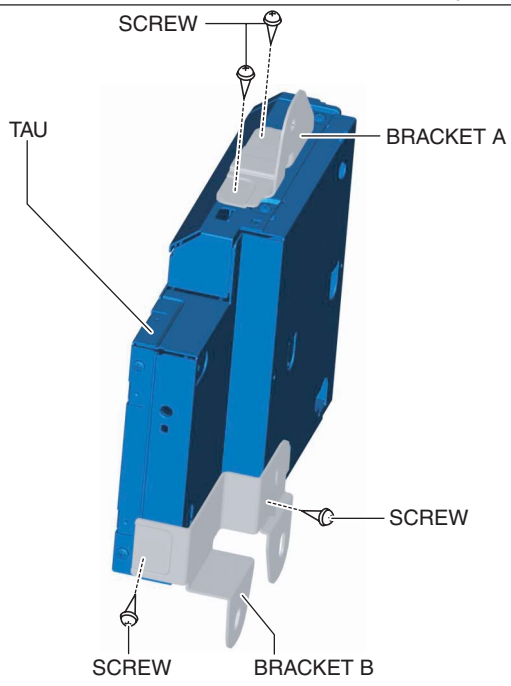

am2zzw00008394