
AUXILIARY JACK/USB PORT/SD CARD SLOT HUB REMOVAL/INSTALLATION

id092000031500

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Center console tray (See CENTER CONSOLE TRAY REMOVAL/INSTALLATION.)
   (2) Shift bezel (See SHIFT BEZEL REMOVAL/INSTALLATION.)
   (3) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
   (4) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F65M-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F66M-R].)
   (5) Selector lever knob (ATX) (See AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION.)
   (6) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
   (7) Console side panel (See CONSOLE SIDE PANEL REMOVAL/INSTALLATION.)
   (8) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
   (9) CD player (with CD player) (See CD PLAYER REMOVAL.) (See CD PLAYER INSTALLATION.)
   (10) DVD/CD player (with DVD/CD player) (See DVD/CD PLAYER REMOVAL.) (See DVD/CD PLAYER INSTALLATION.)
   (11) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
3. While pressing the tabs of the auxiliary jack/USB port/SD card slot hub in the direction of arrows (1) shown in the figure, move the auxiliary jack/USB port/SD card slot hub in the direction of arrow (2) and detach the tabs of the auxiliary jack/USB port/SD card slot hub from the front console.
4. Remove the auxiliary jack/USB port/SD card slot hub.
5. Install in the reverse order of removal.

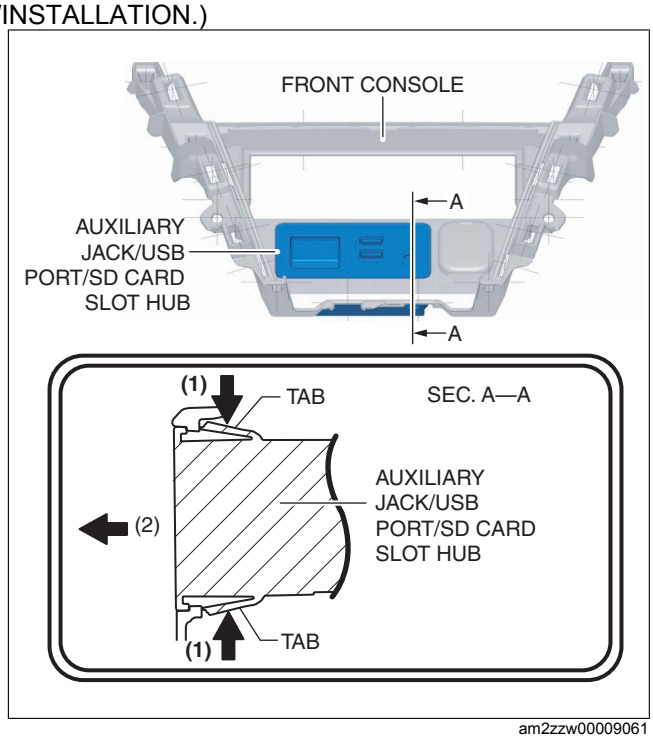

am2zzw00009061